



Powerwall 3P Installation Manual

with Backup Gateway 2

Notices

For the latest Powerwall 3P installation documents in all supported languages, visit:

www.tesla.com/support/powerwall

To secure the full 10-year product warranty, Powerwall 3P must be registered by completing the device setup process and sending system information to Tesla.

Product Specifications

All specifications and descriptions contained in this document are verified to be accurate at the time of printing. However, because continuous improvement is a goal at Tesla, we reserve the right to make product modifications at any time.

The images provided in this document are for demonstration purposes only. Depending on product version and market region, details may appear slightly different.

Errors or Omissions

To communicate any inaccuracies or omissions in this document, reach out to your Tesla Account Manager.

©2026 TESLA, INC. All rights reserved.

All information in this document is subject to copyright and other intellectual property rights of Tesla, Inc. and its licensors. This material may not be modified, reproduced or copied, in whole or in part, without the prior written permission of Tesla, Inc. and its licensors. Additional information is available upon request. The following are trademarks or registered trademarks of Tesla, Inc. in the United States and other countries:

		Tesla	Tesla Motors	Powerwall

All other trademarks contained in this document are the property of their respective owners and their use herein does not imply sponsorship or endorsement of their products or services. The unauthorized use of any trademark displayed in this document or on the product is strictly prohibited.



Electronic Device: Do Not Throw Away

Proper disposal of batteries is required. Refer to local codes for disposal requirements.

For Private Households: Information on Disposal for Users of WEEE

This symbol on the product(s) and / or accompanying documents means that Waste from Electrical and Electronic Equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Alternatively, in some countries, you may be able to return your products to your local retailer upon purchase of an equivalent new product.

Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

For Professional Users in the European Union

If you wish to discard electrical and electronic equipment (EEE), please contact your dealer or supplier for further information.

For Disposal in Countries Outside of the European Union

This symbol is only valid in the European Union (EU). If you wish to discard this product please contact your local authorities or dealer and ask for the correct method of disposal.

General Warnings and Information....3
Specifications....5
Powerwall 3P Specifications....5
Powerwall 3 Expansion Specifications....8
Backup Gateway 2 Specifications....10
Tesla 100A CT Specifications....10
Tesla Remote Meter Specifications....12
Registering Powerwall 3P....16
Powerwall 3P System Overview....17
Powerwall 3P Overview....20
Powerwall 3P System Design Guidance....22
Design Considerations....22
System Sizing....23
Loads Supported per Powerwall Quantity....23
Powerwall 3P DC System Sizing....24
AC-Coupled Solar System Sizing....25
Undersized Powerwall 3P Systems....27
Energy Metering....27
Site Requirements and Pre-Installation Guidance....32
Preparing for Installation....33
In the Powerwall 3P Box....33
In the Backup Gateway 2 Box....34
In the Backup Gateway 2 Accessory Bag....34
Powerwall 3P Tools, Service Parts, and Orderable Parts....35
Required Tools....37
Required Supplies....39
STEP 1: Plan the Installation Site....42
Choose a Location that Meets Powerwall 3P Clearance Requirements....42
Plan Powerwall 3P Mounting Configuration....44
Plan Cable Length Between Components....45
Choose Powerwall Cable Entry....46
Plan Amount and Size of Conduit or Raceway....48
STEP 2: Remove Powerwall 3P from Packaging and Transport Using the Powerwall Dolly....49
STEP 3: Wall-Mount Powerwall 3P Using Wall Bracket....56
STEP 4: Install Backup Gateway 2....60
Mount the Backup Gateway 2....60
Verify Neutral-Earth Bonding Scheme....62
Make AC Power Connections to Supply and Load Panels....62
Install Powerwall and Generation Breakers in the Backup Gateway....65
Inverter Configuration....66
STEP 5: Connect Powerwall 3P to Backup Gateway....67
STEP 6: Make Powerwall 3P AC Connections....75
Install Clamp-on Ferrite Cores....81
STEP 7: Make Solar PV Connections....82
Disconnect MC4 Connectors Using Provided Tool....86
STEP 8: Install Energy Metering....88
Install Tesla 100 A CTs....89
In the Tesla Remote Meter Box....90
About Tesla Remote Meter....90
Install the Tesla Remote Meter and CTs....94
STEP 9: Complete the Installation....102
Connect Powerwall 3P to the Internet via Wi-Fi or Ethernet....102
Close Backup Gateway 2 Wiring Compartment....103
STEP 10: Turn On and Commission the System....104
STEP 11: Install Powerwall 3P Front Cover....112
STEP 12: Introduce the Homeowner to their System....116
Technical Support....116
Maintenance....116
Appendix A: Powerwall 3P Anchoring Details....117
General Anchoring Notes....117
Anchoring Details for Ground- or Wall-mounting Powerwall 3P with Wall Bracket on Existing Approved Foundation....117
Powerwall 3P Center of Mass....120
Appendix B: Wiring Reference....122
Powerwall 3P AC and PV Wiring....122
Verifying Genuine Stäubli Original MC4, MC4-Evo 2, and MC4-Evo Ready Connectors....124

Optional: Install Y-Splitters to Parallel MPPTs..... 126
Tesla Asset Controller (TACO) Low Voltage and Communication Wiring..... 127
Prepare Ethernet Wiring with RJ45 Connectors.....129
Load Shedding Feature.....130
Backup Gateway 2 Wiring.....134
Backup Gateway 2 Communication Wiring..... 135
Appendix C: System Wiring Diagrams.....136
..... 137
Appendix D: Safety Features.....138
Powerwall 3P Switch Locking Mechanisms.....138
Arc Fault Detection and Protection.....139
Protective Earth Impedance Check.....139
System LED Behavior.....141
Powerwall LED Behavior.....141
Appendix E: Installing Multiple Powerwall 3P Units and/or Expansion Units..... 143
Electrical Equipment Sizing and Overcurrent Protection 144
Install Multiple Powerwall 3P Units..... 147
Install Expansion Units with Powerwall 3P..... 150
Install Stacked Expansion Units.....158
Optional: Rear Wire Entry for Stacked Configuration..... 176
Install Wall-Mounted Expansion Units..... 180
Appendix F: Shutting Down Powerwall 3P... 199
Appendix G: Troubleshooting..... 200
Situations in Which Powerwall 3P Stops Grid Forming.... 200
Appendix H: Regional Grid Code Settings....201
Appendix I: Revision History..... 205

GENERAL WARNINGS AND INFORMATION


ATTENTION: Read this entire document before installing or using Powerwall. Failure to do so or to follow any of the instructions or warnings in this document can result in electrical shock, serious injury, or death, or can damage Powerwall, potentially rendering it inoperable.

IMPORTANT SAFETY INSTRUCTIONS

This manual contains important instructions for Powerwall 3P and Backup Gateway 2 that must be followed during installation and maintenance of the system.

NOTE: On detection of abnormal condition for voltage or frequency conditions or in response to a detected unintentional island, the Tesla Powerwall system disconnects from the grid to prevent backfeed.

Symbols Used

	**CAUTION:** Indicates a hazardous situation which, if not avoided, could result in minor injury or damage to the equipment.		**RISK OF ELECTRIC SHOCK:** Indicates components that present risk of electrical shock.
	**WARNING:** Indicates a hazardous situation which, if not avoided, could result in injury or death.		**CAUTION, RISK OF ELECTRIC SHOCK, ENERGY STORAGE TIMED DISCHARGE.** Discharge time is 5 minutes from de-energization.
	**NOTE:** Indicates an important step or tip that leads to best results, but is not safety or damage related.		**BIDIRECTIONAL TERMINAL:** Indicates location of combined input/output connector on the equipment.
	**REFER TO OPERATING INSTRUCTIONS:** Indicates that user should refer to operating or installation instructions before proceeding.		**PROTECTIVE CONDUCTOR TERMINAL:** Indicates location of grounding connection on the equipment.

General Information

WARNING: Read this entire document before installing or using Powerwall. Failure to do so or to follow any of the instructions or warnings in this document can result in electrical shock, serious injury, or death, or may damage Powerwall, potentially rendering it inoperable.

WARNING: A battery can present a risk of electrical shock, fire, or explosion from vented gases. Observe proper precautions.

WARNING: Powerwall installation must be carried out only by a competent electrician who is certified by Tesla and who has been trained in dealing with low voltage electricity.

GENERAL WARNINGS AND INFORMATION

WARNING: Powerwall is heavy. Use of lift equipment is recommended.

WARNING: Use Powerwall only as directed.

WARNING: Do not use Powerwall if it is defective, appears cracked, broken, or otherwise damaged, or fails to operate.

WARNING: Before beginning the wiring portion of the installation, ensure that Powerwall is switched off, and lock out any associated circuit breakers and disconnect switches (if applicable for the installation).

WARNING: Do not attempt to open, disassemble, repair, tamper with, or modify Powerwall. Powerwall and its components are not user serviceable. Batteries in Powerwall are not replaceable. Contact Tesla Support for guidance on repairs.

WARNING: To protect Powerwall and its components from damage when transporting, handle with care. Do not impact, pull, drag, or step on Powerwall. Do not subject Powerwall to any strong force. To help prevent damage, leave Powerwall in its shipping packaging until it is ready to be installed.

WARNING: Do not insert foreign objects into any part of Powerwall.

WARNING: Do not expose Powerwall or its components to direct flame.

WARNING: Do not install Powerwall within 24 inches (610 mm) of heating vents or radiators. Powerwall can be installed in a mechanical room with HVAC equipment.

WARNING: If installing Powerwall indoors, a detection system for flammable gases should be installed at the site in accordance with local building and fire codes. Example: Smoke or heat detection devices.

WARNING: Ensure that concentrated water sources do not drain onto Powerwall or Backup Gateway, including downspouts, roofs without gutters, or drains.

WARNING: Do not immerse Powerwall or its components in water or other fluids.

CAUTION: Powerwall is not designed nor warrantied for non-stationary applications.

CAUTION: Do not use solvents to clean Powerwall, or expose Powerwall to flammable or harsh chemicals or vapors.

CAUTION: Do not use fluids, parts, or accessories other than those specified in this manual, including use of non-genuine Tesla parts or accessories, or parts or accessories not purchased directly from Tesla or a Tesla-certified party.

CAUTION: Do not place Powerwall in a storage condition for more than one (1) month, or permit the electrical feed on the Powerwall to be severed for more than one (1) month, without placing Powerwall into a storage condition in accordance with Tesla's storage specifications.

CAUTION: Do not paint, coat, or wrap any part of Powerwall, including any internal or external components such as the exterior shell or casing. These may cause Powerwall to overheat, resulting in damage to the product.

SPECIFICATIONS

Powerwall 3P Specifications

System Technical Specifications

Part Number	1988000-xx-y			
Nominal Grid Voltage (Input & Output)	230/400 VAC			
Grid Type	Three phase			
Frequency	50 Hz			
Maximum AC Output Power at 230/400 V and 25°C[1]	15 kW			
Maximum AC Output Power per Phase at 25°C	5 kW			
Nominal AC Output Power at 230/400 V (kW)	5	10	11.5	15
Maximum Apparent Power (VA)	5,000	10,000	11,500	15,000
Maximum Continuous Current (A)	7.25	14.49	16.67	21.74
Recommended Minimum Circuit Breaker Size (A)	32	32	32	32
Supported Grid Configurations	4-conductor Wye (L1, L2, L3, N)			
Protection Class	Class I			
Overvoltage Category	III			
Surge Withstand Voltage on AC Ports	4 kV			
Surge Withstand Voltage on Communication Ports	2 kV			
Radiated RF Immunity	35 V/m			
AC and DC Surge Protection	Integrated Type II SPD			
Solar to Battery to Home/ Grid Round Trip Efficiency[2,3]	90%			
Solar to Home/Grid Efficiency[4]	98.4%			
Supported Islanding Device	Backup Gateway 2			
Compatible Earthing Systems	TN or TT networks			
Connectivity	Wi-Fi (2.4 and 5 GHz), Dual-port switched Ethernet, Cellular (LTE/4G[5])			

Electrical Interface	Dry contact relay 60V 2A, Rapid Shutdown (RSD) Switch, RS485 connector for *Tesla Remote Meter on page 12*
Protections	AC Overcurrent Protection, DC Reverse Polarity Protection, Residual Current Interrupter, Isolation Monitor Interrupter (IMI), Integrated DC Isolator
Customer Interface	Tesla Mobile App
Warranty	10 years

NOTE: The model numbers in this manual call out "-XX-Y" for the suffix of the equipment model number. The wild cards are defined as follows:

- "X" is a number and the one number in the model number representing a style code; form, fit, and function are not changed, and these numbers have no bearing on compliance.
- "Y" is a letter, and the one letter in the model number representing a pedigree; form, fit, and function are not changed, and this letter has no bearing on compliance.

Solar Technical Specifications

Maximum Solar STC Input		20.4 kWp
PV DC Input Voltage Range		60 — 1000 VDC
PV DC MPPT Voltage Range		60 — 850 VDC
MPPTs		4
Maximum Current (I_{MP})	**per MPPT**	16 A
	(2) MPPTs in parallel	32 A
Maximum Short Circuit Current (I_{SC})	**per MPPT**	21 A
	(2) MPPTs in parallel	42 A

Battery Technical Specifications

Usable Battery Energy[2]		13.5 kWh AC
Maximum Continuous Charge Power	**Powerwall 3P only**	5 kW
	With Expansion units	8 kW
Output Power Factor Rating		-1 to 1 (Grid Code configurable)
Maximum Output Fault Current per Phase (1 s)		54 A
Maximum Short-Circuit Current Rating		10 kA
Peak AC Output Power for Three Phase Loads (1 s)		21 kW
Peak AC Output Power for Single Phase Loads (1 s)		7.4 kW
Power Scalability[6]		Up to 60 kW
Energy Scalability[6]		Up to 94.5 kWh

[1]15 kW AC output is available at ambient temperatures ≤ 25°C, with sufficient solar generation. Up to 11.5 kW AC output is available when solar is not available, or when operating at higher temperatures.

[2]Values provided for 25°C, at beginning of life. 5 kW charge/discharge power.

[3]Typical use case with energy produced by PV and stored in battery and then released to loads or the grid.

[4]Tested using EU weighted efficiency methodology.

[5]Cellular connectivity subject to network service coverage and signal strength.

[6]These values reflect a maximum system size of four Powerwall 3P units and three Expansion units.

Mechanical Specifications

Dimensions	1105 x 609 x 193 mm
Weight	138 kg
Mounting Options	Floor or wall mount

Environmental Specifications

Operating Temperature	–20°C to 50°C[7]
Operating Humidity (RH)	Up to 100%, condensing
Storage Temperature	–20°C to 30°C, up to 95% RH, non-condensing, State of Energy (SOE): 25% initial
Maximum Elevation	3000 m
Environment	Indoor and outdoor rated
Ingress Rating	IP67 (Battery & Power Electronics)
	IP55 (Wiring Compartment)
Pollution Rating	PD3
Operating Noise @ 1 m	< 50 dB(A) typical, <62 dB(A) maximum

[7] Performance may be de-rated at operating temperatures above 40°C. 15 kW AC output available at ambient temperatures ≤ 25°C.

Compliance Information

Safety

IEC 62477-1: 2022 - Safety requirements for power electronic converter systems and equipment - Part 1: General

IEC 62109-1:2010 - Safety of power converters for use in photovoltaic power systems - Part 1: General requirements

IEC 62109-2: 2011 - Safety of power converters for use in photovoltaic power systems - Part 2: Particular requirements for inverters

IEC 62933-5-2: 2020 - Electrical energy storage (EES) systems - Part 5-2: Safety requirements for grid-integrated EES systems - Electrochemical-based systems

IEC 62619: 2022 - Secondary cells and batteries containing alkaline or other non-acid electrolytes - Safety requirements for secondary lithium cells and batteries, for use in industrial applications

UL 1973: Batteries for Use in Stationary and Motive Auxiliary Power Applications

Grid Interoperability

AS 4777.2 Grid Connection of Energy Systems via inverter Part 2 Inverter Requirements

EMC

IEC 61000-6-1:2016 - Electromagnetic compatibility (EMC) - Part 6-1: Generic standards - Immunity standard for residential, commercial and light-industrial environments

EN IEC 61000-6-3: 2020 - Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for equipment in residential environments

Powerwall 3 Expansion Specifications

Battery Technical Specifications

Model Number	1807000-xx-y
Usable Battery Energy	13.5 kWh
Voltage Range[1]	52 - 92 V DC

[1]Expansion units are connected in parallel and are not field serviceable.

Powerwall 3P Model Numbers When Installed with Expansion(s)

Model Number	Powerwall 3P Configured Power Output	Number of Expansion Units
1988000-15kVA-13.5	15 kW	None
1988000-11.5kVA-13.5	11.5 kW	
1988000-10kVA-13.5	10 kW	
1988000-5kVA-13.5	5 kW	
1988000-15kVA-27	15 kW	1
1988000-11.5kVA-27	11.5 kW	
1988000-10kVA-27	10 kW	
1988000-5kVA-27	5 kW	
1988000-15kVA-40.5	15 kW	2
1988000-11.5kVA-40.5	11.5 kW	
1988000-10kVA-40.5	10 kW	
1988000-5kVA-40.5	5 kW	
1988000-15kVA-54	15 kW	3
1988000-11.5kVA-54	11.5 kW	
1988000-10kVA-54	10 kW	
1988000-5kVA-54	5 kW	

Environmental Specifications

Operating Temperature[2]	–20°C to 50°C
Operating Humidity (RH)	Up to 100%, condensing

Storage Temperature	–20°C to 30°C, up to 95% RH, non-condensing, State of Energy (SOE): 25% initial
Maximum Elevation	3000 m
Environment	Indoor and outdoor rated
Ingress Rating	IP67
Pollution Rating	PD3

[2]Performance may be de-rated at operating temperatures above 40°C.

Compliance Information

Certifications	IEC 62619, IEC 62933-5-2, IEC 61000-6-1:2016, EN IEC 61000-6-3: 2020, and ANSI/CAN/UL 1973

Mechanical Specifications

Dimensions [3]	1105 x 609 x 168 mm		
Total Weight of Wall-Mounted Unit (includes cover and bracket)	118.5 kg (wall-mounted unit with glass front cover and bracket)		
Weight of Powerwall 3 Expansion (no cover or bracket)	110 kg (without glass front cover and bracket)		
Mounting Options	Floor or wall mount		
Stacking Capability	Up to (3) Expansion units behind a Powerwall 3P (floor mount only)		
Compatibility	Powerwall 3, Powerwall 3P		
Connection to Powerwall 3P or Expansions	Expansion Harness		
Expansion Harness Options	0.5 m	2 m	4 m
Weight of Glass Front Cover	6.5 kg		
Weight of Wall Bracket	1.9 kg		
Weight of Expansion Unit Accessories	0.7 kg		

NOTE: See *Powerwall 3P Center of Mass on page 120* for weights of stacked configurations.

[3]These dimensions include the glass front cover being installed on the Expansion unit.

Backup Gateway 2 Specifications

Backup Gateway 2 Electrical Specifications

AC Voltage (Nominal)	230 V (Line-to-Neutral)
	400 V (Line-to-Line)
Feed-In Type	Single Phase, Three Phase
Grid Frequency	50 Hz
Maximum Overcurrent Protection Device	100 A (single-phase service)
	80 A (2- and 3-phase service)
Maximum Input Short Circuit Current	10 kA
Overvoltage Category	Category III
AC Meter	Revenue accurate (+/– 0.2 %)[1]
Safety	IEC 61439-1, IEC 61439-3
[1]Revenue accurate when using Gateway internal site meter.	

NOTE: Refer to circuit breaker datasheet for rated peak withstand current (Ipk) and associated duration.

Environmental Specifications

Operating Temperature[2]	–20°C to 50°C
Operating Humidity (RH)	Up to 100%, condensing
Maximum Altitude	3000 m
Ingress Rating	IP55
Environmental Category	Indoor and outdoor rated
Wet Location Rating	Yes
Pollution Degree	PD2
[2] Performance may be de-rated in extreme ambient temperatures	

Mechanical Specifications


Height	584 mm
Width	380 mm
Depth	127 mm
Weight	11.4 kg

Tesla 100A CT Specifications


NOTE: The Tesla 100A CT is compatible with Backup Gateway 2.

Model Number	1467316-00-x
Capacity	100 A
Operating Frequency	50 - 60 Hz
Cable Ratings	600 V, 125°C
Cable Size	0.5 mm^2
Cable Type	Twisted leads
Lead Length	800 mm
Optional Extension (Tesla P/N 1467274-00-x)	3 m **NOTE:** CT leads can be extended a max distance of 100 m by splicing twisted pair or using the Extension. Voltage rating of the extension wire must be equal to or greater than all other adjacent circuits. Use minimum 600V 0.5 mm^2 conductors.
CT Splitting	N/A (cannot be split / paralleled) One 100 A CT per terminal
Operating Temperature Range	-20°C to 50°C
Max Operating Humidity (with condensation)	RH 95%

Figure 1. Tesla 100A CT Dimensions

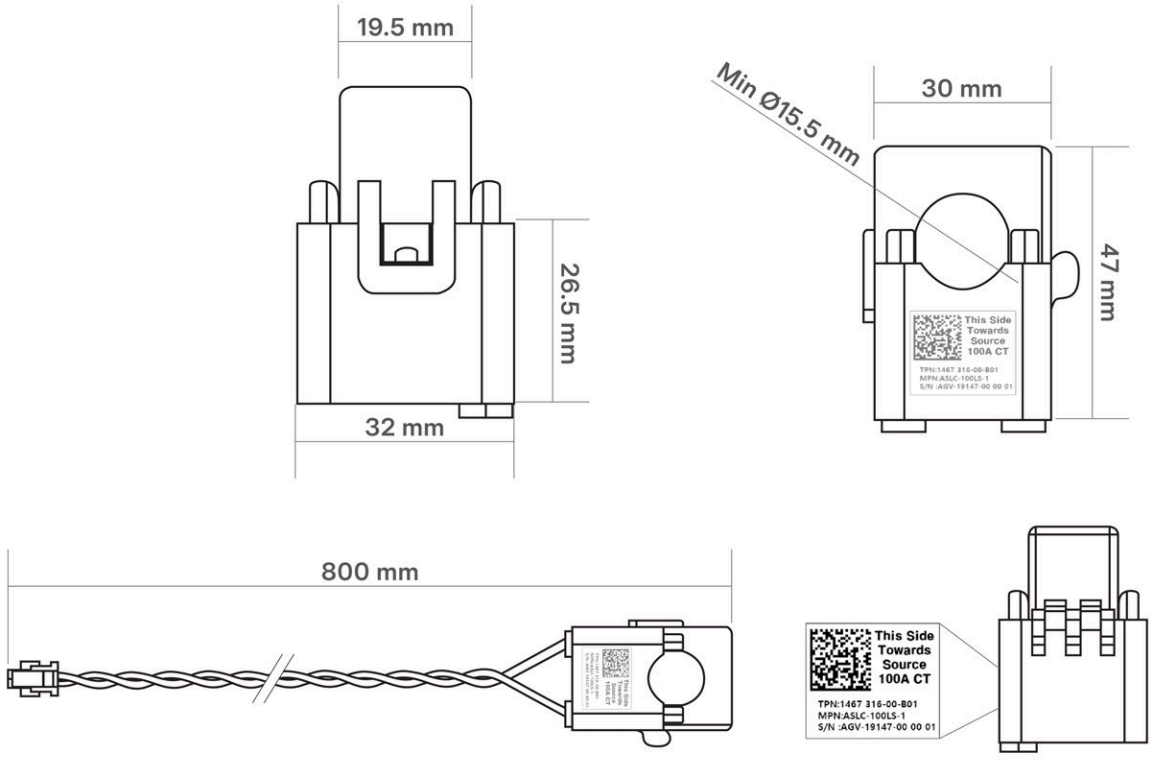

Tesla Remote Meter Specifications

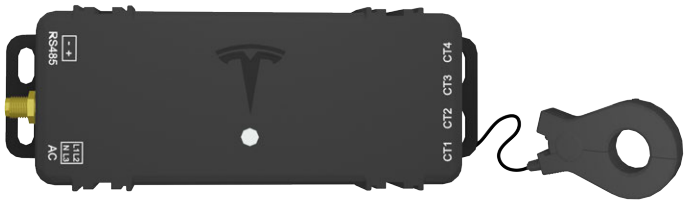

Tesla Remote Meter Specifications

Model Number	2002069-xx-y (included in Tesla Remote Meter Kit with (1) 200 A CT, Tesla P/N 2083765-xx-y)
Accuracy	0.5%
Nominal AC Voltage	230 VAC [1]
AC Frequency	50 - 60 Hz
Maximum Power Consumption	3 W
Compatible CTs	Tesla 200 A CTs (see *Tesla 200 A CT Specifications on page 14*)
	Tesla 800 A CTs (see *Tesla 800 A CT Specifications on page 15*)
Connection Method	Wireless: Wi-Fi [2, 4]
	Wired: RS-485 (RS485) harness (1.2 m) [3, 4]
Overcurrent Protection Device (OCPD)	Maximum 16 A
Dimensions	145 x 52 x 31 mm
Ambient Operating Temperature	–30°C to 70°C
Conforms to	UL 61010-1, CSA C22.2 No. 61010-1, IEC/EN 61010-1, ANSI C12.1, IEC 62052-11, IEC 62053-21
Supported Applications	Site, Solar, Generator, Conductor
Compatible Grid Types	1ф L1-N, 3ф L1-L2-L3-N Wye [5]

[1] Voltage harness (600 mm) is included in the Tesla Remote Meter kit. If additional length is required, the voltage harness can be extended using 1.5 - 6 mm^2 AC wiring. To maintain accuracy, keep the meter within 61 m of its breaker when using 2.5 mm^2 wire.

[2] An external Wi-Fi antenna and antenna extension cable are included in the Tesla Remote Meter kit. When using Wi-Fi as the connection method, remote meters placed inside of load centers can be subject to signal interference, especially when a panel cover is installed. For best performance, where possible, use the included external antenna and the antenna extension cable to extend the external antenna.

[3] If the RS-485 harness length is not sufficient, 0.2 - 1.5 mm^2 communication wiring can be used to extend the length up to a maximum of 100 m.

[4] A Powerwall 3P site can have a maximum of three Tesla Remote Meters: one connected via RS-485 and up to two connected via Wi-Fi.

[5] Connection to L1 and Neutral is always required.

NOTE: Tesla Remote Meter accessories are only compatible with Tesla Remote Meter. Do not attempt to use Neurio meter accessories, or any other meter accessories, with Tesla Remote Meter.


Tesla 200 A CT Specifications

Model Number	2033376-00-x
Capacity	200 A
Insulation Rating	600 V
Lead Length	1.5 m [6]
Optional Extension	3.5 m (Tesla P/N 2060713-xx-y) [7]
Optional Y-Splitter	Not available
Dimensions (L, W, H)	86 x 55 x 18 mm
Window Size	24 mm
Operating Temperature	–30°C to 85°C

[6] If the CT lead length is not sufficient, do not splice the CT leads. Up to (2) CT extensions can be used to extend the length to a maximum of 8.5 m (1.5 m CT lead + 3.5 m extension + 3.5 m extension).

[7] Extension is not included in the Tesla Remote Meter kit; it can be ordered individually.

Figure 2. Tesla 200A CT Dimensions

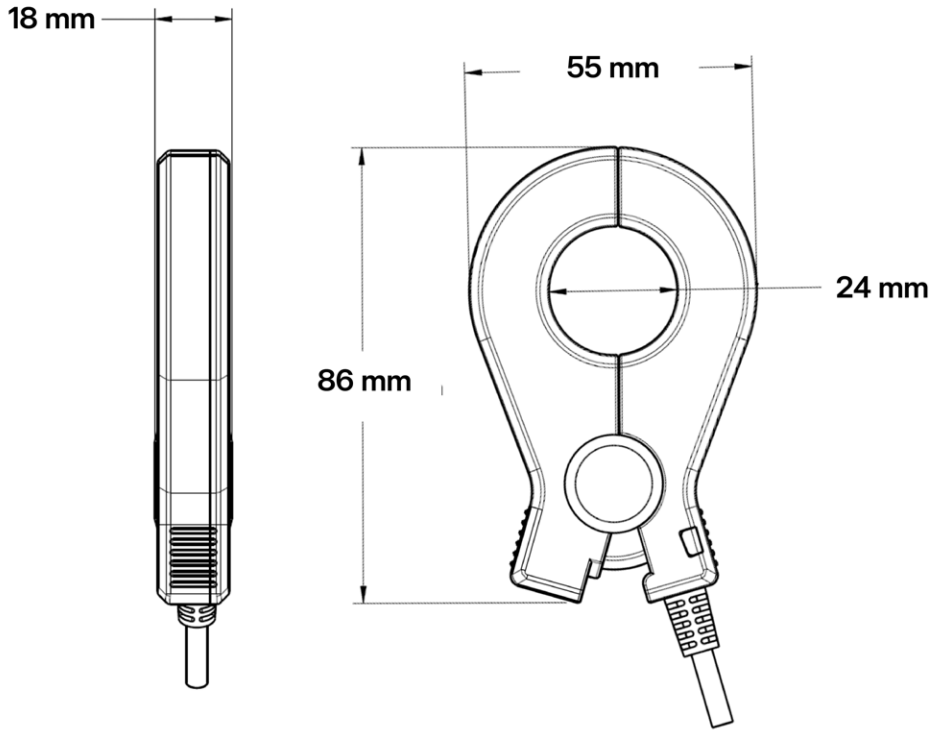


Tesla 800 A CT Specifications

Model Number	2302437-xx-y
Capacity	800 A
Current Range	0 - 1000 A
Insulation Rating	600 V
Lead Length	1.5 m
Optional Extension	3.5 m (Tesla P/N 2060713-xx-y) **NOTE:** CT leads cannot be spliced. Use only up to (2) CT extensions for a maximum lead length of 8.5 m (1.5 m lead + 3.5 m extension + 3.5 m extension).
Optional Y-Splitter	Not available
Dimensions (L, W, H)	126 x 124 x 44 mm
Window Size	50 x 60 mm
Operating Temperature	–40°C to 85°C

NOTE: Only the Tesla Remote Meter accessories are compatible with Tesla Remote Meter. Do not attempt to use Neurio meter accessories, or any other meter accessories, with Tesla Remote Meter.

Figure 3. Tesla 800A CT Dimensions

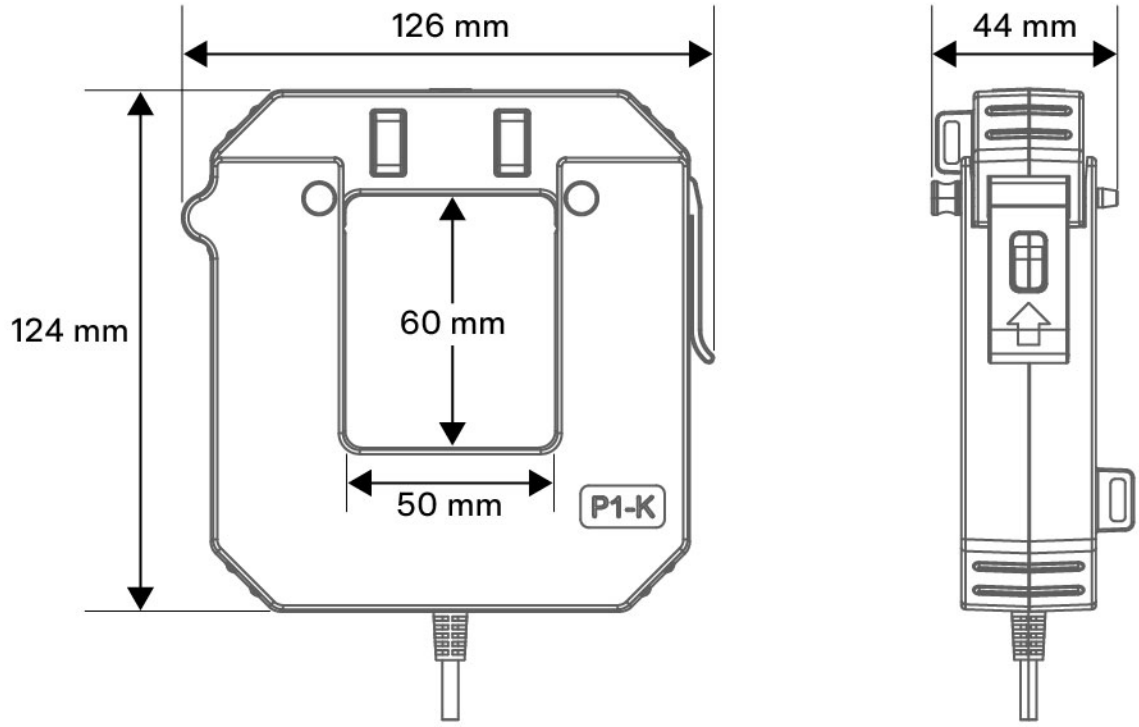

REGISTERING POWERWALL 3P

Tesla Powerwall 3P comes with a warranty whose term depends on the connection of Powerwall 3P to the internet. To secure the full 10-year warranty for Powerwall 3P, it must be reliably connected to the internet to allow remote firmware upgrades from Tesla. If an internet connection is not established or is interrupted for an extended period, and Tesla is unable to contact the owner, the warranty may be limited to 4 years. To ensure that the owner can receive the full 10-year warranty, be sure to complete the device setup process so that registration information is sent to Tesla.


For more information, refer to the Powerwall 3P Warranty for your region at *www.tesla.com*.

POWERWALL 3P SYSTEM OVERVIEW

Powerwall 3P is a fully integrated solar and battery system that stores energy from solar production. It converts energy from solar panels, and its rechargeable battery pack provides energy storage for solar self-consumption, load shifting, or off-grid use.

Powerwall 3P is installed with Backup Gateway 2 to control the system's connection to the grid and monitor home's energy consumption.

Figure 4. Example System Diagram

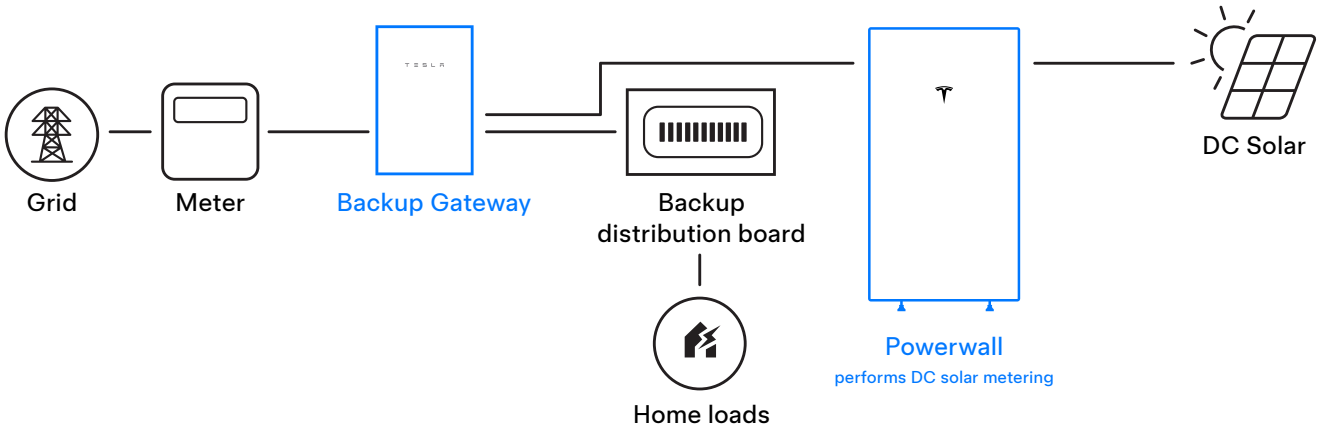

The following table outlines the key Tesla components in a standard Powerwall 3P system.


Tesla Components

Component	Description	Tesla Part Numbers
Powerwall 3P 	Powerwall 3P is an integrated solar and battery system that converts energy from solar panels to be used by the home, and stores excess energy for future use. Every system contains at least one Powerwall 3P, with additional Powerwall 3P units and/or Expansion units installed depending on the home's solar system size and/or energy consumption.	1988000-xx-y
Powerwall 3P Expansion 	Powerwall 3P Expansion is a battery that provides additional storage for a Powerwall 3P system. Because the Expansion unit does not include an inverter, it cannot be installed without Powerwall 3P. Solar cannot be connected to an Expansion unit. Expansion unit can be installed behind Powerwall 3P (stacked) or next to the Powerwall 3P (wall mounted). **NOTE:** Powerwall 3P Expansion is compatible with both Powerwall 3 and Powerwall 3P.	1807000-xx-y

Component	Description	Tesla Part Numbers
Backup Gateway 2 	Backup Gateway 2 monitors energy usage and manages the transition to and from backup operation.	1152100-xx-y
Tesla Remote Meter 	Tesla Remote Meter is an optional component, required only if Backup Gateway 2 itself is not sufficient to monitor the home's energy consumption and/or the AC-coupled solar. Tesla Remote Meter comes in a kit (Tesla P/N 2083765-xx-y).	2002069-xx-y

Powerwall 3P Overview

Figure 5. Expanded View of Powerwall 3P

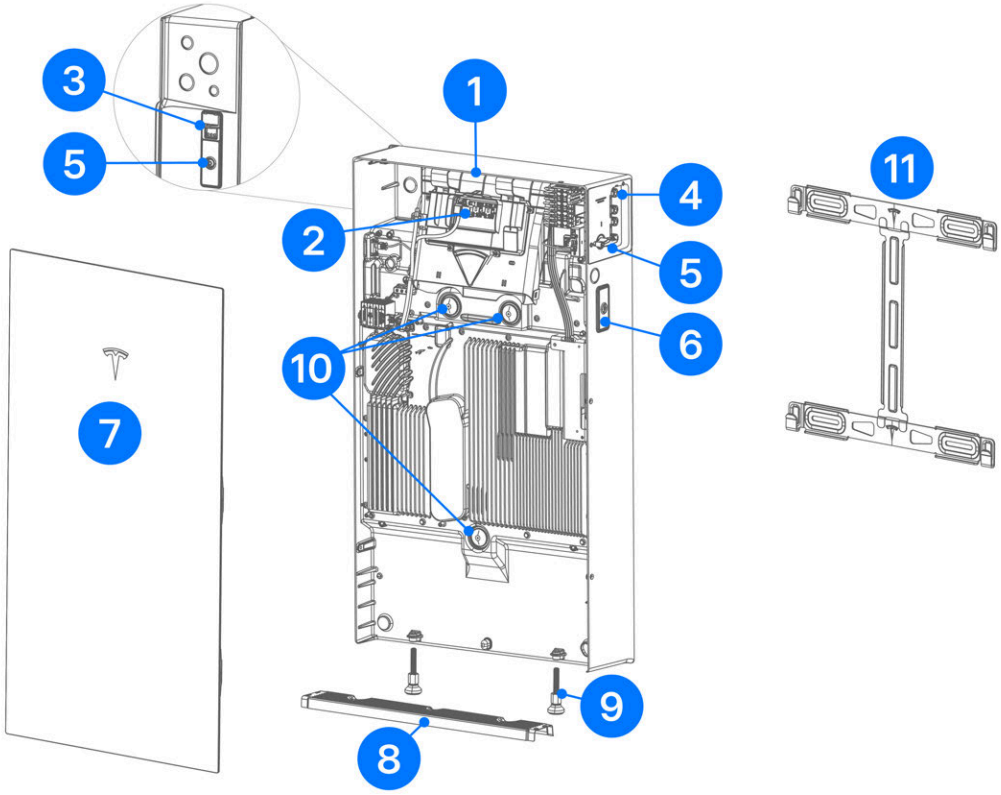

1	Powerwall 3P
2	Tesla Asset Controller (TACO)
3	On / Off switch
4	Integrated Stäubli MC4-Evo 2 connectors for PV connections **NOTE:** Stäubli Original MC4, MC4-Evo 2, and MC4-Evo ready connectors are compatible with the integrated connectors on Powerwall 3P.
5	Integrated DC Isolator
6	Expansion port cover
7	Front cover
8	Air intake screen
9	Leveling feet
10	Safety valves **WARNING:** Ensure the safety valves are not removed or damaged in any way during installation.
11	Wall mounting bracket

NOTE: Do not remove the Expansion port covers unless plugging in an Expansion Harness. These are protective covers and Powerwall 3P will not operate when they are removed.

NOTE: The Powerwall 3P part number and serial number can be found on the left side of the unit.



POWERWALL 3P SYSTEM DESIGN GUIDANCE

Design Considerations

Supported Powerwall Configurations

- Up to (4) Powerwall 3P units can be installed with (1) Backup Gateway 2, with optional AC-coupled solar (see *Appendix E: Installing Multiple Powerwall 3P Units and/or Expansion Units on page 143*)
- Up to (3) Expansion units can be connected to the **Leader Powerwall 3P**

  NOTE: Do not connect Expansion units to a **Follower Powerwall 3P** unit.

- Only Tesla devices are compatible with Powerwall 3P; no third-party equipment in lieu of Backup Gateway 2 or Tesla Remote Meter
- Powerwall 3P is not compatible with the following:
  - Other batteries (Powerwall 2, Powerwall 3 or third party batteries)
  - Neurio remote energy meters (see *Energy Metering on page 27* for more information)
  - Stacked units (Powerwall 3P must be mounted in a side-by-side configuration)
  - Third party MLPE solutions, such as optimizers, installed on the DC-coupled solar system. These devices may lead to erratic system behavior such as nuisance tripping on the Powerwall 3P when installed on the DC-coupled solar system. However, they can be installed on the AC-coupled solar system.

System Tie-in

- Backup systems must be one of the following:
  - 230 / 400 V three phase service
    - 80 A or smaller service
    - Follow all local requirements for balancing the system equally across the available phases
    - Powerwall 3P only supports clockwise (right) phase sequence rotation (L1 → L2 → L3)

- A breaker is always required for Powerwall tie in. This breaker serves as an overcurrent protection device for Powerwall and must be wired in accordance with local wiring codes and regulations. See *Powerwall 3P Specifications on page 5* section for breaker size.

  NOTE: In line with relevant standards, Powerwall must be wired to support the maximum continuous current of the system.

- Powerwall 3P must always be connected to the Home terminals downstream of the Backup Gateway 2
- Any/all loads on the backup circuit are adequately protected with an overcurrent protection device
- All loads in the backup circuit must be sized appropriately for the configured power output of the Powerwall (see *Powerwall 3P Specifications on page 5* for power output options)
- Site and solar monitoring must be installed to capture overall power flow to/from the site, as well as all solar production (see *Energy Metering on page 27*)

System Sizing

The following resources explain how to size the Powerwall system to meet customer expectations, as well as how to determine which loads can be included in the backup circuit and what to do with loads that cannot be included.

Loads Supported per Powerwall Quantity

- The largest load/breaker size the Powerwall can support is determined by the configured power output (see *Powerwall 3P Specifications on page 5*); for instance, if Powerwall 3P is installed with a 10A breaker and configured for 5 kW power output, ensure the largest load is less than or equal to 10A.
- See *Appendix E: Installing Multiple Powerwall 3P Units and/or Expansion Units on page 143* for requirements for installing multiple Powerwall units.

Powerwall 3P DC System Sizing

- Powerwall 3P can be configured as up to a 15 kW / 21.74 A AC rated inverter that can support up to a maximum DC system size of 20.4 kW.
  - 20.4 kW DC is the absolute maximum solar system size that Powerwall 3P can support.
  - Powerwall 3P has a boosting feature that can send 5 kW of DC power continuously from solar to the battery at the same time that up to 15 kW / 21.74 A of solar is inverted to AC power, leading to a potential total DC power of 20.4 kW. This helps alleviate clipping concerns and enables sizing the DC system larger, but only if the battery is being used in a way that it will have available charge power during the peak solar production hours of the day.
  - If Powerwall 3P is power / current limited, a larger DC solar system size may experience curtailment. Size the DC solar system appropriately based on the configured power / current output.
  - Where clipping may occur, the amount of clipping depends on the specific scenario.
- Each Powerwall 3P has 4 MPPTs available for Solar.

> **NOTE:** If there are more than four PV strings, strings can be combined upstream of Powerwall 3P so long as the voltage and current ratings of the system do not exceed the capabilities of Powerwall 3P.

- When calculating the minimum and maximum number of modules per string, use the *Tesla Solar Stringing Tool* available on Partner Portal. For instructions on how to use the tool, see the *User Guide*.
- Total DC circuit distance, from + MPPT terminal to - MPPT terminal (including module wire leads, jumper wires and all wiring within the array boundary for any individual string), shall not exceed 160 m for single strings or paralleled strings
  - Total DC circuit distance refers to the entire round trip wire distance, from inverter to the roof, then back to the inverter
  - Ensure paralleled strings are the same distance, or as close to the same distance as possible
- Powerwall 3P is a string inverter. Individual strings should not be extended over mounting planes with different pitches and/or azimuths to provide peak performance of the system. Series strings must have modules on the same pitch & azimuth, and strings of equal distance can be combined in parallel.
  - Note that a situation where all are simultaneously producing at peak may result in solar clipping. Tesla recommends, but does not require, diversifying azimuths when the array is significantly oversized. The 4 MPPTs are particularly suited for sites where the strings may not be on the same azimuth and are therefore not producing at peak simultaneously.
- If installing multiple Powerwall 3P units, it is recommended but not required to distribute the DC PV system across all Powerwall 3P units so that each Powerwall 3P receives the benefits of DC coupling solar

Available Third-Party Solar Design Tools

Powerwall 3 has been added to the following solar design tool databases:

- Open Solar
- Pylon

AC-Coupled Solar System Sizing

DC-coupled solar (connected directly to Powerwall 3P) is strongly preferred over AC-coupled solar for the following reasons:

- Less equipment required for DC-coupled solar, resulting in reduced system cost
- Increased efficiency for DC-coupled solar
- Low energy management during a grid outage

NOTE: The third party inverter must have the feed-in active power limit set to the same limit as the overall system's feed-in active power limit requirement.

In some scenarios, it is difficult or not feasible to avoid systems with AC-coupled solar. Most commonly, this occurs when Powerwall 3P is installed on a system with existing AC-coupled solar. As shown below, AC-coupled solar can be installed alongside Powerwall 3P with DC-coupled solar, or without DC-coupled solar configuring Powerwall 3P to function as storage only.

NOTE: Powerwall 3P can also be installed without any solar on the site.

Figure 6. Powerwall 3P with AC and DC Coupled Solar


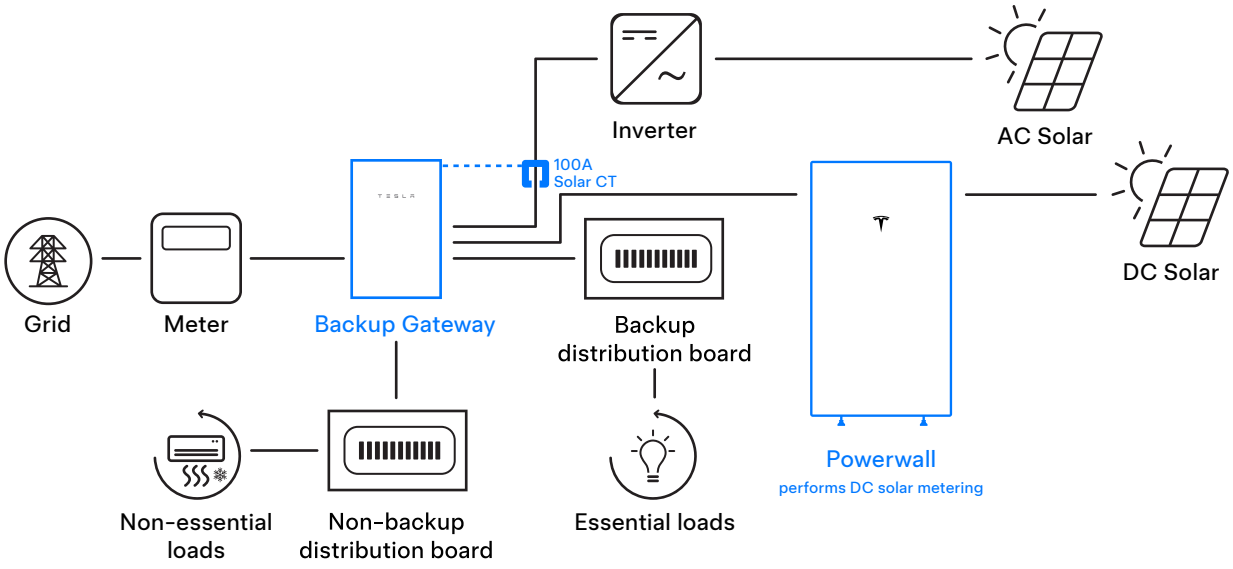


Figure 7. Powerwall 3P with AC Coupled Solar (Storage Only)

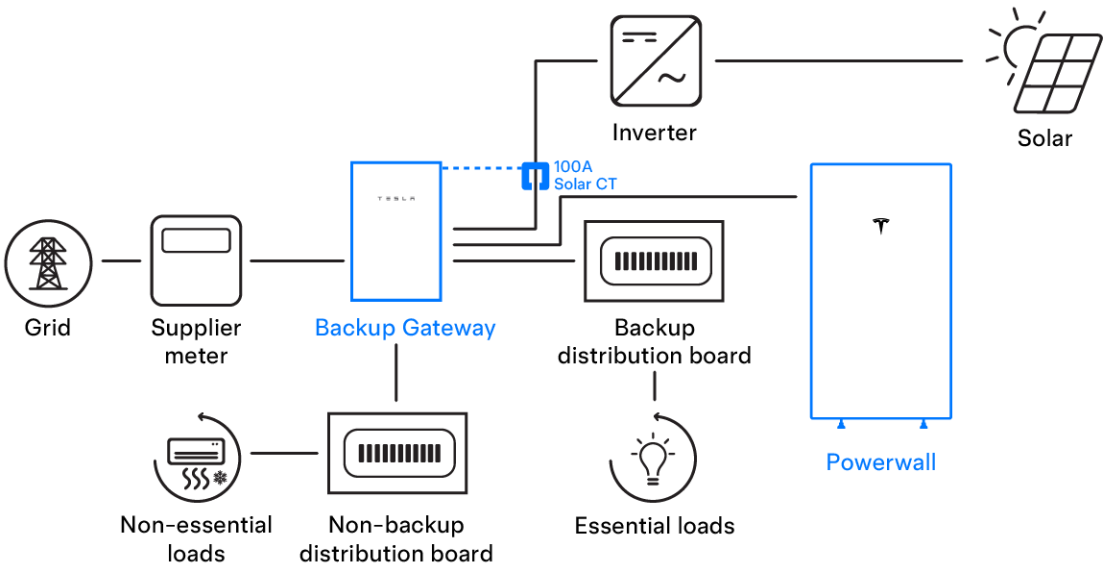

PV to Powerwall Ratio

For systems with AC-coupled solar only, a maximum of 7.68 kW AC per Powerwall is allowed in the backup circuit (the smaller of AC inverter rating or DC system size)[1].

NOTE: When Powerwall 3P is installed with Expansion unit(s), a maximum of 10 kW AC is allowed in the backup circuit. This means that a system with (1) Powerwall 3P and up to (3) Expansion units can have up to 10 kW AC-coupled solar in the backup circuit.

[1]The 7.68 kW PV to Powerwall ratio was put in place to protect the Powerwall system from excessive PV power during a grid outage. 7.68 kW is used because it is a common solar inverter size, allowing more PV systems to be fully backed up without needing to be split apart, and inverters don't always produce their maximum power. This ratio does not prevent all issues; Powerwall's maximum charge rate is 5 kW under ideal conditions (notably operating temperature). If there is more than 5 kW of excess PV per Powerwall, the system will frequency shift to try to reduce PV power, and may have to shut PV production down completely.

NOTE: The AC-coupled PV to Powerwall ratio and the maximum DC solar system sizing are independent of each other. See *Powerwall 3P DC System Sizing on page 24* for information about sizing the Powerwall 3P system.

CAUTION: Exceeding the PV to Powerwall ratio may result in high fault current during a grid outage, which creates a serious risk of damage to Powerwall and/or the customer's home loads. If a Powerwall is damaged by high fault current due to excess PV during an outage, it will be out of warranty.

Options to avoid exceeding the ratio:

1. Increase number of Powerwalls in the backup circuit
2. Add Powerwall 3 Expansion(s) in the backup circuit
3. Utilize Powerwall 3P for all PV on site to avoid PV to Powerwall ratio
4. Split PV Inverter Point of Interconnection, In / Out of backup (confirm with local electrical regulator that this practice is accepted)
5. Downsize PV to meet ratio
6. Shed part of the PV system using grid dependent relays/contactors

NOTE: The 5 kW PV to Powerwall ratio can be applied to any Powerwall unit in the system, including Powerwall 3P. For example, a 5 kW third party solar inverter can be backed up with a single Powerwall 3P, as the ratio rule does not apply to the solar inverter portion of the Powerwall 3P.

Undersized Powerwall 3P Systems

If a customer acknowledges that they are willing to install a large load on the backup circuit that violates Tesla's guidance on what can be included on the backup circuit, design can proceed as long as the customer provides acknowledgment that they accept an undersized system.

NOTE: Undersized systems cannot be designed if the electrical regulator does not allow oversized loads on the backup circuit.

Energy Metering

Power measurements are needed for Powerwall 3P system to operate properly, and for system data to appear in the customer's Tesla app. An energy meter accomplishes this by measuring voltage (by voltage tap) and current (by Current Transformer, or CT) at key locations in the system.



CTs are installed around conductors to monitor the current flowing through them. The CTs are connected to a meter which sends the measurements to Powerwall 3P. Using this current measurement, the system calculates power measurements to determine how much power the customer is using, or how much power the PV system is producing. The power values are then displayed in the customer's Tesla app and are used by the system to operate as configured by the customer. For instance, a customer may want to store their solar power for use at night. CTs measure both solar production and the home's power consumption so that the system knows how much solar to store during the day and supply at night.

There are many possible configurations for installing metering depending on system design. However, there are two goals, site metering and solar metering.

- **Site Metering**: Site meters show the overall power flow to/from a site from the Grid's perspective, i.e. the Grid is treated as the source of power and the home is a consumer of that power. Site meter(s) must be installed upstream of all solar production, Powerwalls, and home loads.
- **Solar Metering**: Solar meters capture production from solar inverter(s). There must not be any loads or Powerwalls behind the Solar CTs. This would result in under- or over-estimation of solar production.

Metering Options

See *Specifications on page 5* for full specifications of the meters and CTs.

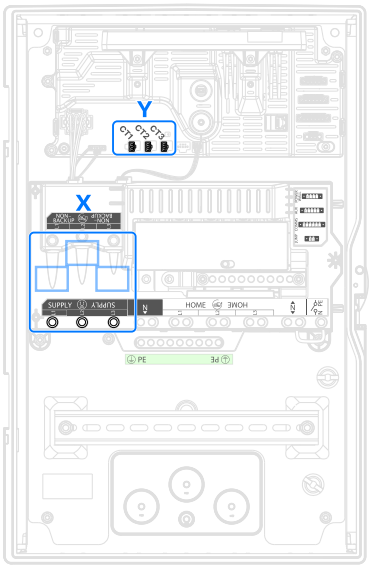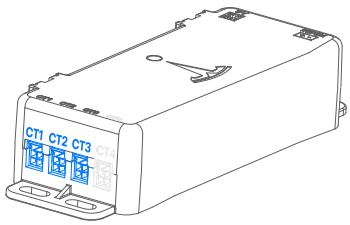Meter	Backup Gateway 2 Primary Meter X	Backup Gateway 2 Secondary Meter Y	Tesla Remote Meter
	Figure 8. Backup Gateway 2 internal meters 		Figure 9. Tesla Remote Meter CT terminals  **NOTE:** CT4 functionality will be available at a later date.
Compatible CTs	Not applicable (Primary Meter X has three integrated CTs)	Up to three Tesla 100A CTs (one per phase). For full specifications, see *Tesla 100A CT Specifications on page 10*. **NOTE:** One CT is included in the accessory kit; additional CTs can be ordered individually.	Up to three Tesla 200A CTs (one per phase). For full specifications, see *Tesla Remote Meter Specifications on page 12*. **NOTE:** One 200A CT is included in the kit; additional CTs can be ordered individually.
CT Capacity	80 A per phase / 100 A if using only one phase	100 A	200 A, 800 A
Supported Locations	Site, Conductor	Site, Solar, Generator, Conductor	Site, Solar, Generator, Conductor

- **Primary Meter X** can be used for measuring the site when the Grid connection is at the Supply terminals on Backup Gateway 2.

Figure 10. Example Whole Home Backup Metering Diagram: Meter X Measuring Site


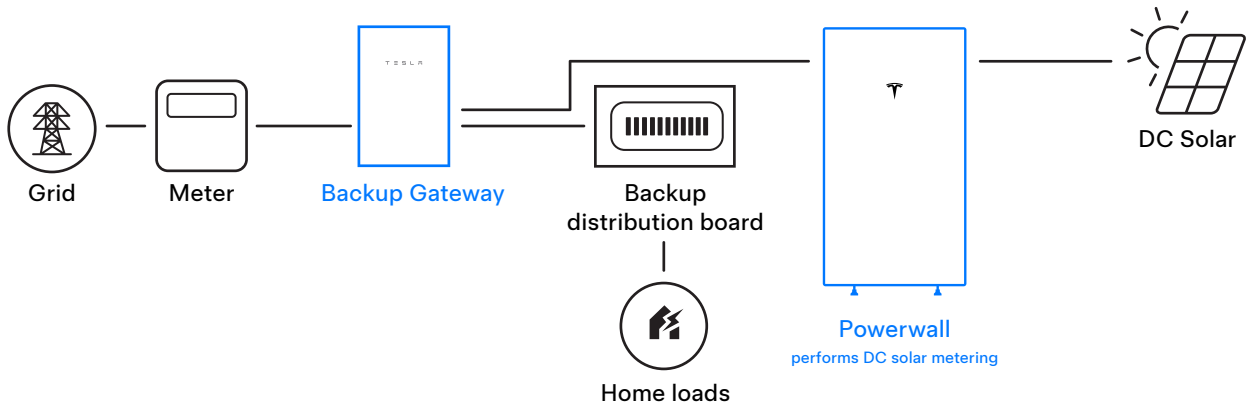


Figure 11. Example Partial Home Backup Metering Diagram: Meter X Measuring Site

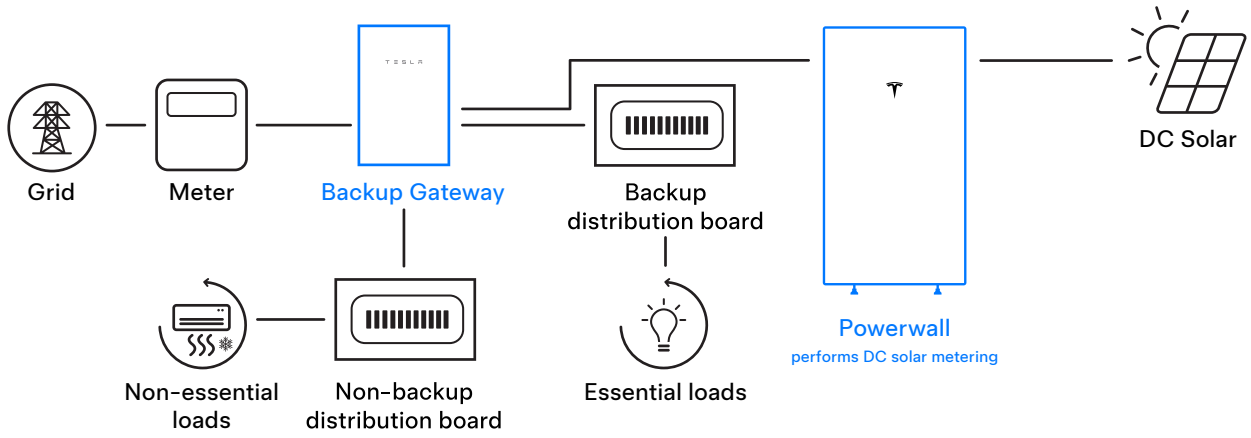

NOTE: In this configuration, the non-essential loads are downstream of Backup Gateway 2 (i.e., they are connected to the Non-Backup terminals on Backup Gateway 2).

- **Secondary Meter Y**: When there are loads upstream of Backup Gateway 2, Tesla 100A CTs can be installed and connected to the Meter Y CT terminals for measuring the site or solar.

Figure 12. Example Partial Home Backup Metering Diagram: Meter Y Measuring Site (Meter X Configured as None).


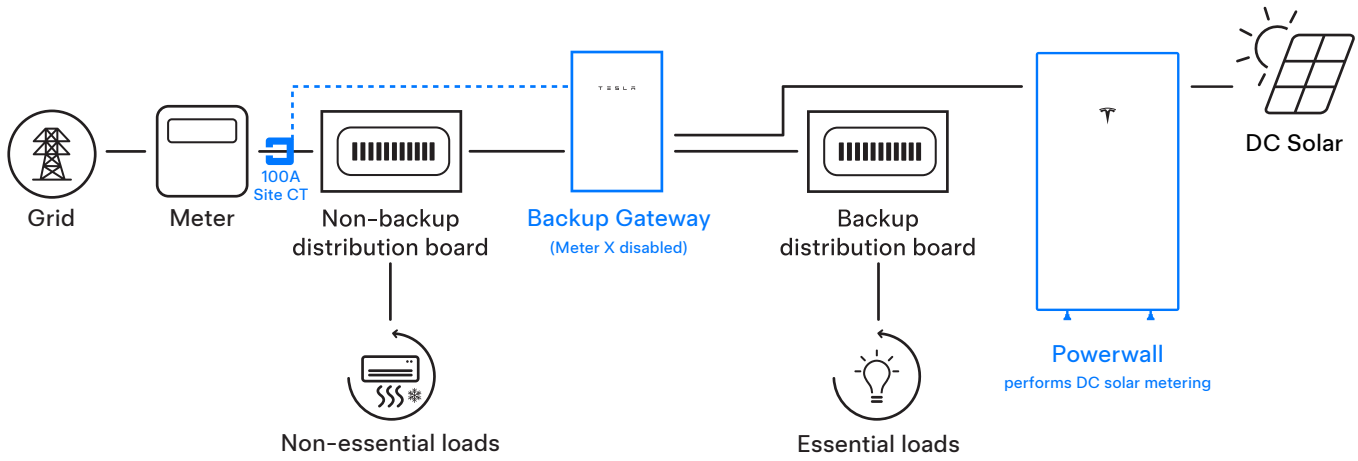


Figure 13. Example Partial Home Backup Metering Diagram: Meter X and Meter Y Measuring Site

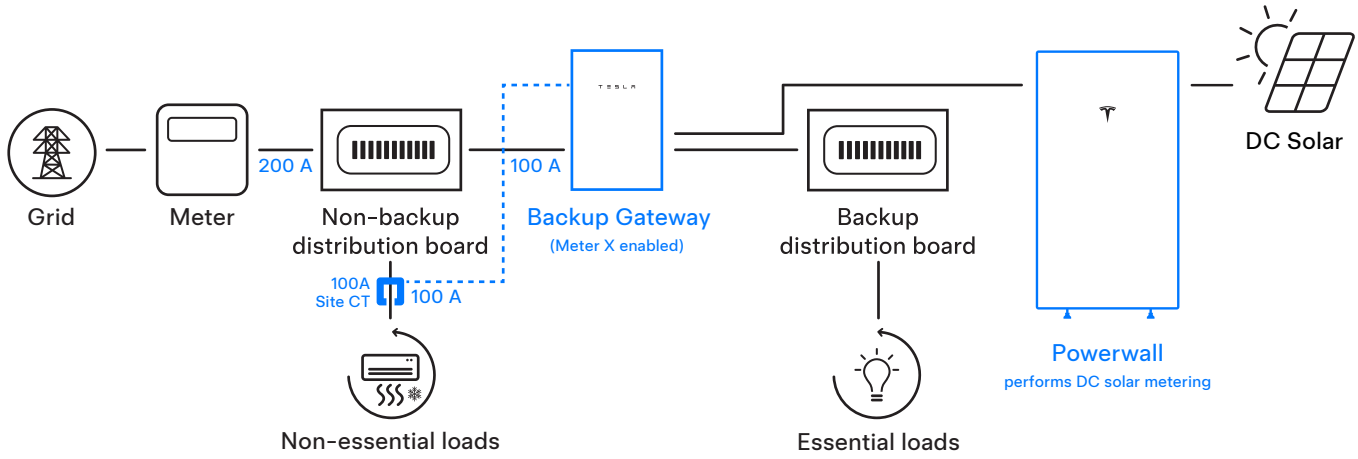

- **Tesla Remote Meter**: When there are loads upstream of Backup Gateway 2 and the system also includes AC-coupled solar, Tesla 200A CTs or 800 A CTs can be installed and connected to the Tesla Remote Meter CT terminals for measuring the site or the AC-coupled solar. See *Tesla Remote Meter Specifications on page 12* for full specifications of the meter and CTs and see *About Tesla Remote Meter on page 90* for installation instructions.

> **NOTE:** A Powerwall 3P site can have a maximum of three Tesla Remote Meters: one connected via RS-485 and up to two connected via Wi-Fi.

Figure 14. Example Partial Home Backup Metering Diagram: Tesla Remote Meter Measuring Site and Meter Y Measuring AC-Coupled Solar (Meter X Configured as None)


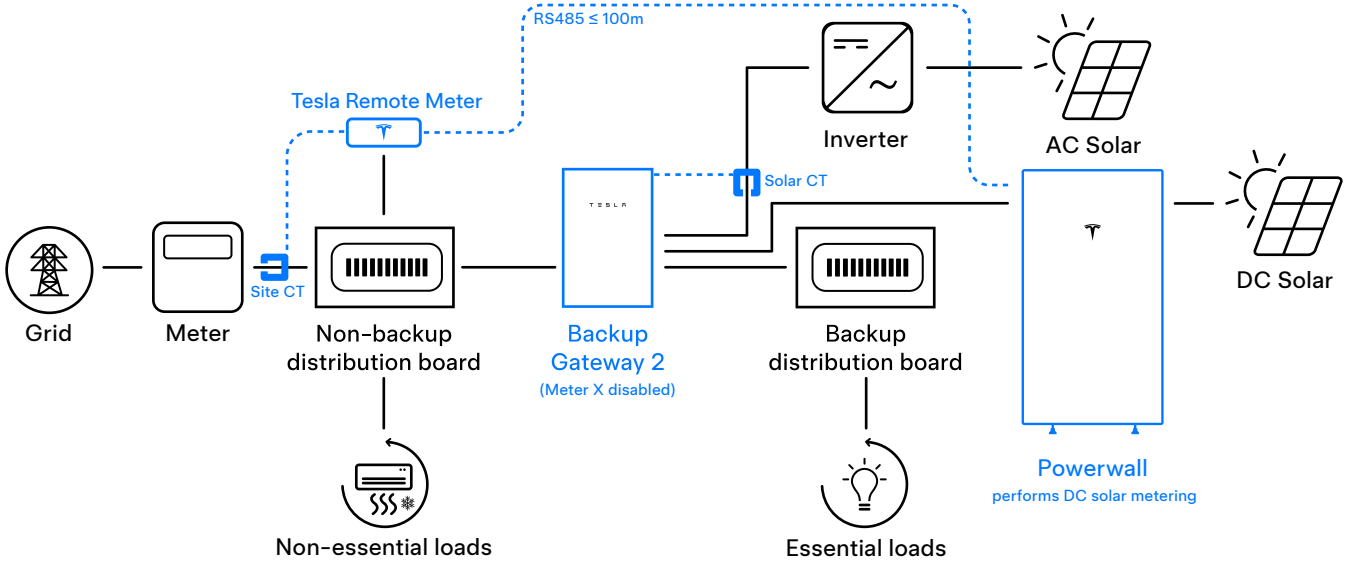


Figure 15. Example Partial Home Backup Metering Diagram: Two Tesla Remote Meters Measuring Site and AC-Coupled Solar (Meter X and Y Configured as None)

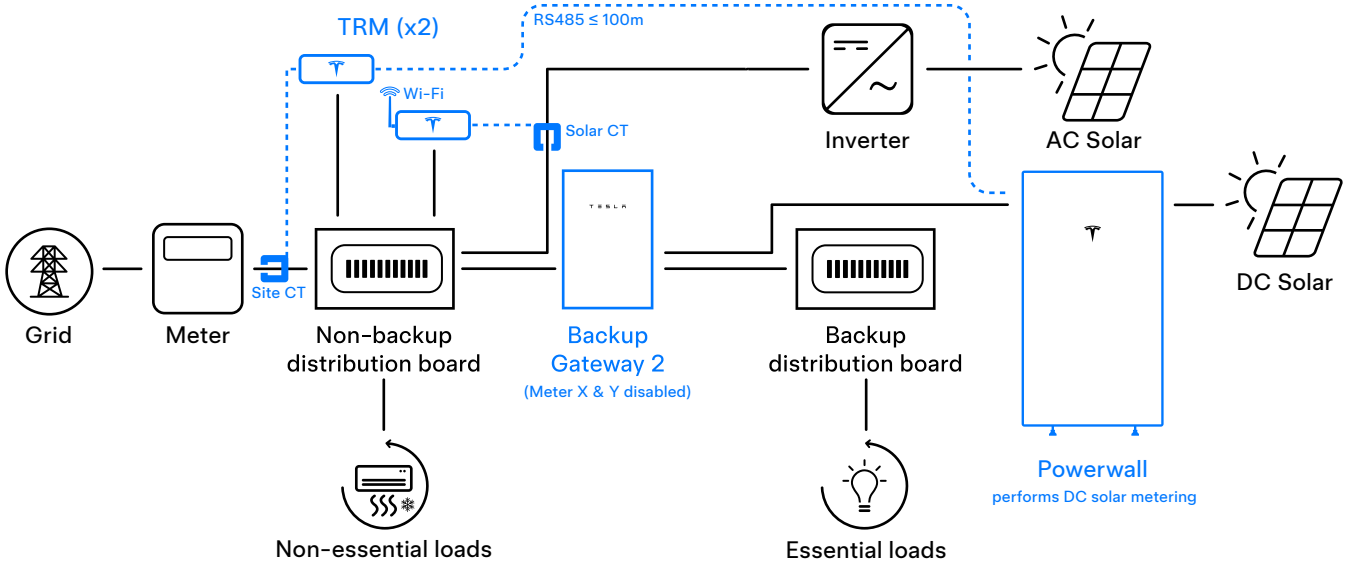

DC-Coupled Solar Metering

Powerwall 3P measures its own solar (i.e., DC-coupled solar). No additional meter needs to be installed or configured for Powerwall 3P.

NOTE: Powerwall 3P is not compatible with Neurio remote energy meters.

NOTE: Powerwall 3P has an internal battery meter which will not be called out in this document, as is not installed or configured by the installer.

SITE REQUIREMENTS AND PRE-INSTALLATION GUIDANCE

Ensure Installation Meets All Local Codes and Requirements

Powerwall 3P must be installed with Backup Gateway 2 to enable integration with the electrical grid. Powerwall 3P communicates with Backup Gateway 2 by means of a wired connection; wiring and conduit (where required) must be provided by the installer and installed to comply with local codes.

WARNING: When Powerwall 3P is installed in a dwelling unit, fire detection and protection equipment should be installed in accordance with local building and fire codes.

WARNING: Powerwall is not intended for installation in habitable spaces and living spaces in dwelling units.

WARNING: Install Powerwall in a location that prevents damage from flooding.

CAUTION: When installing Powerwall in a garage or near vehicles, keep it out of the driving path. If possible, install Powerwall on a side wall and/or above the height of vehicle bumpers.

CAUTION: Ensure that no water sources are above or near Powerwall, including downspouts, sprinklers, or faucets.

CAUTION: Ensure that snow does not accumulate around Powerwall.

CAUTION: Before installing, disconnecting, and/or adjusting current transformers for metering, ensure the circuits being measured are not energized and the system is completely powered down. Failure to de-energize the system may compromise operator and equipment safety.

CAUTION: Do not install Powerwall or Backup Gateway in direct sunlight.


CAUTION: The Backup Gateway may not be recessed into a wall or cavity.

NOTE: Powerwall 3P systems must have a grid connection. Fully off-grid systems are not supported.

NOTE: All installations must conform to the laws, regulations, codes, and standards applicable in the jurisdiction of installation.

PREPARING FOR INSTALLATION

In the Powerwall 3P Box

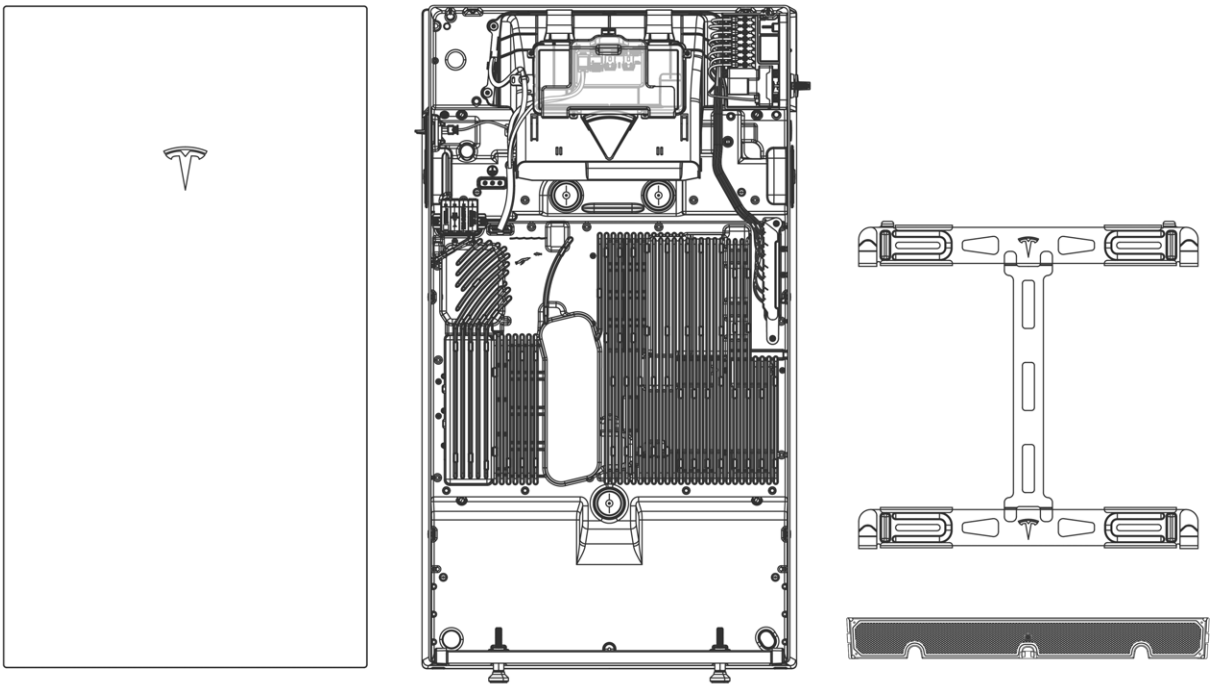

- Front cover
- Powerwall 3P
- Wall mounting bracket
- Air intake screen
- Powerwall 3P accessory bag (Tesla P/N 2131581-xx-y):
    - (6) fasteners for mounting the Powerwall 3P front cover (Tesla P/N 1857363-xx-y)
    - (1) zip tie and 1 zip tie mount
    - (4) MC4+ connectors and pins
    - (4) MC4- connectors and pins
    - (1) safety sticker for Powerwall 3P circuit breaker

In the Backup Gateway 2 Box



In the Backup Gateway 2 Accessory Bag

- (1) Adhesive circuit label
- (1) CT extension cable harness (3 m)
- (3) M6 rubber bonded stainless steel washers
- (5) 8 mm backplate nuts
- (1) M25 communication gland and insert
- (1) Solar CT (100 A, split-core)
- (1) Powerwall 2 Owner's Manual (can be recycled when Backup Gateway 2 is installed with Powerwall 3P; the Powerwall 3P owner's manual is available to the customer via their Tesla mobile app)

Powerwall 3P Tools, Service Parts, and Orderable Parts

NOTE: Some of the parts and kits listed below may not be orderable by Channel Partners; for a list of parts and kits that can be ordered by Channel Partners, please see the *Powerwall Pricing Guide* on Partner Portal.

NOTE: In the part numbers listed below, -xx-y are placeholder values.

Powerwall 3P Tools

Tesla Part Number	Name	Description
1856187-xx-y*	Powerwall Dolly	Custom-designed dolly for lifting and transporting Powerwall
1900175-00-C or greater	Upper Handle for Powerwall Dolly	Updated Powerwall Dolly handles with T40 fasteners (these fasteners provide the necessary extra clearance for tightening the handles on Powerwall 3P; they are automatically included on Powerwall Dolly models with Tesla P/N 1856187-xx-G or greater) Compatible with all Powerwall Dolly models
1900176-00-C or greater	Lower Handle for Powerwall Dolly	

Powerwall 3P Service Parts and Orderable Parts

Tesla Part Number	Name	Description
1738120-xx-y*	Powerwall 3 Mounting Bracket	(1) Additional Powerwall Wall Mounting Bracket (1 bracket is included with every Powerwall) Only needed if original mounting bracket is lost or damaged
1857363-30-A*	Powerwall 3 Accessory Bag	Additional Powerwall 3 accessory bag (1 accessory bag is included with every Powerwall)
2163703-xx-y**	Tesla Grid Utility Ancillary Controller (GUAC) interface device	Interface device for installations requiring DRM0 functionality per AS/NZS 4777.2; includes custom wire harness to connect GUAC interface device to Backup Gateway 2 and Powerwall 3 (see *STEP 5: Connect Powerwall 3P to Backup Gateway on page 67* for more information)
1763418-01-y*	Powerwall 3 Front Cover Assembly	Service replacement glass front cover and (8) fasteners for Powerwall 3
1899124-xx-y*	Powerwall 3 On/Off Switch Cover	Service replacement Powerwall 3 On/Off switch cover
1893723-xx-y*	Powerwall 3 Expansion Port Cover	Service replacement Powerwall 3 expansion port cover
1808482-xx-y*	Powerwall 3 Foot	Service replacement Powerwall 3 leveling foot (quantity 1)
1775504-xx-y*	Powerwall 3 Air Intake Screen	Service replacement Powerwall 3 air intake screen
1857363-02-y*	Front Cover Fasteners for Powerwall 3	Additional (8) M6x17 fasteners for securing the Powerwall 3 glass front cover
2256181-xx-y	Stäubli MC4 Sealing Cap (Socket)	Additional MC4 caps (manufacturer part numbers below)
2256180-xx-y	Stäubli MC4 Sealing Cap (Plug)	

*Compatible with both Powerwall 3 and Powerwall 3P.

**The Tesla Grid Utility Ancillary Controller (GUAC) interface device was previously listed under the Tesla part number 2153635-xx-y.

Compatible Stäubli MC4 Parts

NOTE: Refer to *staubli.com* for the latest connector part numbers and for connectors compatible with additional wire sizes.

Table 1. Stäubli Original MC4 Part Numbers

Stäubli Part Number	Wire Size and Polarity
32.0142P0001-UR	4 - 6 mm^2 socket (negative)
32.0143P0001-UR	4 - 6 mm^2 plug (positive)

Table 2. Stäubli MC4-Evo 2 Part Numbers

Stäubli Part Number	Wire Size and Polarity
32.0318P0001	4 - 6 mm^2 socket (negative)
32.0319P0001	4 - 6 mm^2 plug (positive)

Table 3. Stäubli MC4-Evo Ready Connector Part Numbers

Stäubli Part Number	Wire Size and Polarity
32.0030	4 - 6 mm^2 socket (negative)
32.0029	4 - 6 mm^2 plug (positive)

Table 4. Stäubli MC4-Evo 2 Y-Splitter Part Numbers

Stäubli Part Number	Input Connector	Output Connector
32.0333	Two plugs (positive)	One socket (negative)
32.0334	Two sockets (negative)	One plug (positive)

Table 5. Stäubli MC4 Sealing Caps

Stäubli Part Number	Polarity
32.0716	Socket (covers plug (negative) receptacle on Powerwall 3P)
32.0717	Plug (covers socket (positive) receptacle on Powerwall 3P)

Required Tools

General Tools

- Personal protective equipment (safety glasses, gloves, protective footwear)
- Installation tools (level, stud sensor, tape measure, pencil, painter's tape, flashlight)
- Smart phone with Tesla One app for performing device setup and documenting the installation
- Drill and drill bit for drilling pilot holes in mounting surface
- Torque wrench / screwdriver with T20 and T40 Torx bits
- Wire strippers/cutters for 0.2 mm^2 to 120 mm^2 wires
- Up to 3/32-inch or 3 mm cabinet or electronics tip slotted screwdriver for AC and communication wiring spring terminals
- RJ45 crimper and Ethernet cable tester if installing multiple Powerwall 3P units
- Multimeter and loop impedance tester
- AC phase sequence tester such as the *Fluke 1662/3/4*


Powerwall 3P Installation Tools

- Powerwall dolly (preferred, Tesla P/N 1856187-xx-G or greater) OR lift equipment capable of lifting and supporting 130 kg

  NOTE: A Powerwall dolly with Tesla P/N 1856187-xx-F or lower can be used to install the Powerwall 3P, but it must be retrofit with the following handles:
  - Tesla P/N 1900175-00-**C** or greater (upper handle)
  - Tesla P/N 1900176-00-**C** or greater (lower handle)

  These updated handles have T40 fasteners which provide the necessary extra clearance for tightening the handles on Powerwall 3P.

  Figure 16. Comparison of Updated Powerwall Dolly Handle (Left) and Original Powerwall Dolly Handle (Right)

- 19 mm drill socket (if using Powerwall dolly)
- Ratcheting strap to secure Powerwall 3P to lift equipment (if not using Powerwall dolly)
- Stäubli tools for crimping MC4 connectors onto PV wiring:

  NOTE: Refer to *staubli.com* for the latest tool part numbers and additional options.

Tool Description	Stäubli Part Number
1.5 - 6 mm^2 wire stripping pliers	32.6027-156
4 - 10 mm^2 wire stripping pliers	32.6027-410
2.5 - 6 mm^2 wire crimping pliers	32.6020-41100
4 - 10 mm^2 wire crimping pliers	32.6020-42100

Tool Description	Stäubli Part Number
Original MC4 wrench set*	32.6024
MC4-Evo 2 wrench set*	32.6058
Torque tool set	32.0065

*These wrenches can also be used to disconnect MC4 connectors (see *Disconnect MC4 Connectors Using Provided Tool on page 86* for more information)

WARNING: Powerwall 3P is heavy. Wear appropriate personal protective equipment (such as gloves and protective footwear) when handling the unit. Only a sufficient number of trained movers should lift Powerwall 3P. Use of lift equipment is recommended.

Powerwall 3 Expansion Installation Tools

- If installing stacked Expansion units with rear conduit entry:
  - 35 mm hole saw
  - 51 mm hole saw

Backup Gateway Installation Tools

- Small bit for drilling pilot holes in Backup Gateway mounting surface
- Hole saws for drilling cable access holes in Backup Gateway (M12, M20, M25, M32, M40, M50)
- Torque wrench with 3 mm Allen bit (for Backup Gateway power connections)


Required Supplies

- Powerwall 3P Mounting bracket hardware (see *Appendix A: Powerwall 3P Anchoring Details on page 117*)
- Backup Gateway 2 mounting hardware
- External Load Break switch that may be employed with the Powerwall; must conform to AS/NZS 4777.1 and AS 3000
- Minimum 300 V rated, 70°C rated, copper (Cu) wire, 2.5 mm^2 to 25 mm^2, for AC wiring
- Minimum 1000 V rated, 75°C rated, copper (Cu) or tin-plated copper wire, 4 mm^2 to 6 mm^2, for PV wiring

> **NOTE:** See *Powerwall 3P AC and PV Wiring on page 122* for details

> **NOTE:** AC and PV wiring conductors must be made of stranded wire or fine stranded wire. The wires must be compliant with local regulations.

> **CAUTION:** Do not use solid core or single core wire for PV connections.

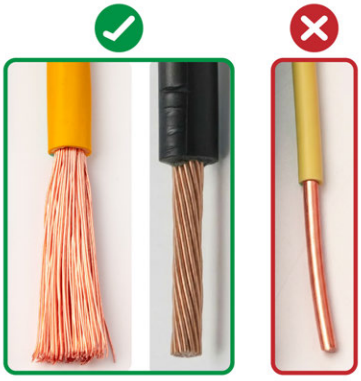

- MC4 connectors for PV wiring

CAUTION: Only genuine Stäubli Original MC4, MC4-Evo 2, or MC4-Evo ready connectors are compatible with Powerwall 3P (see *Compatible Stäubli MC4 Parts on page 36* for Stäubli part numbers). Using any other type of connector will void the Powerwall 3P warranty. See *Verifying Genuine Stäubli Original MC4, MC4-Evo 2, and MC4-Evo Ready Connectors on page 124* for help identifying incompatible non-Stäubli connectors.

Figure 17. Stäubli Original MC4 Connector




Figure 18. Stäubli MC4-Evo 2 Connector





Figure 19. Stäubli MC4-Evo Ready Connector



CAUTION: See official Stäubli guidance for installing MC4 connectors:

- *Stäubli video to assemble and crimp Stäubli Original MC4 or Original MC4-Evo 2 solar power connectors*
- *Stäubli video to assembly crimp-free MC4-Evo ready connectors*

See the *Stäubli Assembly Instruction video playlist* for video content in additional languages. See *Required Tools on page 37* for the required Stäubli crimping tools.

- (Optional) Stäubli MC4-Evo 2 Y-splitters if paralleling MPPTs
- Minimum 300 V rated (or equivalent) 4-conductor shielded copper (Cu) communication cable with at least one twisted pair

NOTE: This cable is used for communication connection between Powerwall and the Backup Gateway; the twisted pair is required for the CN+ and CN- communication conductors (see *STEP 5: Connect Powerwall 3P to Backup Gateway on page 67* for details).

- RJ45 connectors for Ethernet wiring if installing multiple Powerwall 3P units
- Minimum IP65 cable glands or conduit connectors of the following sizes:
  - M20
  - M25
  - M32
  - M40
- Maximum 32 A overcurrent protection device (breaker) for the Powerwall 3P circuit

CAUTION: Powerwall 3P must be installed with an 80 A breaker and appropriately sized conductors if installed in a single phase configuration at 240 V.

- If installing stacked Expansion units with rear conduit entry:


- Rubber cable grommet
- M32 cable gland

STEP 1: PLAN THE INSTALLATION SITE

Choose a Location that Meets Powerwall 3P Clearance Requirements


Powerwall 3P requires adequate clearance for installation, cabling, and airflow. The spacing on either side of units and between units is required to ensure there is sufficient clearance for venting and thermal management features. Do not install anything inside the required clearance above Powerwall 3P, or anything that might fall and damage the unit. Do not mount Powerwall 3P horizontally or upside down.

Figure 20. Powerwall 3P Air Intake Vents **(1)** and Exhaust Vents **(2)**

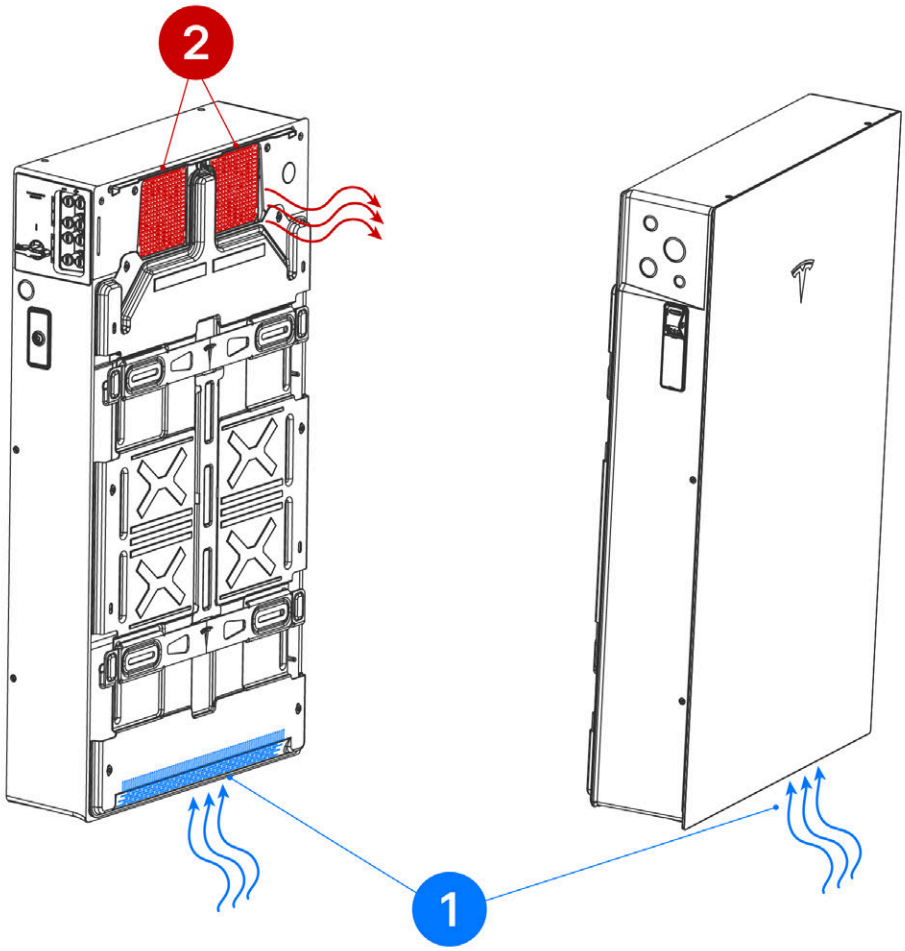

CAUTION: In addition to meeting all clearance requirements, ensure Powerwall 3P is installed on a flat surface that is clear of obstructions or protrusions that could damage Powerwall or inhibit airflow. The air vents on the rear and lower front of the unit must remain free from obstructions and accumulation of debris (like foliage or dust).

Figure 21. Powerwall 3P Minimum Mounting Clearances

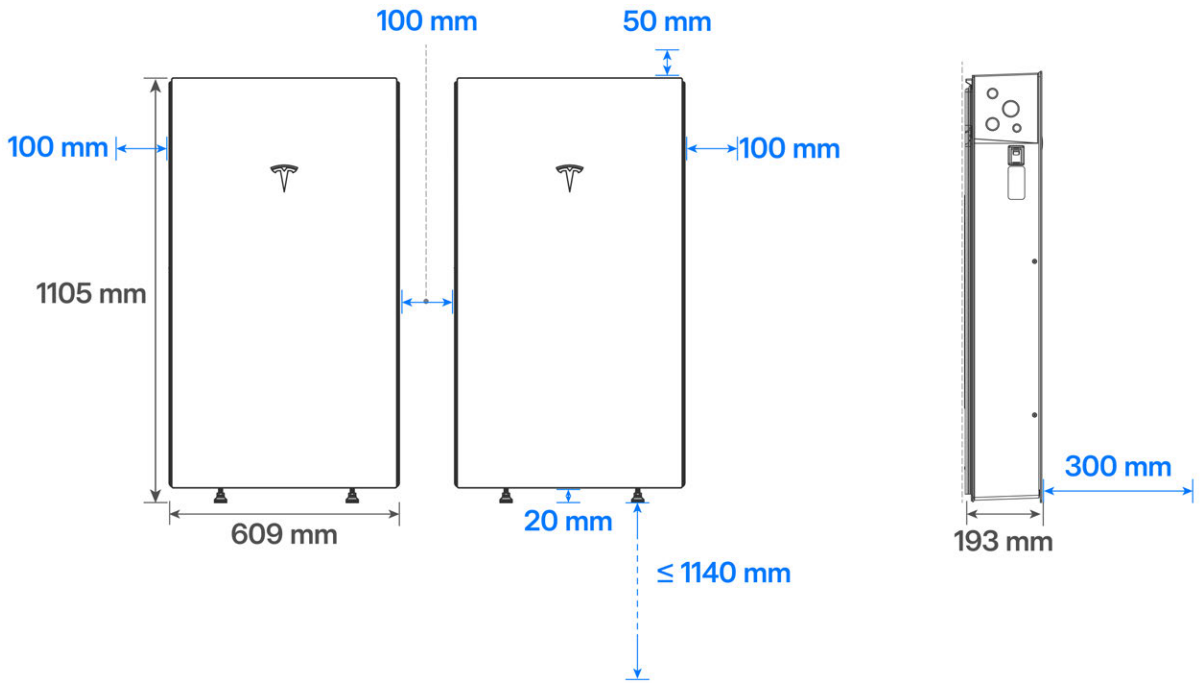

Minimum clearance from left side	100 mm
Minimum clearance from right side	100 mm
Minimum clearance above Powerwall	50 mm
Minimum clearance below Powerwall	20 mm[1]
Minimum clearance between side-by-side Powerwalls	100 mm[2]
Minimum clearance in front of Powerwall	300 mm[3]
Maximum height above ground	1140 mm to bottom of unit feet[4,5]
Maximum slope	+/– 2° side-to-side

[1]Always keep the Powerwall 3P feet installed to guarantee the minimum clearance below Powerwall.

[2]Tesla recommends a minimum of 150 mm between side-by-side units to allow for adequate space for wiring and On/Off switch access.

[3]This minimum clearance must be maintained at all times, as it ensures adequate airflow for Powerwall 3P. Please note that more space may be required depending on local code and/or site conditions.

[4]See *STEP 3: Wall-Mount Powerwall 3P Using Wall Bracket on page 56* for the mounting bracket height if the Powerwall 3P On/Off switch must be less than 2 m above the floor.

[5]Reference *Powerwall 3P Center of Mass on page 120* when mounting Powerwall 3P above ground or in a stacked configuration with Expansion.

NOTE: Powerwall 3P has a fan that produces a gentle hum during operation, comparable to a typical refrigerator. The noise level depends on the ambient temperature and the power level of operation. Consider this noise level when choosing where to install Powerwall 3P.

Plan Powerwall 3P Mounting Configuration

Choose a Wall Capable of Supporting Powerwall 3P

Choose a wall capable of supporting the full weight of Powerwall 3P. Walls with the following characteristics are acceptable:

- Wood structural members at regular intervals
- Solid concrete, CMU, or select brick masonry

Other wall types are also acceptable depending on mounting configuration; see *Anchoring Details for Ground- or Wall-mounting Powerwall 3P with Wall Bracket on Existing Approved Foundation on page 117* for all acceptable wall types when mounting Powerwall 3P on the mounting bracket.

If ground-mounting Powerwall, choose a level surface adjacent to a wall space that meets the above requirements. Ensure the bearing surface is structurally sound and flat, and supports both Powerwall feet.

Plan Cable Length Between Components

Follow the table below for maximum distances between system components. Wire gauge must meet local codes and in some circumstances wire gauge requirements change based on distance. Refer to *Appendix B on page 122* for wire gauge requirements.

	Maximum Cable Length
CAN communication wiring between Backup Gateway 2 and Leader Powerwall 3P	45 m for 1.5 mm^2 wire
	35 m for 1 mm^2 wire
Expansion Harness Length	See *Expansion Harness on page 153*
Wired Ethernet connection between any two devices*	100 m per Ethernet standard
Total PV circuit distance**	160 m

*This measurement refers to the distance between Powerwall 3P and the customer's internet router, or between two Powerwall 3P units.

**Ensure that total DC circuit distance, from + MPPT terminal to - MPPT terminal (including module wire leads, jumper wires and all wiring within the array boundary for any individual string), does not exceed 160 m for single strings

- Total DC circuit distance refers to the entire round trip wire distance, from Powerwall 3P to the roof, then back to Powerwall 3P

CAUTION: Failure to follow minimum cable size and length requirements may result in intermittent or unreliable operation of the Powerwall system. In systems that do not meet these minimum requirements, performance issues may arise even after successful commissioning.

Maximum Tesla 100 A CT Extension

NOTE: The Tesla 100 A CTs are installed with Backup Gateway 2.

Tesla 100 A CTs (Remote Metering)	Maximum Extension Length
Using Tesla 100 A CT Extension 3 m (Tesla P/N 1467274-00-x)	Up to 3.8 m
Using 0.5 mm^2 or larger twisted pair conductors	Up to 100 m

Maximum Tesla Remote Meter CT Extension

NOTE: The Tesla 200 A and 800 A CTs are installed with Tesla Remote Meter. See *Install the Tesla Remote Meter and CTs on page 94* for additional distances to measure when installing Tesla Remote Meter.

Tesla 200 A / 800 A CTs (Remote Metering)	Maximum Extension Length
Using up to (2) CT Extensions 3.5 m (Tesla P/N 2060713-00-x)	Up to 8.5 m

Choose Powerwall Cable Entry

Determine whether cables will be routed into Powerwall from either side or the back of the unit. A conduit fitting or cable gland must be used to seal the entry into the wiring compartment.

CAUTION: If expanding the Powerwall 3P knockouts, only use a knockout punch and die set. Do not drill into the Powerwall 3P enclosure or alter the metal surface in any way that may result in metal shavings falling into the enclosure.

NOTE: All knockouts except knockout F can be expanded up to M40 size knockouts. Knockout F cannot be expanded at all.

Figure 22. Powerwall 3P Knockout Locations

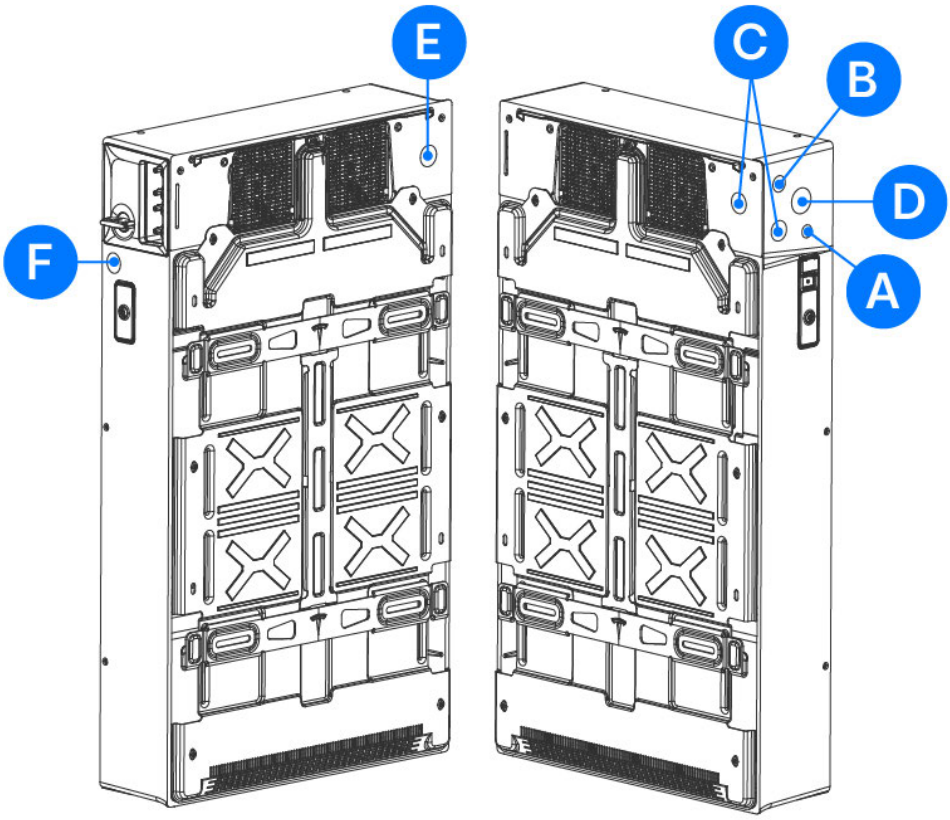



Table 6. Enclosure Knockout Sizes

Knockout	Conduit Size
A	M20
B	M25
C	M32
D	M40
E	M32
F	M32


STEP 1: PLAN THE INSTALLATION SITE

The following diagrams provide measurements for:

- Positioning conduit entry holes relative to the Powerwall 3P bracket (the measurements are the same for both knockouts)

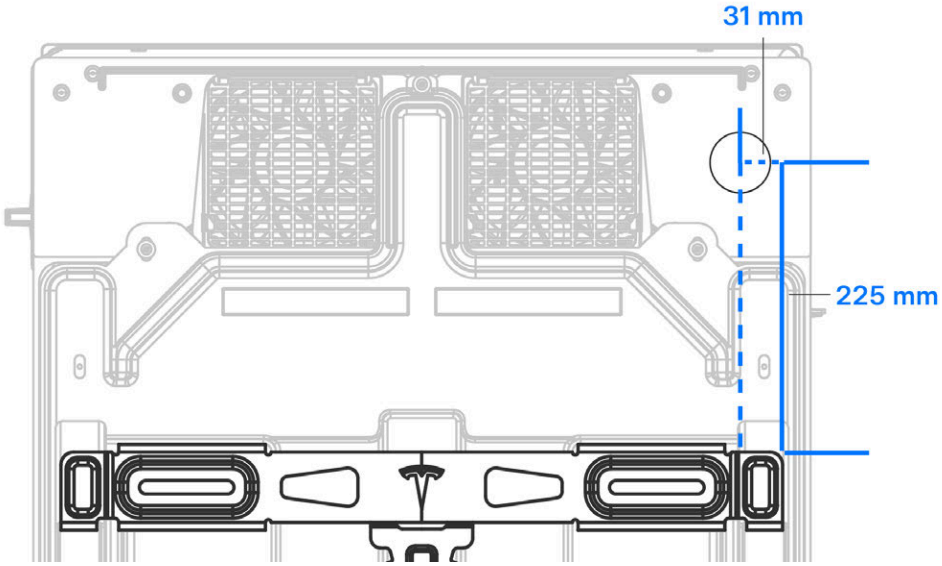


- Positioning conduit entry holes relative to the floor (if mounting Powerwall 3P with its feet at the lowest height setting and touching the floor)

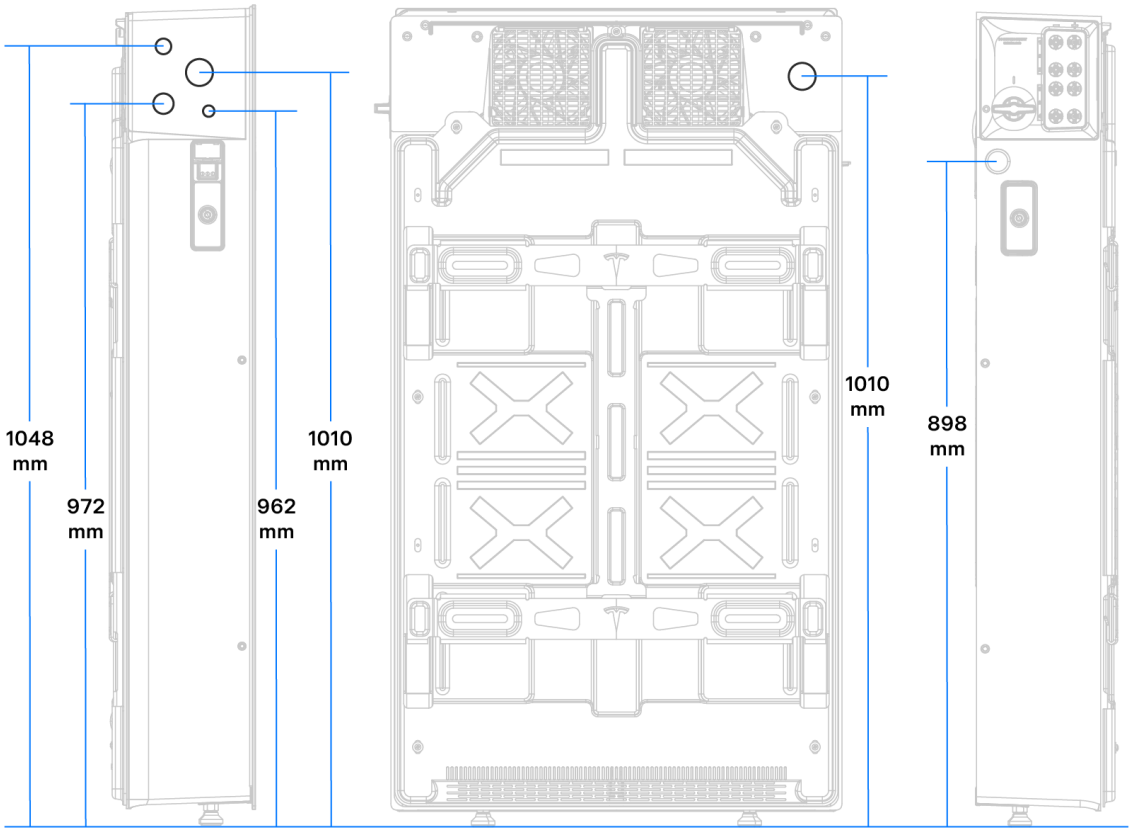

To open a knockout, position the tip of a slotted screwdriver on the inner perimeter of the knockout (on the outside of the enclosure). Hammer the screwdriver to punch out the metal knockout; one well-placed strike is generally sufficient to dislodge the knockout.

NOTE: Placing the screwdriver on the inner perimeter of the knockout rather than the middle allows for the knockout to be opened with significantly less force.

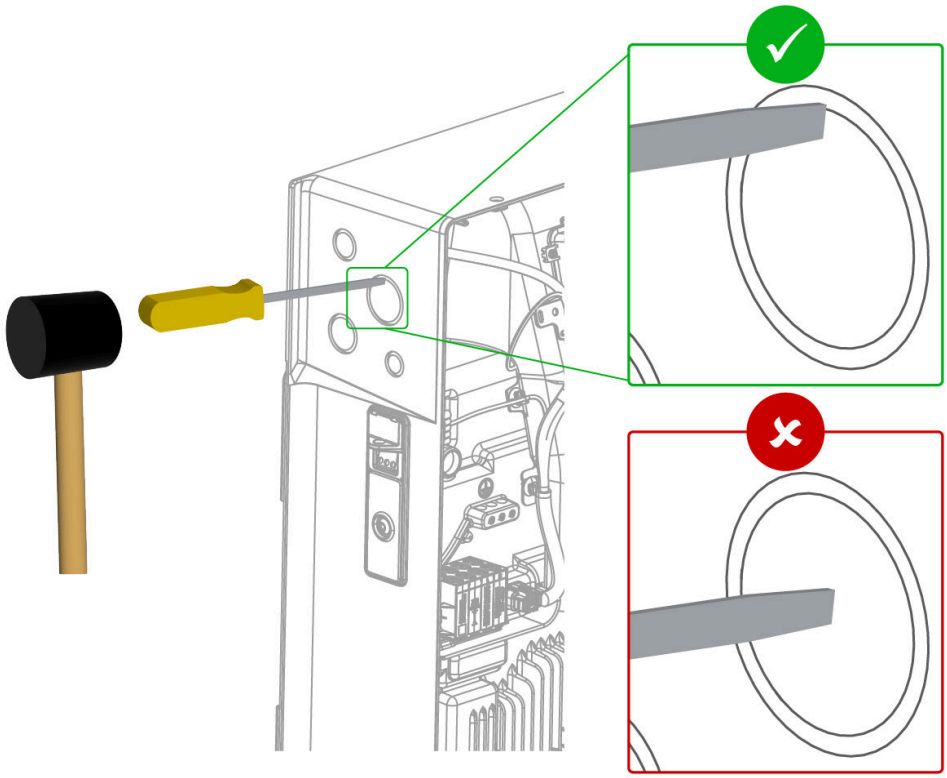

Plan Amount and Size of Conduit or Raceway

Calculate the amount and size of conduit or raceway needed for the installation, based on fill limits and local code requirements. An adapter may be required between the entry into the Powerwall wiring compartment and the conduit.

STEP 2: REMOVE POWERWALL 3P FROM PACKAGING AND TRANSPORT USING THE POWERWALL DOLLY

WARNING: Do not move Powerwall 3P in its packaging while the packaging is standing upright. In this position, the Powerwall 3P unit can shift within the packaging, which may result in Powerwall 3P falling over.

1. Open the Powerwall packaging:
   a. Carefully remove the box containing the glass Powerwall front cover and set it aside on an even surface.


      CAUTION: Handle the glass front cover carefully. Avoid setting the cover on hard, uneven surfaces which could break the glass.

   b. Remove the accessory bag and set it aside.

NOTE: Please return the Powerwall 3P packaging to the warehouse that originally shipped the unit(s). See *Powerwall 3P Transportation & Storage Guidelines* for instructions.

2. To lift Powerwall 3P using the Powerwall dolly, loosen the (2X) fasteners holding each lift handle in place, then detach the handles.

NOTE: Refer to the *Powerwall Dolly User Manual* for instructions on mounting Powerwall 3P using the Powerwall dolly.

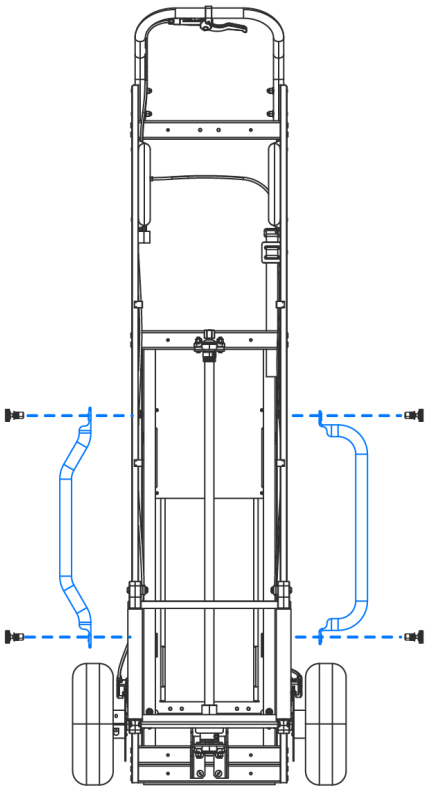


STEP 2: REMOVE POWERWALL 3P FROM PACKAGING AND TRANSPORT USING THE POWERWALL DOLLY

CAUTION: The Powerwall dolly is the recommended tool for transporting Powerwall 3P. If using another dolly:

a. Ensure Powerwall 3P is facing toward the dolly and the front of the unit is protected by a piece of cardboard (for instance the cardboard box the bracket ships in) or a similar material. Use a strap to secure Powerwall to the dolly.


b. Do not position Powerwall so that it faces away from the dolly.

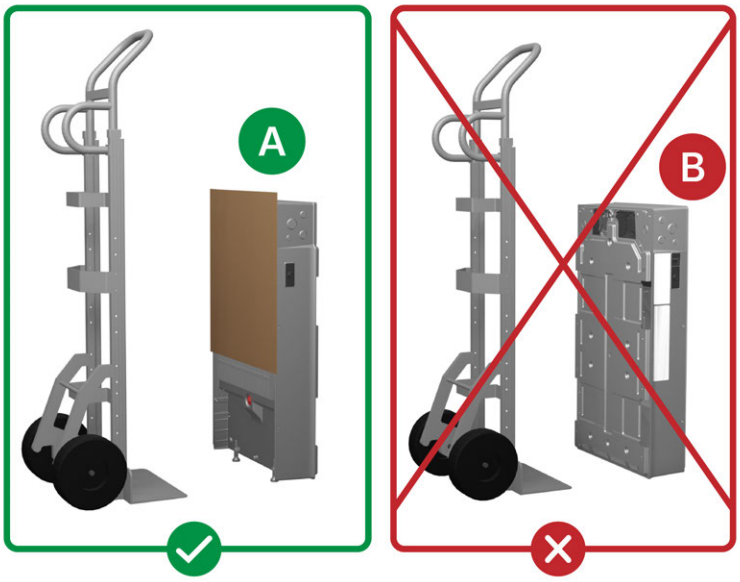

3. With Powerwall 3P still in the packaging, place the two dolly handles on the Powerwall and tighten the (2X) fasteners on each handle to hold them in place. Note that the upper handle is the larger, more rounded handle, and the lower handle is the smaller, more angular handle, and they attach to existing threaded mounting points. Perform a pull test to confirm the handles are secure before proceeding.

NOTE: Powerwall dolly with Tesla P/N 1856187-xx-**G** or greater has updated handles with T40 fasteners to facilitate easier installation of Powerwall 3P; these handles can be tightened using a T40 driver.

STEP 2: REMOVE POWERWALL 3P FROM PACKAGING AND TRANSPORT USING THE POWERWALL DOLLY

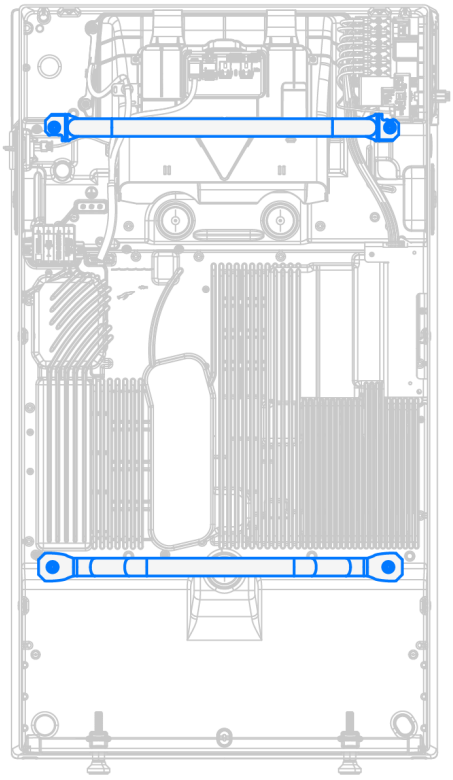

WARNING: Do not use the dolly handles to manually lift Powerwall 3P. These handles are designed to interface with the dolly; they are not designed to be load bearing, and attempting to lift Powerwall 3P with them could result in dropping and damaging the unit.

NOTE: A Powerwall dolly with Tesla P/N 1856187-xx-F or lower can be used to install the Powerwall 3P, but it must be retrofit with the following handles:


- Tesla P/N 1900175-00-**C** or greater (upper handle)
- Tesla P/N 1900176-00-**C** or greater (lower handle)

These updated handles have T40 fasteners which provide the necessary extra clearance for tightening the handles on Powerwall 3P.

STEP 2: REMOVE POWERWALL 3P FROM PACKAGING AND TRANSPORT USING THE POWERWALL DOLLY

CAUTION: When attaching the dolly handles to Powerwall 3P:


- Protect the wiring next to the DC isolator on the side of Powerwall 3P
- Take extra care not to damage or disconnect any of the factory-installed wiring

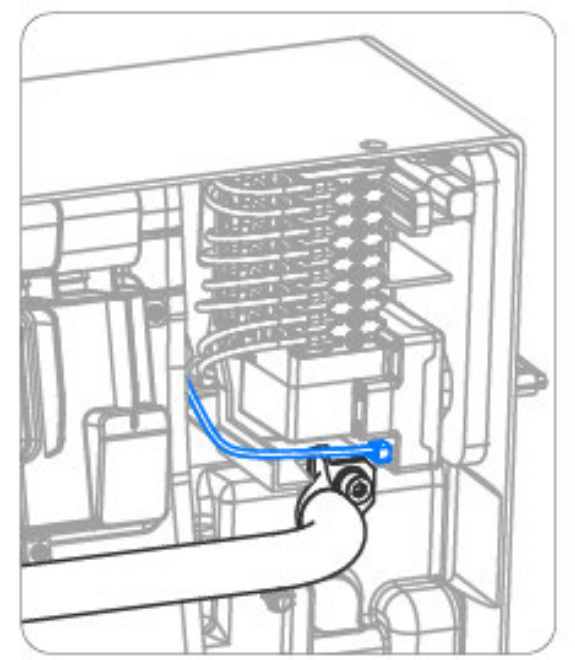

4. Confirm the leveling feet are screwed all the way in to the Powerwall.


CAUTION: The leveling feet must remain installed on Powerwall 3P, regardless of whether it is wall-mounted. The leveling feet ensure the required clearance is maintained between Powerwall 3P and any surface below it.

5. Engage the Powerwall dolly with the dolly handles:
   a. Lift the Powerwall dolly, with one person holding either end.
   b. Raise the lifting attachment and lower the Powerwall dolly, inserting the lifting plate between the Powerwall 3P feet as it is lowered, and lowering the lifting attachment so that it engages the handles.

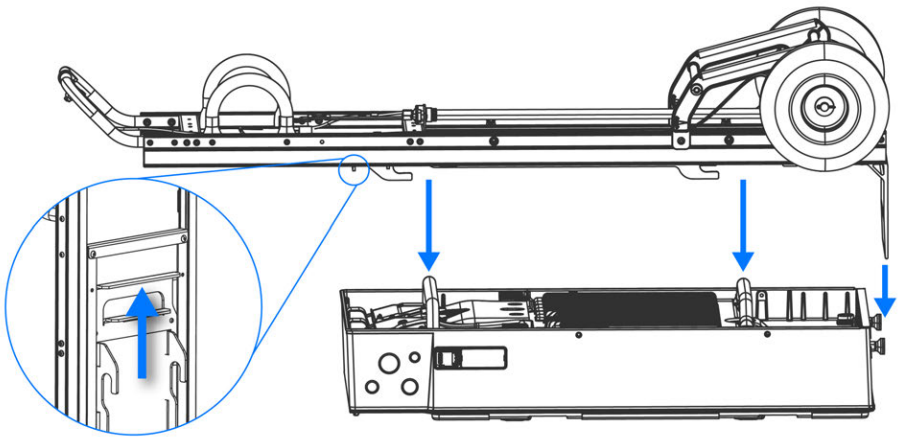


CAUTION: Confirm the handles are fully engaged with the dolly before proceeding.

STEP 2: REMOVE POWERWALL 3P FROM PACKAGING AND TRANSPORT USING THE POWERWALL DOLLY

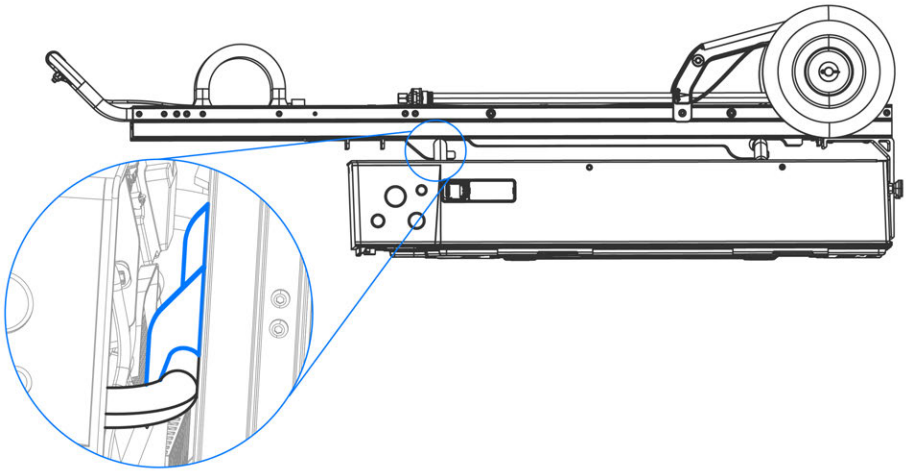

6. Place one foot on the Powerwall packaging as a pivot point, then lift Powerwall and the dolly to a standing position.

> **CAUTION:** Powerwall 3P must be in its packaging when lifting it in this manner; the packaging ensures the corners of the enclosure are protected.

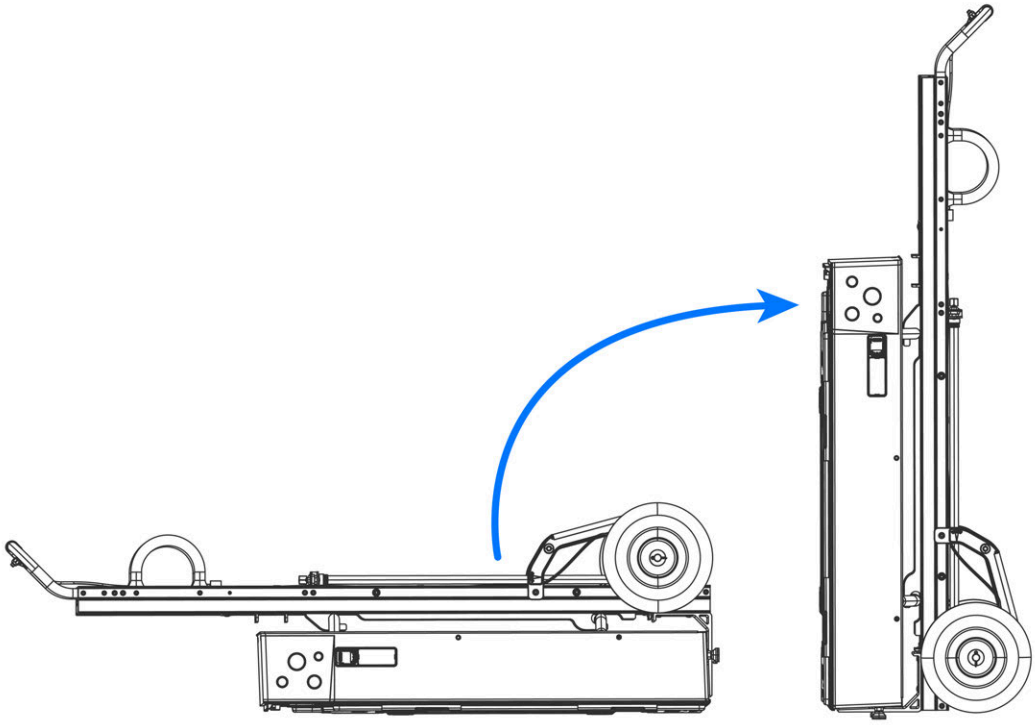

7. Remove the packaging and set it aside.
8. Position Powerwall at the mounting wall.


> **WARNING:** Use extreme caution if using the dolly on uneven terrain, such as grass, mud, or loose gravel, or if using on a steep incline.

> **CAUTION:** Always lower the lifting plate to its lowest position before moving the dolly with Powerwall 3P attached.

9. To raise or lower Powerwall 3P:

STEP 2: REMOVE POWERWALL 3P FROM PACKAGING AND TRANSPORT USING THE POWERWALL DOLLY

a. Tilt the dolly back 30 degrees to avoid Powerwall tilting forward or catching the wall bracket.

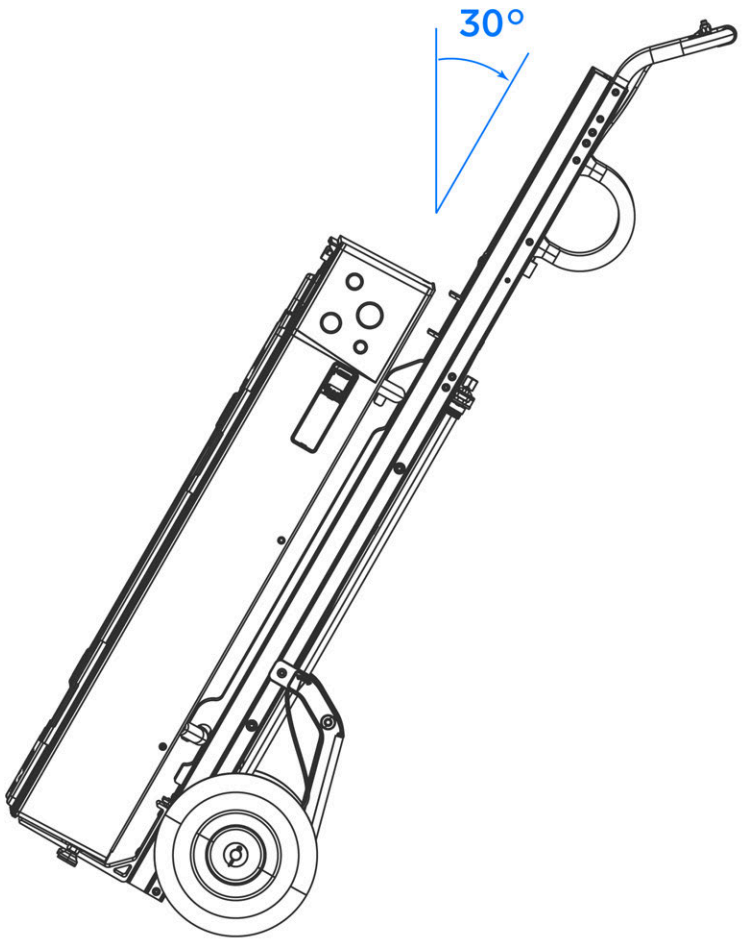


b. Place a 19 mm drill socket on the dolly lifting screw.

c. Connect a drill to the hex nut or drill socket, then secure the drill to the side of the dolly using the provided strap.

> ⚠ **CAUTION:** Do not use an impact drill.

d. Ensure the drill is on the high torque setting (or the slowest setting), then run the drill until Powerwall has been lifted to the desired height. Run the drill in reverse to lower.

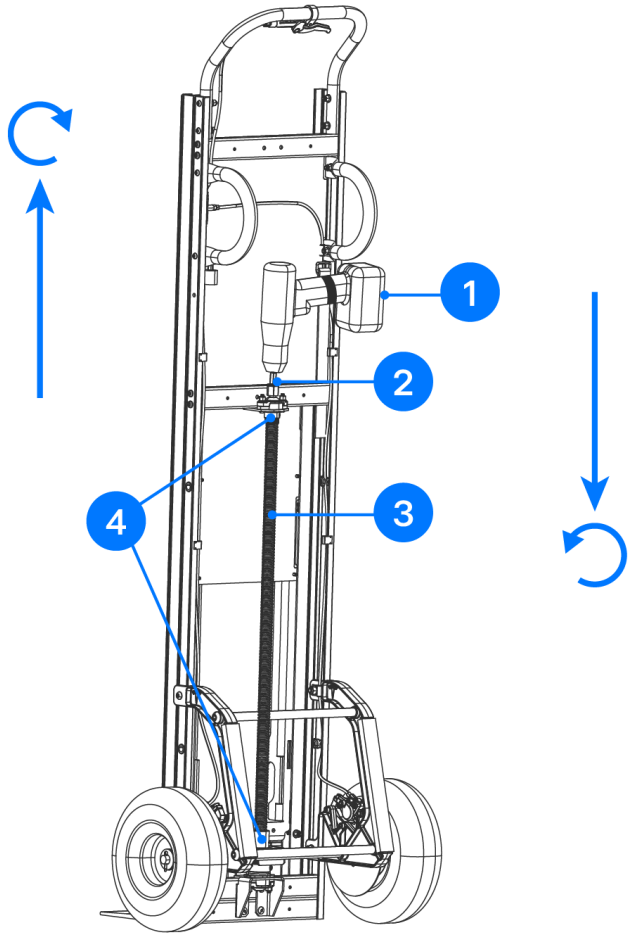

1	Drill
2	Drill socket
3	Lifting screw
4	Limiters

CAUTION: Be aware of the limiters on the lifting screw, and do not attempt to drive the screw beyond those limiters.

CAUTION: Only lift Powerwall 3P using the Powerwall dolly or a platform lifting tool.


10. To disengage the dolly from Powerwall 3P:
    a. Raise the lifting attachment to disengage the dolly from the handles.
    b. Move the dolly away from Powerwall 3P.
    c. Using the drill, lower the lifting platform to its lowest position.
    d. Remove the two lifting handles and reattach them to the dolly.

STEP 3: WALL-MOUNT POWERWALL 3P USING WALL BRACKET

WARNING: Powerwall 3P must be mounted using the wall bracket at all times to secure the unit to the supporting structure.

1. Using a drill and level, mount the Powerwall bracket to a wall capable of supporting the full weight of Powerwall 3P. See *Anchoring Details for Ground- or Wall-mounting Powerwall 3P with Wall Bracket on Existing Approved Foundation on page 117* for additional details on the type and number of fasteners to use.

   Figure 23. Bracket Measurements Relative to Powerwall and Floor (Rear View of Powerwall 3P)

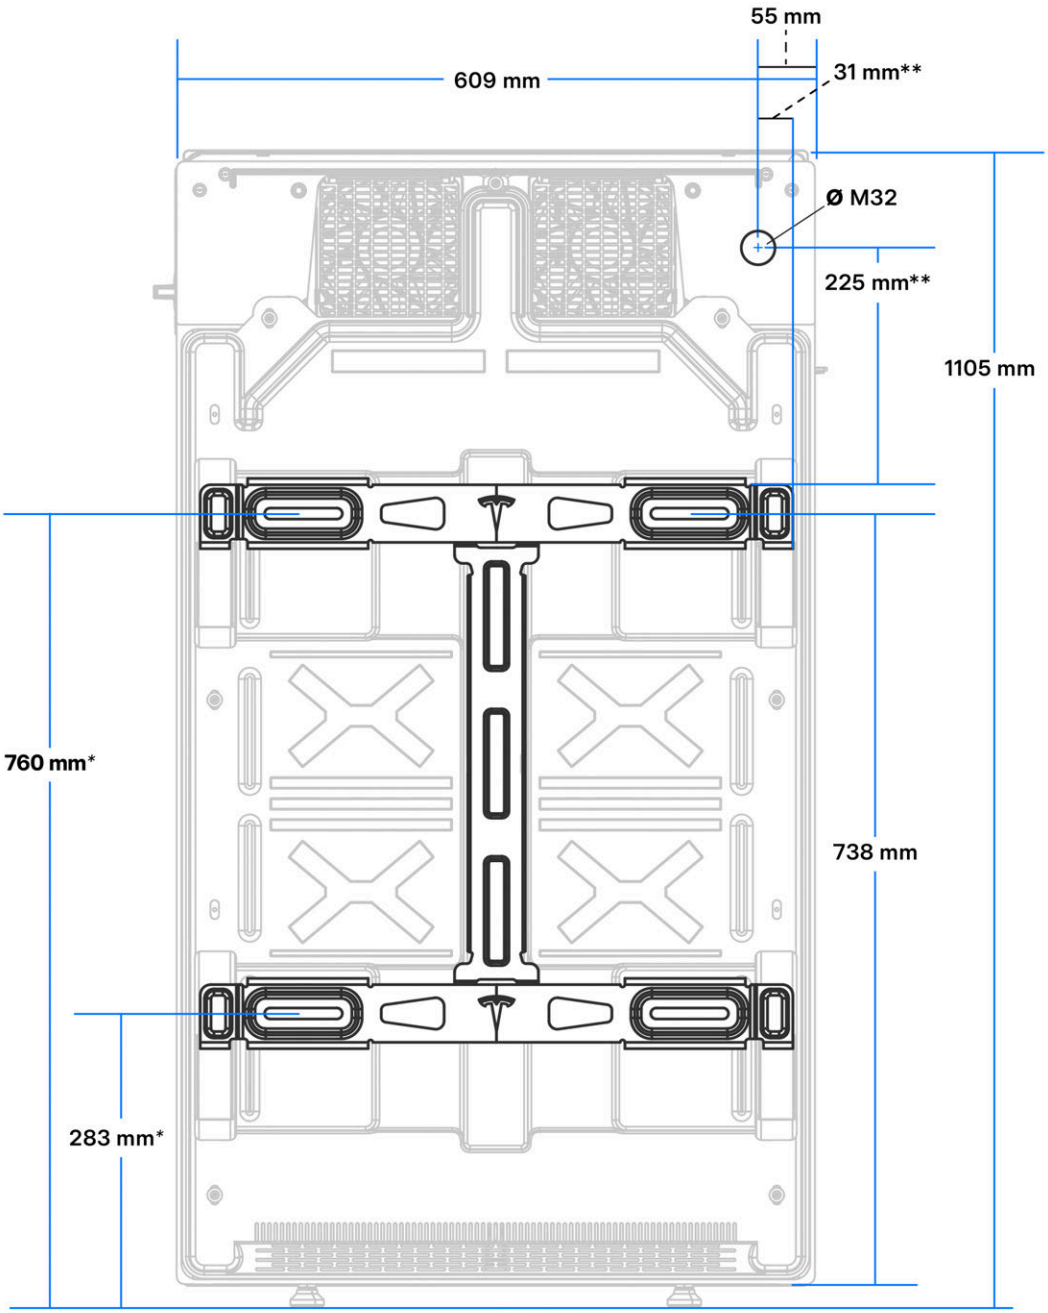

*Measurement is to floor.


STEP 3: WALL-MOUNT POWERWALL 3P USING WALL BRACKET

If the Powerwall 3P On/Off switch must be less than 2 m from the floor, mount the bracket such that:


- The distance from the center of the lower bracket segment to the floor is less than 1429 mm
- The distance from the center of the upper bracket segment to the floor is less than 1905 mm

** Measurements for positioning rear conduit entry holes relative to the Powerwall 3P bracket (the measurements are the same for both knockouts).

WARNING: Only install fasteners in the (4) slots on the horizontal bracket segments. Do not install fasteners anywhere except these four corners.

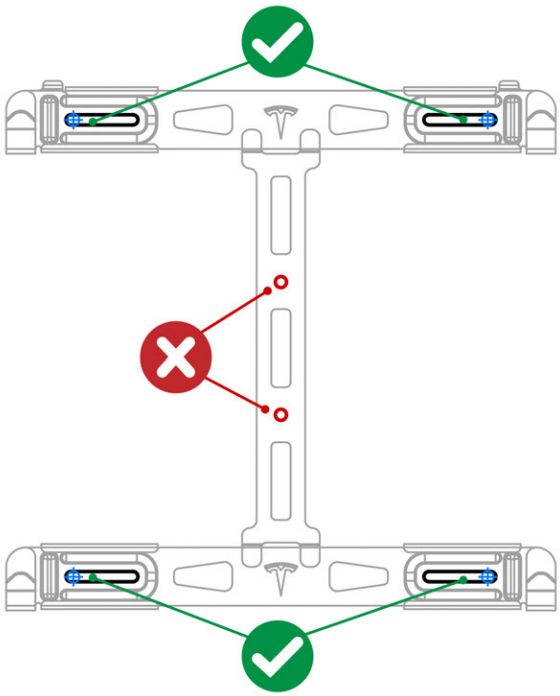


2. Move the dolly toward the wall, positioning Powerwall so that the mounting cleats are just above the flanges on the bracket.

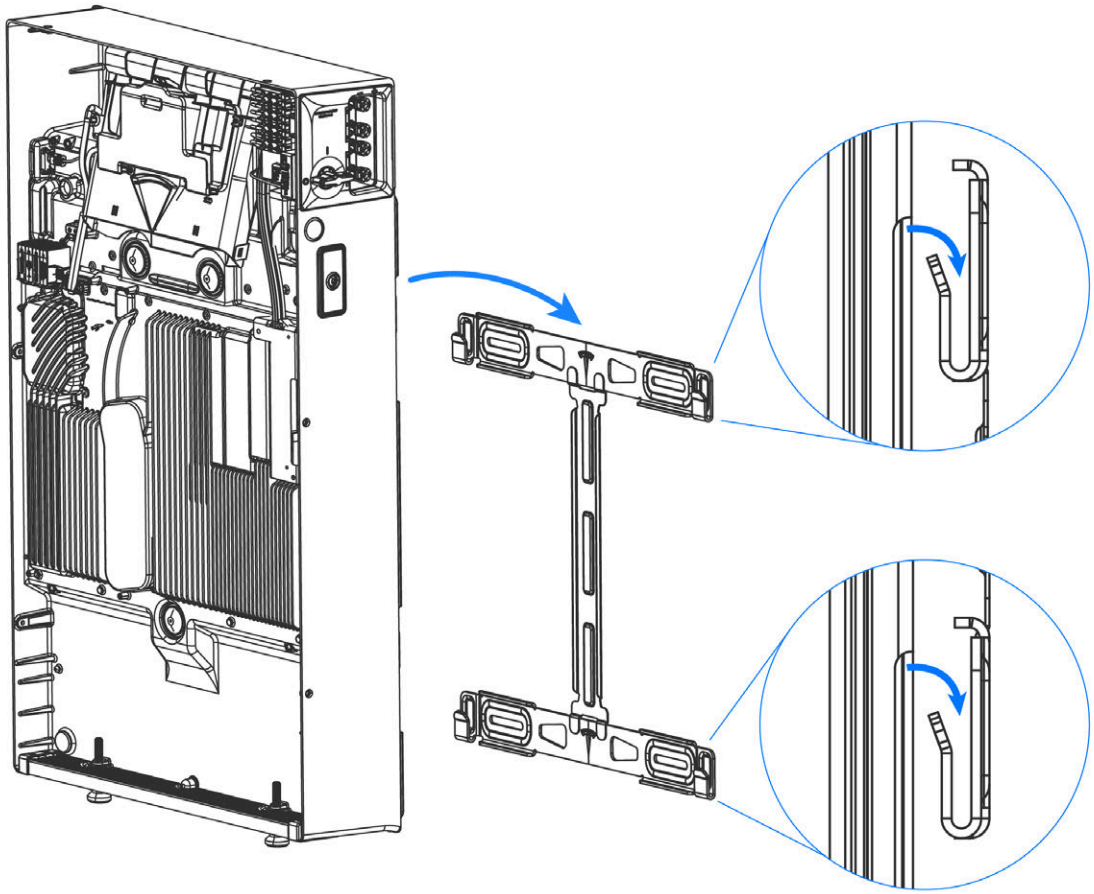

3. Lower Powerwall until:
    - The upper set of cleats is fully seated on the bracket flanges
    - The lower set of cleats is engaging the bracket flanges

> **NOTE:** Only the upper set of cleats will be fully seated; the lower cleats will still engage the bracket, but there will be a small gap between the lower cleats and the bottom edge of the bracket.

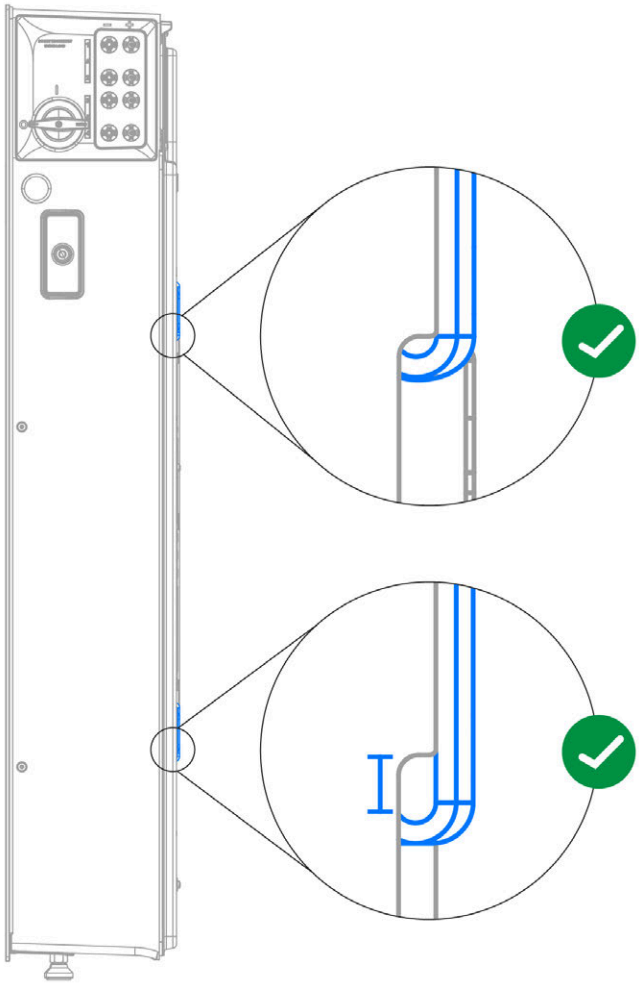


4. If ground-mounting Powerwall, use a 17 mm wrench to adjust the leveling feet until Powerwall is level. The unit should be level within ± 2 degrees side-to-side and within ± 5 degrees front-to-back.

> **NOTE:** The top of each foot must be visible above the threaded boss; do not unscrew the foot so far that the top is no longer visible.

STEP 4: INSTALL BACKUP GATEWAY 2

Mount the Backup Gateway 2

1. Using a hole saw, drill out the necessary cable access holes from the Backup Gateway 2.
   Figure 24. Top / Bottom (above) and Back (below) Cable Access Drill Guides

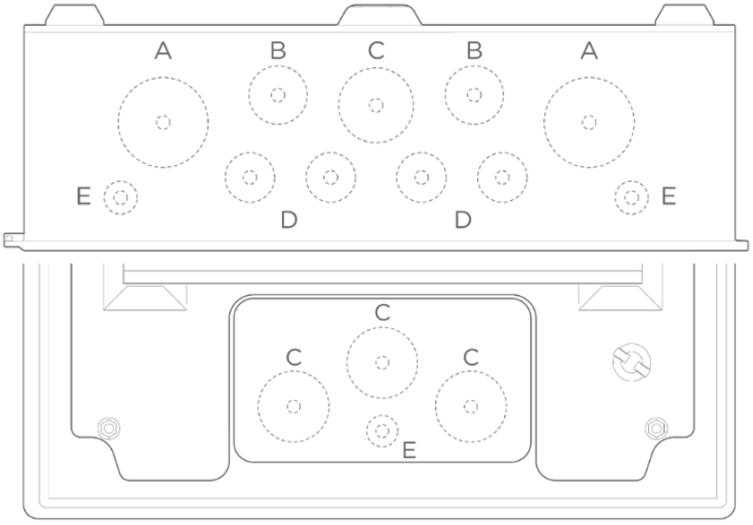


Drill Guide Diameters	
A	M40, expandable to M50
B	M25
C	M32
D	M20
E	M12

CAUTION: When Backup Gateway is installed outdoors, top cable entry is prohibited as it may result in water ingress.

2. Using a drill and level, mount the Backup Gateway 2 enclosure.

NOTE: Leave a minimum clearance of 50 mm above the Backup Gateway 2.

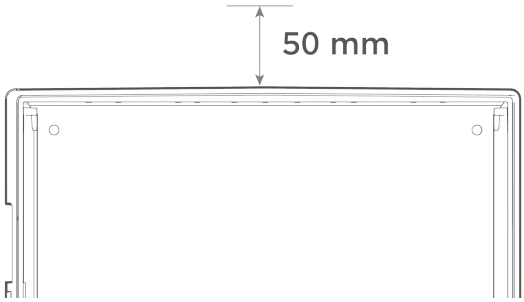


STEP 4: INSTALL BACKUP GATEWAY 2

NOTE: The enclosure must be installed in the orientation shown below. Do not mount the Backup Gateway 2 enclosure horizontally or upside down.

CAUTION: To ensure IP55 ingress rating is maintained, the enclosure must only be mounted at these three points.


Figure 25. Backup Gateway 2 Enclosure Mounting Holes

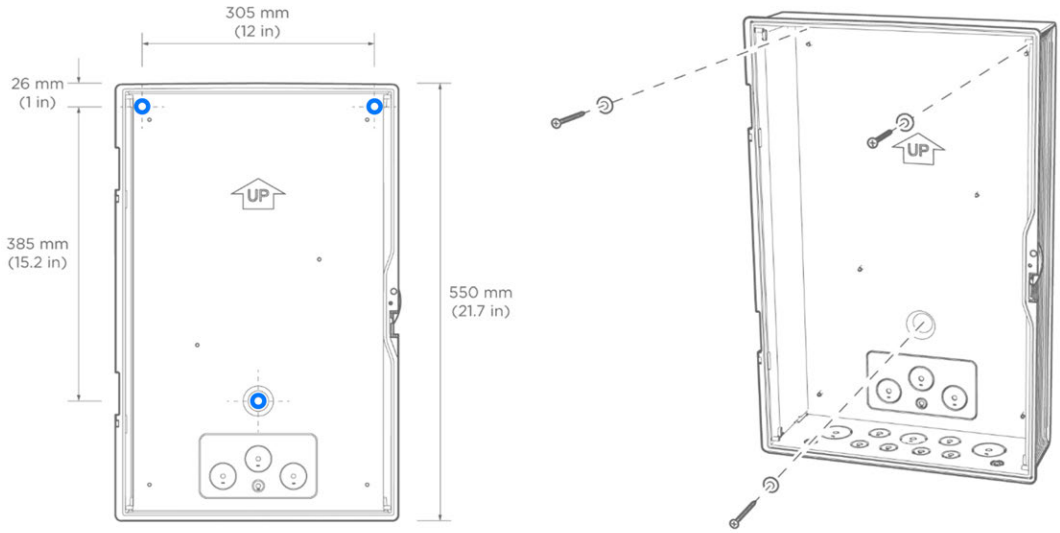

CAUTION: The sealing washers must be installed to guarantee IP55 ingress rating.

3. Install the Backplate Assembly in the enclosure, orienting it for bottom or top cable entry. Attach it to the five (5) studs using the five (5) supplied 8 mm nuts. Use a torque wrench with 8 mm socket to tighten the nuts to 6 Nm.

   Figure 26. Backplate Orientation for Bottom Cable Entry (left) or Top Cable Entry (right)

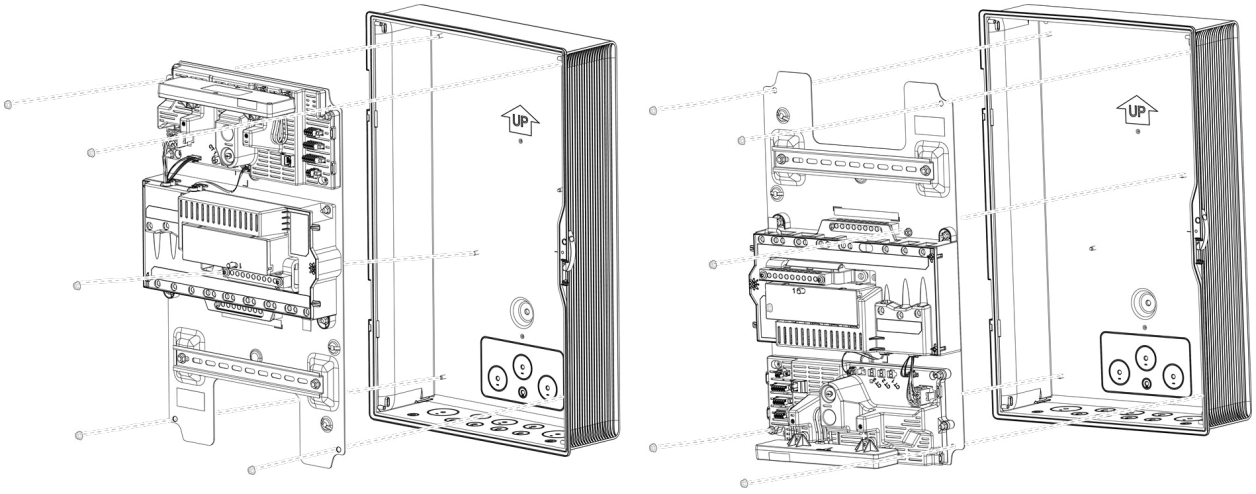


4. Locate the Backup Gateway 2 serial number on the label on the dead front cover. Record the serial number for reference.

Verify Neutral-Earth Bonding Scheme

Proper earth connection and Neutral-to-Physical Earth (N-PE) bonding is required for safe operation of the Powerwall system and for compliance with local code requirements. The correct Neutral-to-Earth bonding scheme must be maintained even when the system is disconnected from the grid.

The neutral conductors must not be broken in Australia and New Zealand on **TN-C-S** networks in off-grid operation. Neutral and Protective Earth (PE) conductors are separated at the main switchboard, and the MEN (Mutliple Earthed Neutral) link is maintained at a single point of connection between neutral and protective earth. With the **N-N Jumper Bar** installed, neutral will not be broken during off-grid operation.

Figure 27. Neutral Conductors are not disconnected in Off-Grid Operation with Factory Installed N-N Jumper Bar

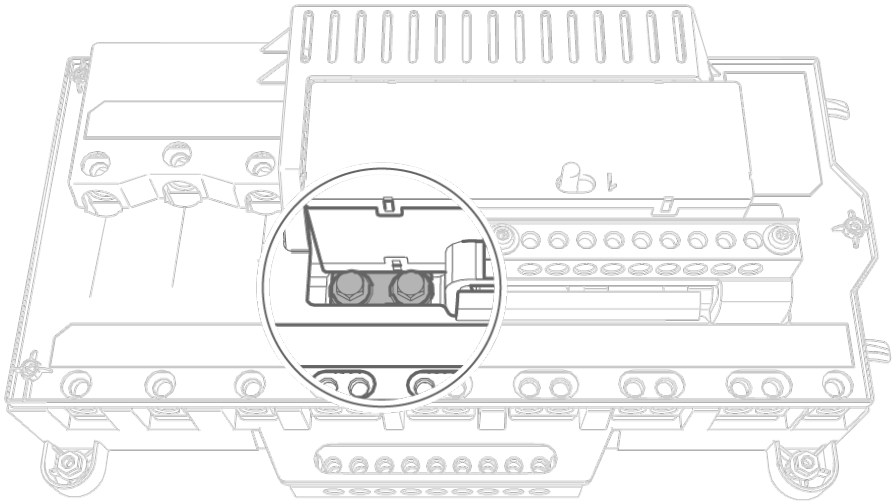

WARNING: Incorrect earthing or Neutral-to-Protective Earth (N-PE) bonding presents a risk of electrical shock or damage to equipment. Verify that the system is properly earthed and that the correct Neutral-to-Earth bonding scheme meets regional and local requirements.

Make AC Power Connections to Supply and Load Panels

In each of the following steps:

- Strip the ends of the wires, install wire ferrules, and insert into the corresponding Backup Gateway terminal lugs.
- Using an M3 Allen bit, tighten the lugs to 4 Nm.

1. Connect the main service conductors to the Backup Gateway Supply terminals according to *Conductor Connections for Three-Phase on page 64*.
2. Connect the home load panel conductors to the Backup Gateway terminals according to the table on the following page.
3. Depending on the quantity of Non-Backup circuits, a Non-Backup panel will be required. Connect the conductors (Line(s), Neutral, and Protective Earth) from the Non-Backup panel to the Backup Gateway's Non-Backup terminals.

   Non-Backup circuits include: 3-phase PV inverters, 3-phase loads, large single-phase loads.

4. Connect the non-backup panel conductors to the Backup Gateway Non-Backup terminals according to the table on the following page. Any circuits connected here will *not* be powered when disconnected from the grid. During on-grid operation, these circuits are still metered by the internal site metering with no additional metering hardware required.

WARNING: Always ensure all equipment is safely de-energized and locked out prior to working, to prevent risk of electric shock. To avoid shock hazard, never power on the system without a connection to Earth at the Gateway. The Earth bar and backplate voltage may float when ungrounded. If conducting earth loop impedance testing, ensure the Gateway always has a suitable Earth connection.



WARNING: Incorrect wiring of AC conductors presents a risk of electrical shock or damage to equipment. Before energizing the system, ensure all connections are made correctly according to the instructions in this document and in accordance with local wiring codes and regulations.

CAUTION: To ensure IP55 ingress protection, appropriate fittings and/or cable glands must be used to secure all cables passing into the enclosure.


Refer to *Appendix B: Wiring Reference on page 122* for all wiring requirements and recommendations, including wire colors and gauges.

Refer to *Appendix C: System Wiring Diagrams on page 136* for example system wiring diagrams.

Table 7. Conductor Connections for Three-Phase

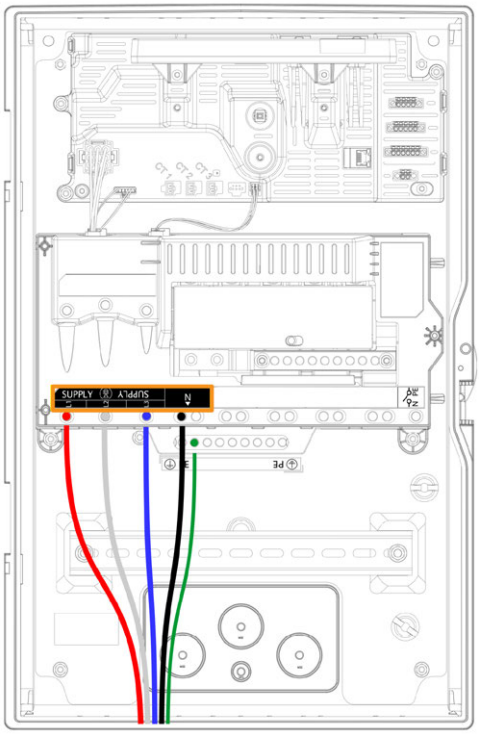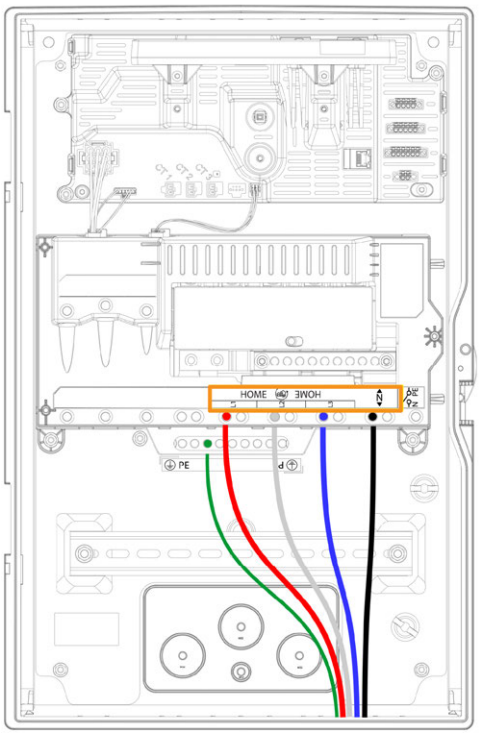	Three-Phase
Supply Connections	
Home Load and Backup Connections	

Non-Backup Connections

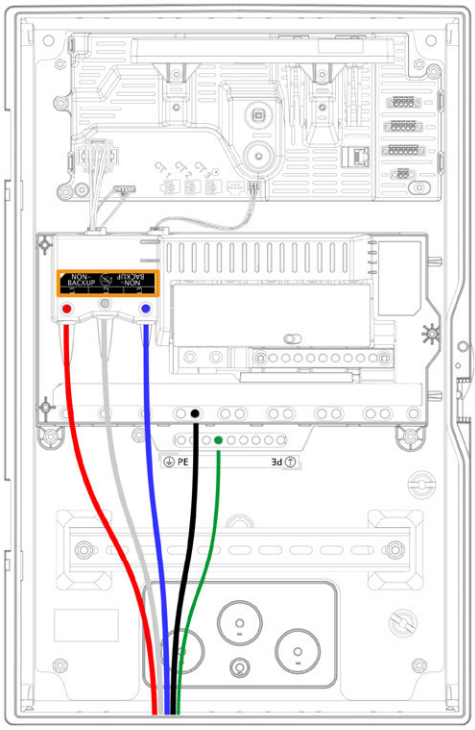

Terminal	Maximum Wire Gauge	Strip Length	Torque
Supply	35 mm^2	15 mm	4 Nm
Non-Backup	35 mm^2	15 mm	4 Nm
Home (Backup)	35 mm^2	15 mm	4 Nm
Neutral terminal bar	25 mm^2	15 mm	4 Nm
PE terminal bar	25 mm^2	15 mm	4 Nm


Install Powerwall and Generation Breakers in the Backup Gateway

1. Install the Powerwall and generation circuit breakers on the DIN rail, and connect using an appropriately rated DIN rail circuit breaker busbar.

   WARNING: All Powerwalls in the system must be installed on the 'Backup' ('Home') side of the Backup Gateway's relay.

2. Connect the line conductors from the bussed generation circuit breakers to the Backup Gateway's Backup terminals (see figure below). These conductors must be appropriately rated to carry the current of the main supply fuse.
3. Connect Neutral and PE conductors from Powerwall and generation circuits to the Neutral and PE wiring bars, respectively.

Figure 28. Three Phase Wiring Example

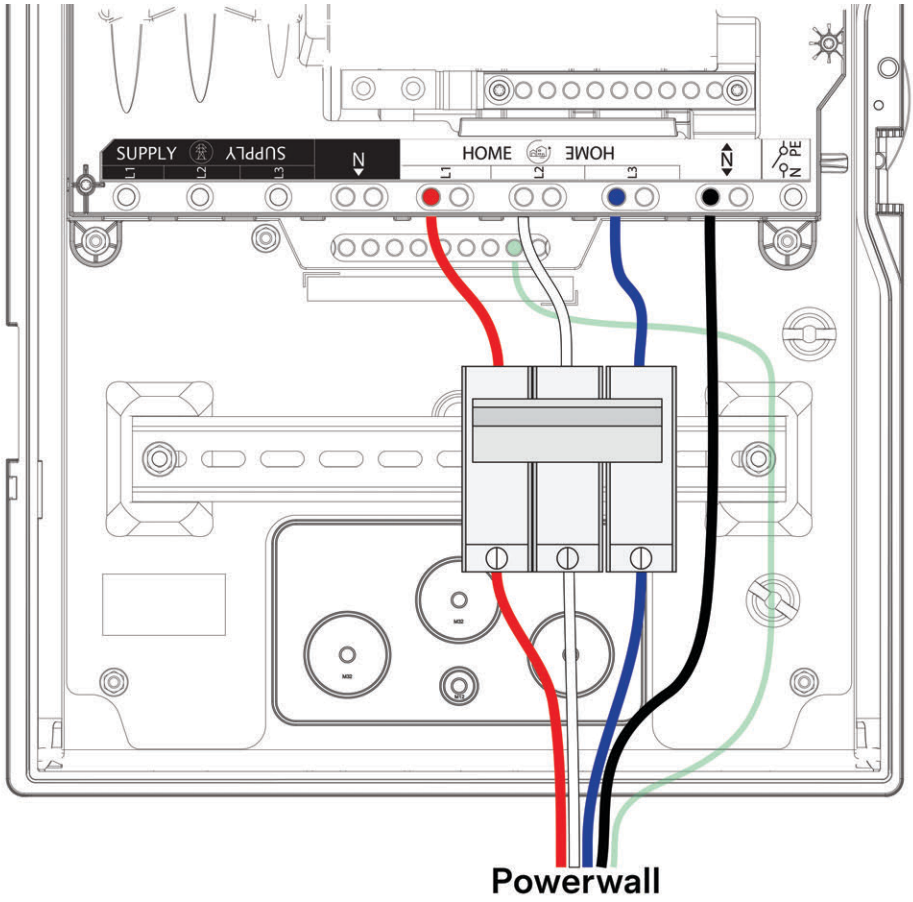

Design Considerations

> **CAUTION:** If installing greater than 100 A of generation, a separate overcurrent protection (such as a generation sub-board) is required to maintain maximum current rating of the Backup Gateway.

The Backup Gateway 2 can accommodate up to twelve (12) 1-pole MCB slots on the DIN rail for generation circuits and fuse carrier(s).

The Powerwall connection to the Backup Gateway requires a 32 A circuit breaker. This breaker serves as circuit protection for the Powerwall, and must be wired in accordance with local wiring codes and regulations.


Inverter Configuration

During backup operation, the Gateway will shift the system frequency to control the power output of solar inverters. Therefore, all solar inverters connected to the Backup terminals should be configured for the local grid code. This ensures that the inverter will respond correctly to frequency curtailment efforts. If the inverter is not compliant with the grid code requirements, it might not perform as expected during Backup operation. This could lead to hardware damage due to over-voltage. Please see more information regarding backup operation on our *website*.

STEP 5: CONNECT POWERWALL 3P TO BACKUP GATEWAY

For installations utilizing DRM0 in Australia, instructions are provided to install a DRED controller and connect it to Backup Gateway 2 and Powerwall 3P. All other installations will proceed with connecting Backup Gateway 2 directly to Powerwall 3P.

WARNING: Before terminating any conductors inside Powerwall 3P, turn the Powerwall 3P switch OFF to shut the system down, then turn the integrated DC isolator OFF. Before proceeding, confirm there is a lack of voltage at the AC and PV terminals.

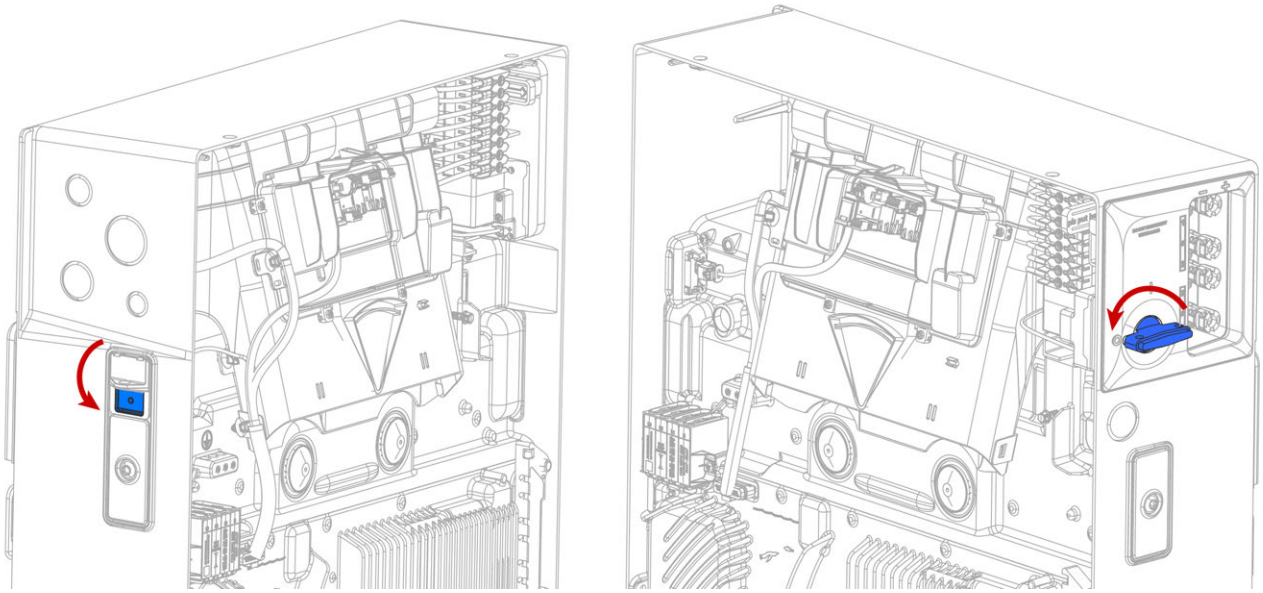

Connect Communication Wiring to Backup Gateway 2

1. Run the 4-conductor communication cable from the Backup Gateway through the conduit or cable gland and pull it into the Powerwall 3P wiring compartment.

   NOTE: See *Plan Cable Length Between Components on page 45* for the maximum distance between components.


2. At the Backup Gateway, strip the communication wire jacket about 76 mm and strip each conductor 8 mm.
3. Cut back the drain wire from the communication wiring. **The drain wire should be terminated at the Powerwall 3P ground terminal only**.
4. Insert a up to 3/32-inch or 3 mm cabinet or electronics tip slotted screwdriver to open each lever on the 4-pin **Powerwall 12V & CAN** connector.
5. Insert each conductor as far as possible into the terminal and then release the connector lever to close the connector.

   CAUTION: Excessive force may damage the connector; do not apply more force than is necessary to open the terminal and insert the conductor (do not lean on connectors when prying them open).

   NOTE: Reference *Backup Gateway 2 Wiring on page 134* for additional information on wire requirements and wire order in the connector.

6. Plug the 4-pin connector into the 4-pin socket labeled "Powerwall". Tighten the screws on the connector.

STEP 5: CONNECT POWERWALL 3P TO BACKUP GATEWAY

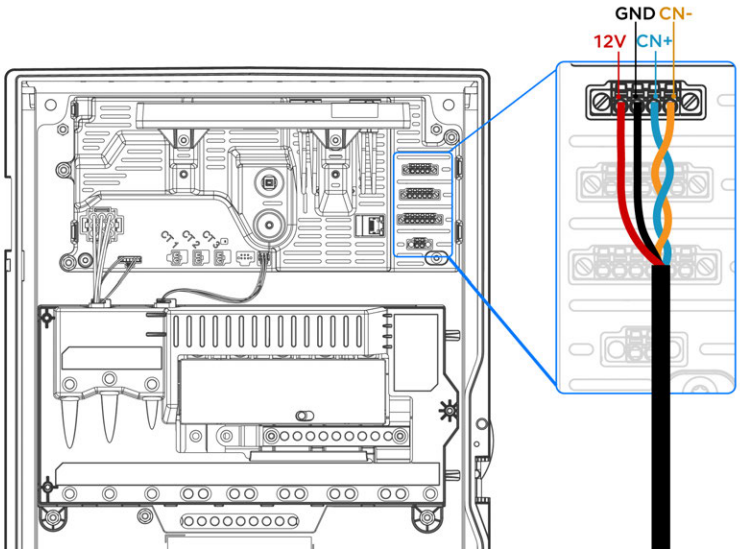

Option 1 (Non-DRM0 Installations): Connect Communication Wiring to Powerwall 3P


CAUTION: At Powerwall 3P, Tesla recommends routing the communication wiring into the left side of the enclosure; always use the wire management tabs to ensure wires do not block the Tesla Asset Controller. Do not route loose wires through the front of the enclosure.

1. At Powerwall 3P, strip the communication wire jacket about 76 mm and strip each conductor 8 mm.
2. Insert a up to 3/32-inch or 3 mm cabinet or electronics tip slotted screwdriver to open each lever on the 4-pin **Backup Gateway 2 Communication** connector.
3. Insert each conductor as far as possible into the terminal and then release the connector lever to close the connector.

   CAUTION: Excessive force may damage the connector; do not apply more force than is necessary to open the terminal and insert the conductor (do not lean on connectors when prying them open).

   NOTE: Reference *Powerwall 3P AC and PV Wiring on page 122* for additional information on wire requirements and wire order in the connector.
4. Plug the 4-pin connector into the 4-pin **Backup Gateway 2 Communication** socket. Tighten the screws on the connector.
5. Wrap the communication cable drain wire around the Protective Earth lead and insert the wires in the equipment grounding terminal. Tighten the screw to 4 Nm.

STEP 5: CONNECT POWERWALL 3P TO BACKUP GATEWAY

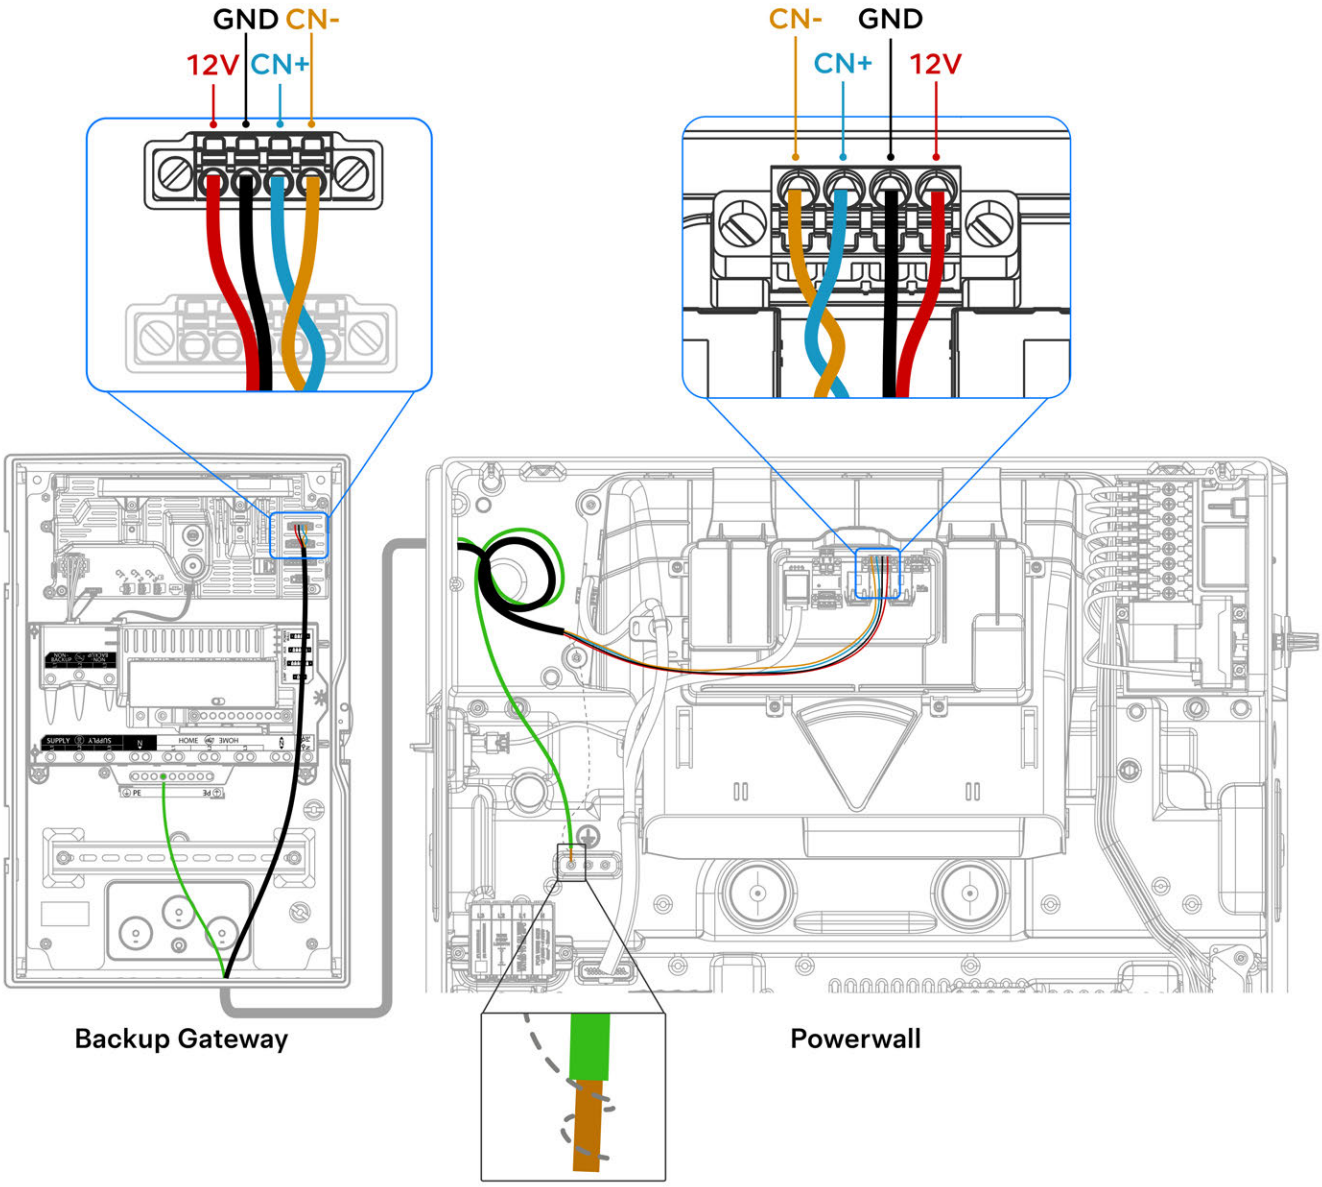


Option 2 (DRM0 Installations): Connect GUAC Interface Device to Powerwall 3P and Backup Gateway 2

Some installations may require DRM0 functionality per AS/NZS 4777.2, which allows the DNSP to control the system when needed. The following are required components of the DRED:

- **DRED Controller**: This device (often provided by the DNSP or a similar entity) receives DRM commands from the utility to the home installation.
- **Tesla Grid Utility Ancillary Controller (GUAC) DRED Interface Device (Tesla P/N 2163703-xx-y)**: Converts signal from DRM to shut down / reduce PV production to a System Shutdown signal for the Powerwall 3P Tesla Asset Controller (TACO).

  NOTE: The switch state is normally closed.

- **2-Wire Communication Cable**: Used to connect the DRED controller to the GUAC interface device.

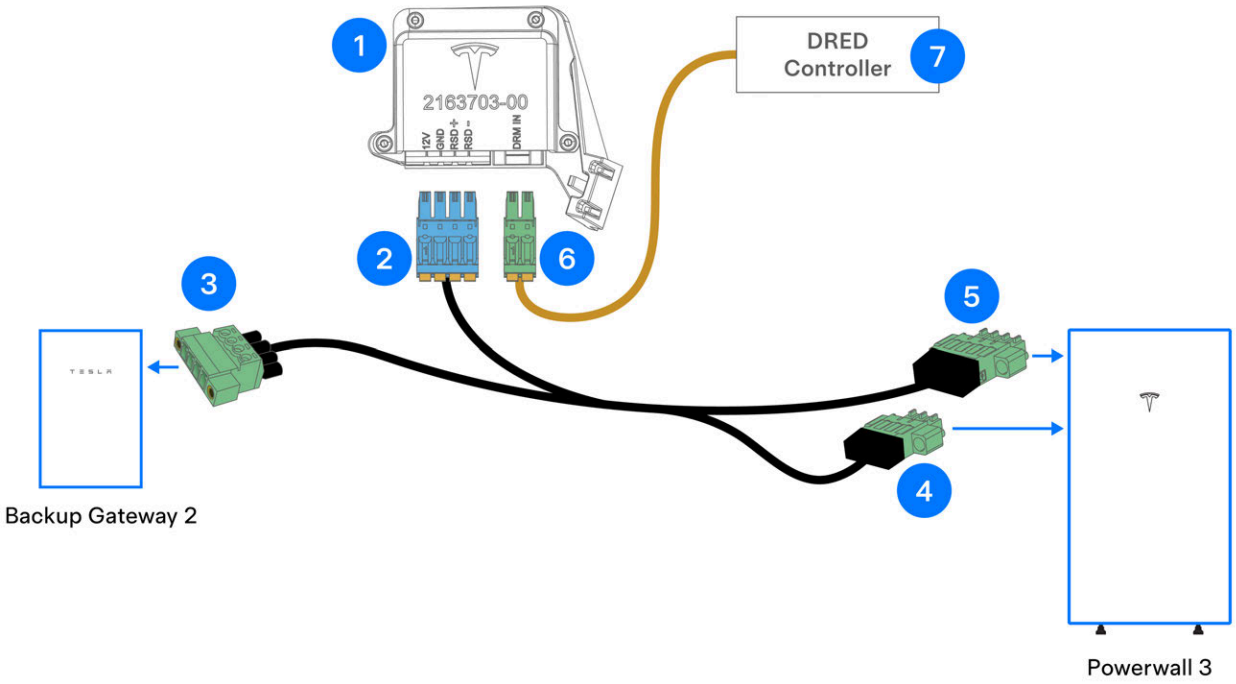


1	Tesla GUAC Interface Device
2	Blue 4-pin connector, plugs into GUAC
3	Green female 4-pin connector, wiring is connected from ***Backup Gateway 2 CAN & 12V*** connector
4	Green 3-pin connector, plugs into ***Powerwall 3P RSD*** socket
5	Green 4-pin connector, plugs into ***Powerwall 3P CAN & 12V*** socket
6	Green 2-pin connector, connects DRED controller to GUAC (not part of GUAC wiring harness)
7	DRED controller


STEP 5: CONNECT POWERWALL 3P TO BACKUP GATEWAY

Connect Backup Gateway 2 and Powerwall 3P to the GUAC interface device:


1. At Powerwall 3P, remove the 4-pin ***Powerwall 3P CAN & 12V*** connector and the 3-pin ***System Shutdown*** connector.
    a. Save the 4-pin ***Powerwall 3P CAN & 12V*** connector for a future step.
    b. Recycle the 3-pin ***Powerwall 3P RSD*** connector, as it will not be used in this installation.

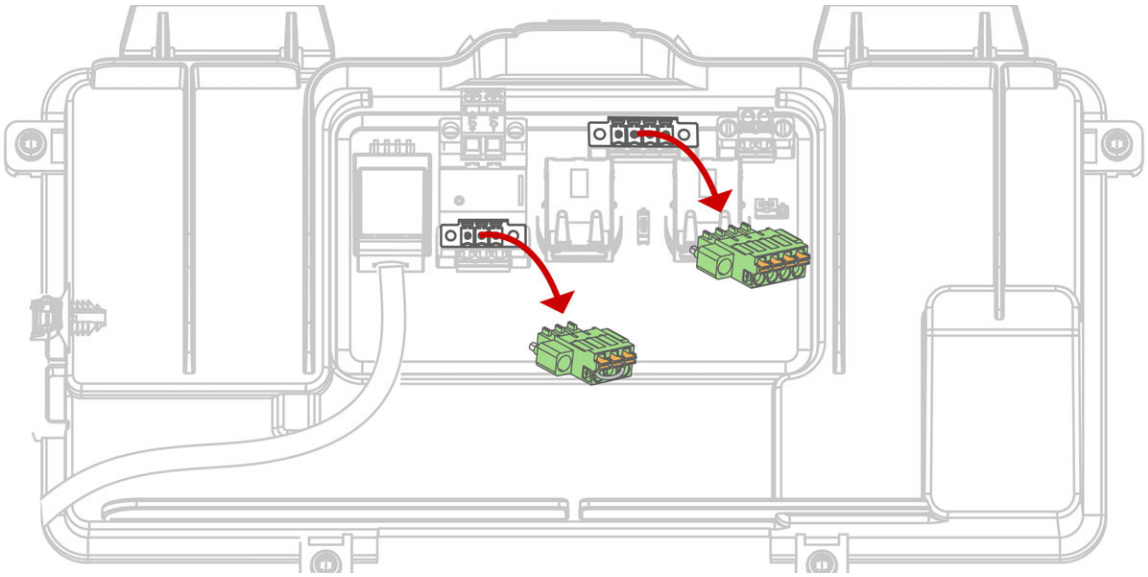


2. Take the communication wiring previously routed from Backup Gateway 2 and strip the wire jacket about 76 mm, then strip each conductor 8 mm.
3. Connect the communication wiring to the 4-pin connector from *Step 1* above, then plug that connector into the female 4-pin connector on the GUAC interface device wiring harness.

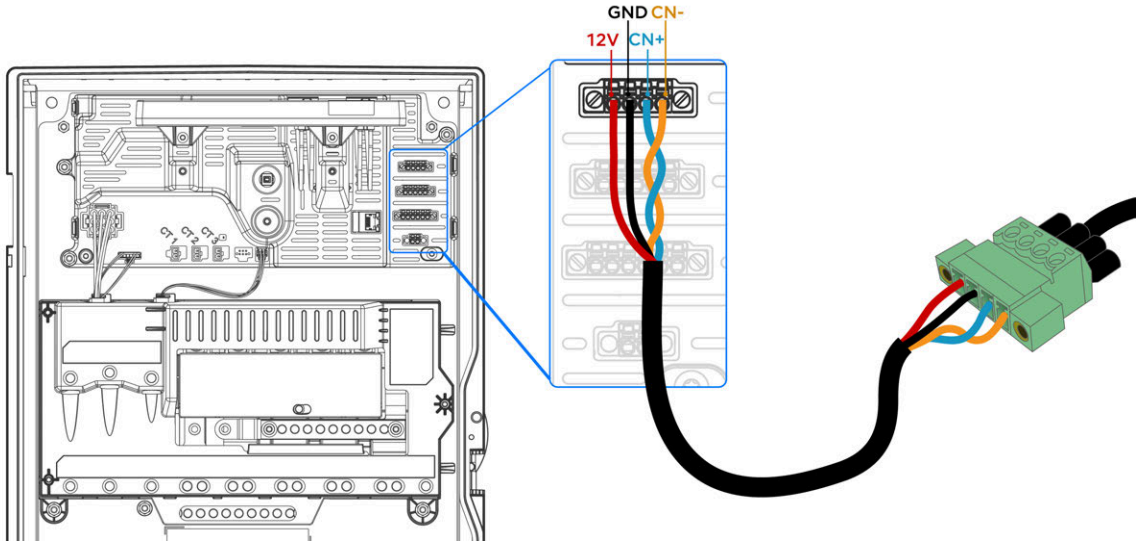

4. Plug the green 4-pin male connector on the GUAC interface device wiring harness into the open ***Powerwall 3P CAN & 12V*** socket. Tighten the screws on the connector.
5. Plug the 3-pin connector on the wiring harness into the open ***Powerwall 3P RSD*** socket. Tighten the screws on the connector.

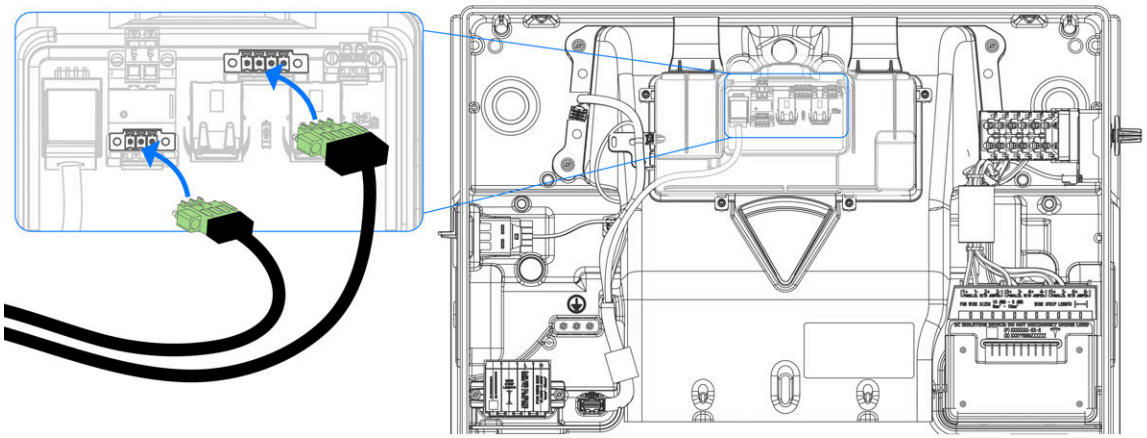


6. Plug the remaining blue 4-pin connector into the GUAC interface device.

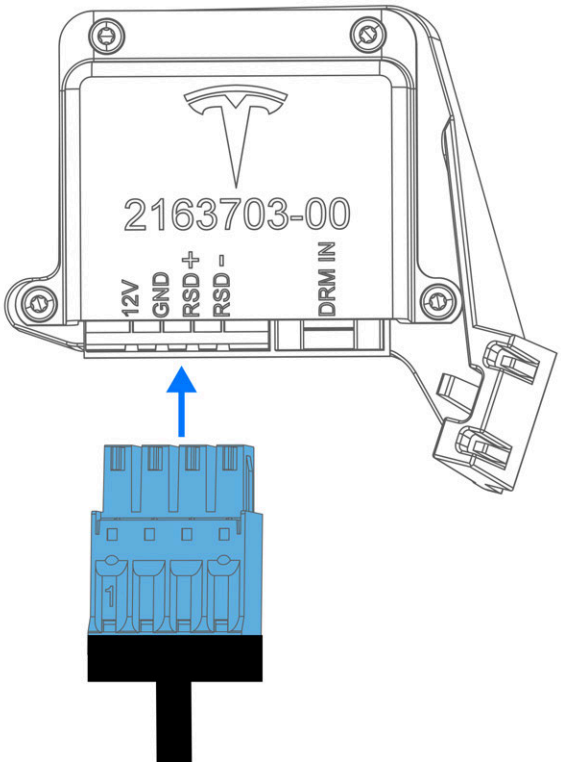


7. Install the utility-side DRED controller in the appropriate location per local requirements.
8. Using the 2-wire communication cable, connect the DRED controller to the 2-pin **DRM IN** connector on the GUAC interface device, following the manufacturer's instructions and wiring diagram.

STEP 5: CONNECT POWERWALL 3P TO BACKUP GATEWAY

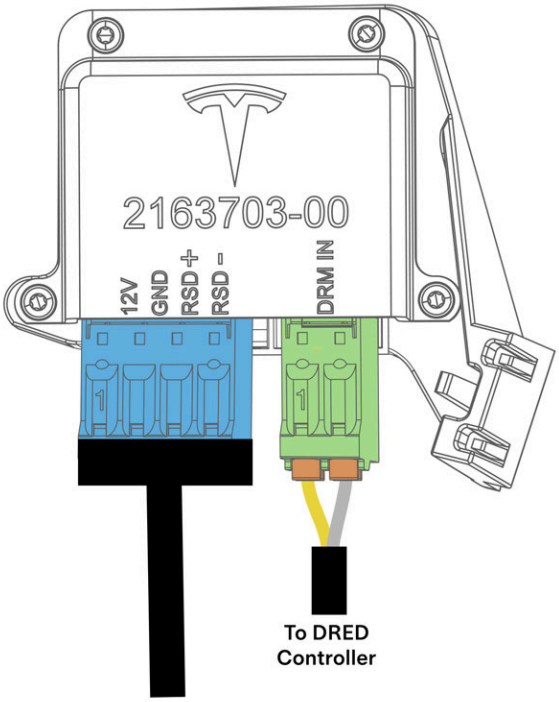

9. Arrange the GUAC interface device and all wiring on the left side of the Tesla Asset Controller (TACO), then clip the interface device to the plastic connector on the side of the TACO.

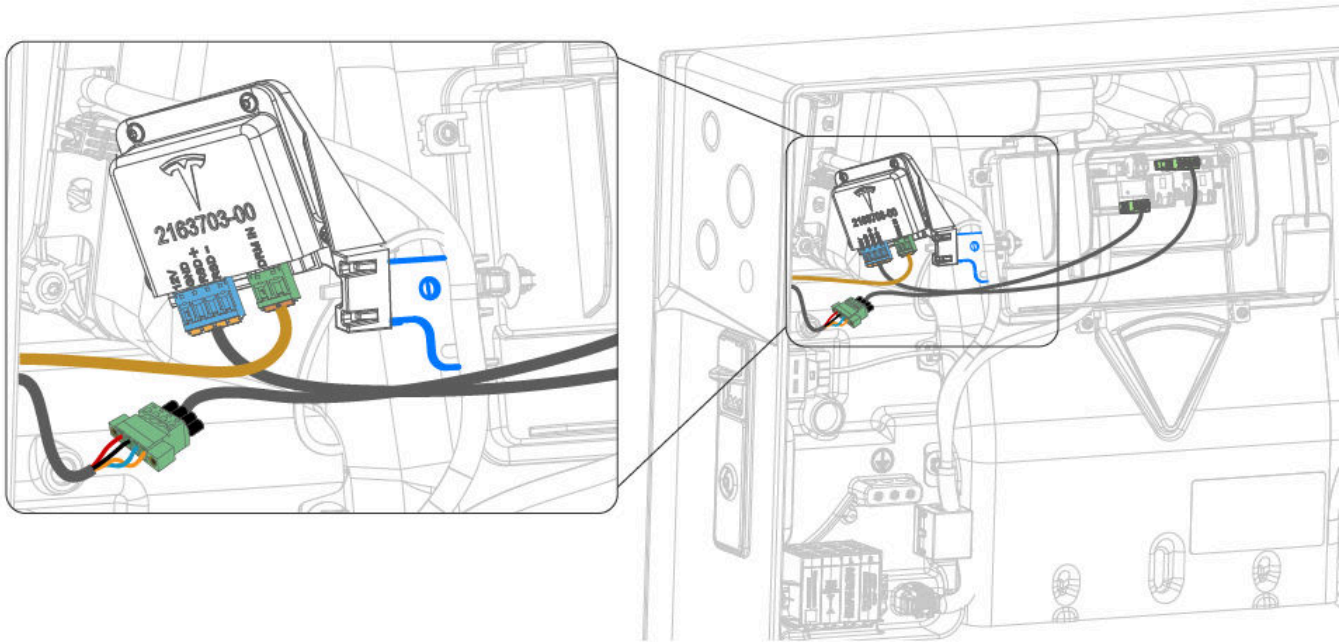


10. During *device setup in Tesla One*, configure the switch for DRM0 functionality:
    a. From *Advanced Settings*, select **External Switch**.
    b. Toggle *Configure External Switch* **ON**.
    c. From the *Control Behavior* menu, select **DRM0**.

11. Verify that the system functions normally by unplugging the DRED controller wiring connector from the GUAC. Confirm the inverter shuts down as expected.


NOTE: The inverter will not shut down if the switch has not been configured as described in Step 10.

Figure 29. Completed GUAC Interface Device Installation

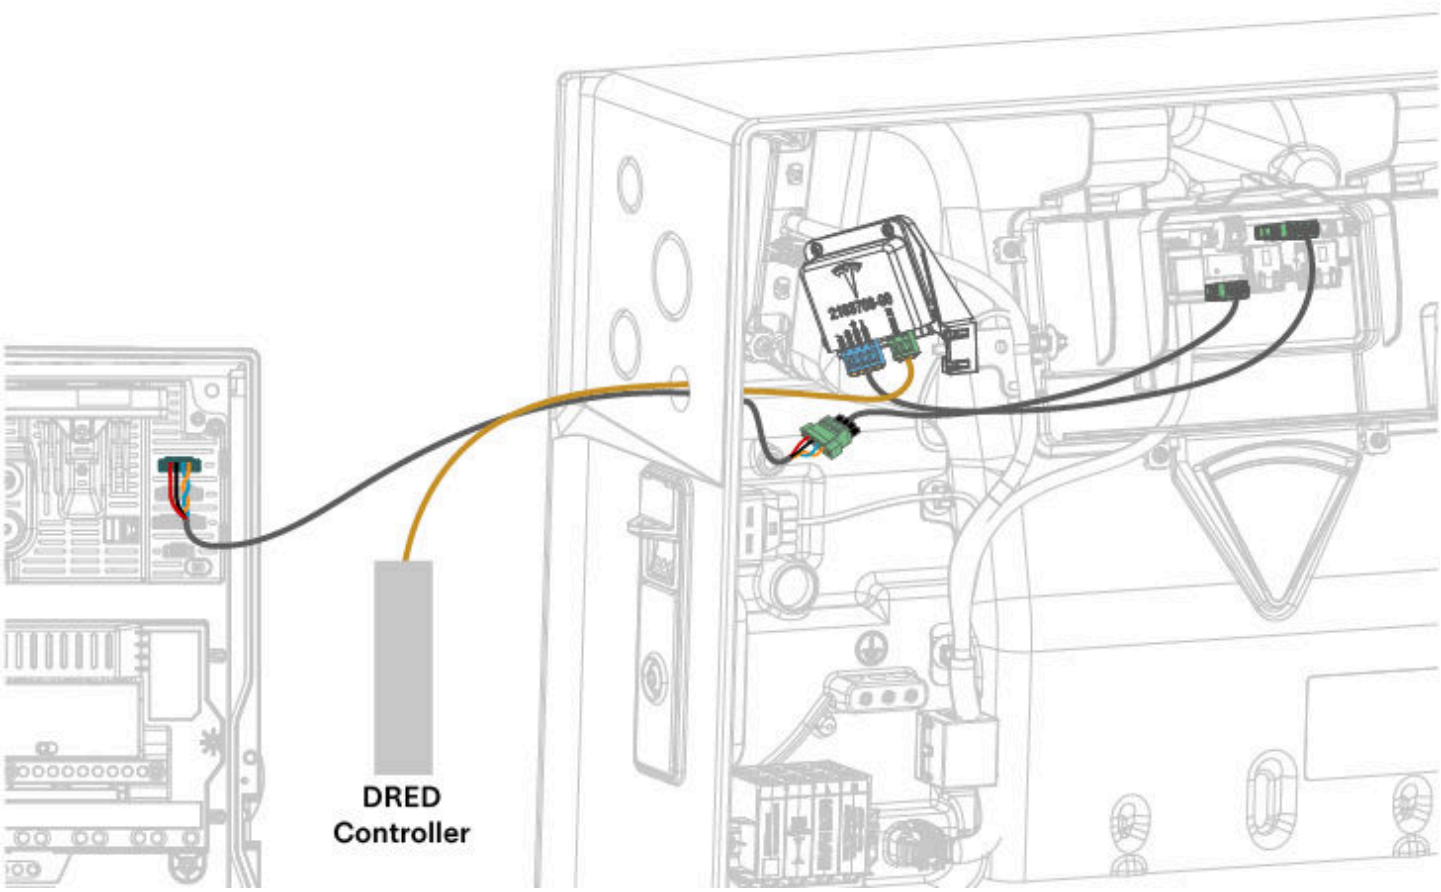

STEP 6: MAKE POWERWALL 3P AC CONNECTIONS

1. Before terminating any conductors inside Powerwall 3P, turn the Powerwall 3P switch OFF to shut the system down, then turn the integrated DC isolator OFF.

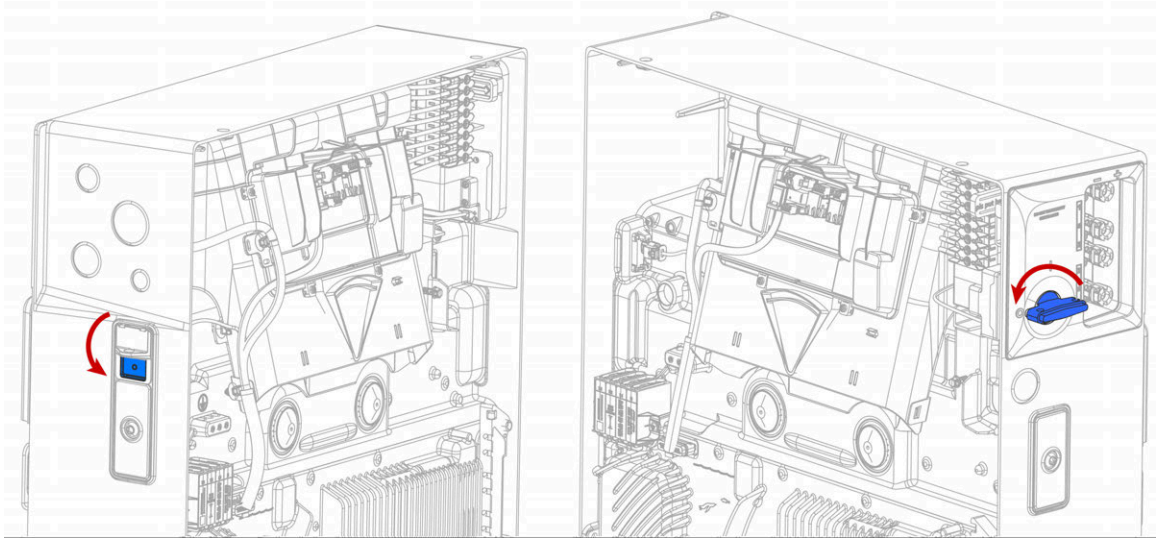


WARNING: Before proceeding, confirm both switches are OFF and there is a lack of voltage at the AC and PV terminals.

2. Run the AC conductors (Line(s), Neutral, and the Protective Earth) through the conduit or cable gland. Route the conductors to the appropriate terminals, creating a service loop with the extra wiring.
3. Clear out any debris that may be present in the AC wiring terminals.

WARNING: Metal debris like loose wires or metal shavings could create a high voltage risk when Powerwall is turned on.


4. Connect the Protective Earth:
    a. Strip the conductor insulation up to 19 mm.
    b. Insert the Protective Earth conductor in an equipment grounding terminal and tighten the screw in the Earth terminal to 4 Nm.

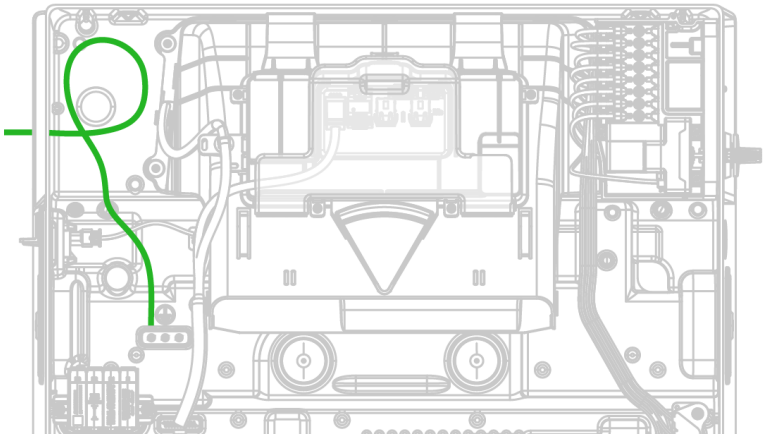

NOTE: It is best practice to connect the Protective Earth circuit before making any AC circuit connections.


5. Use an AC phase sequence tester such as the *Fluke 1662/3/4* to determine each conductor's phase before connecting the conductors to Powerwall 3P. If any phases are swapped (at Powerwall or upstream), correct them before proceeding.

CAUTION: Powerwall 3P only supports clockwise (right) phase sequence rotation (L1 → L2 → L3).

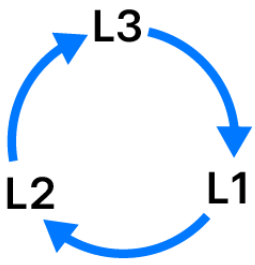


CAUTION: If the phase sequence is incorrect, the home loads may become reversed or damaged when the system goes off-grid and Powerwall begins powering the home.

Figure 30. Example Phase Sequence Test

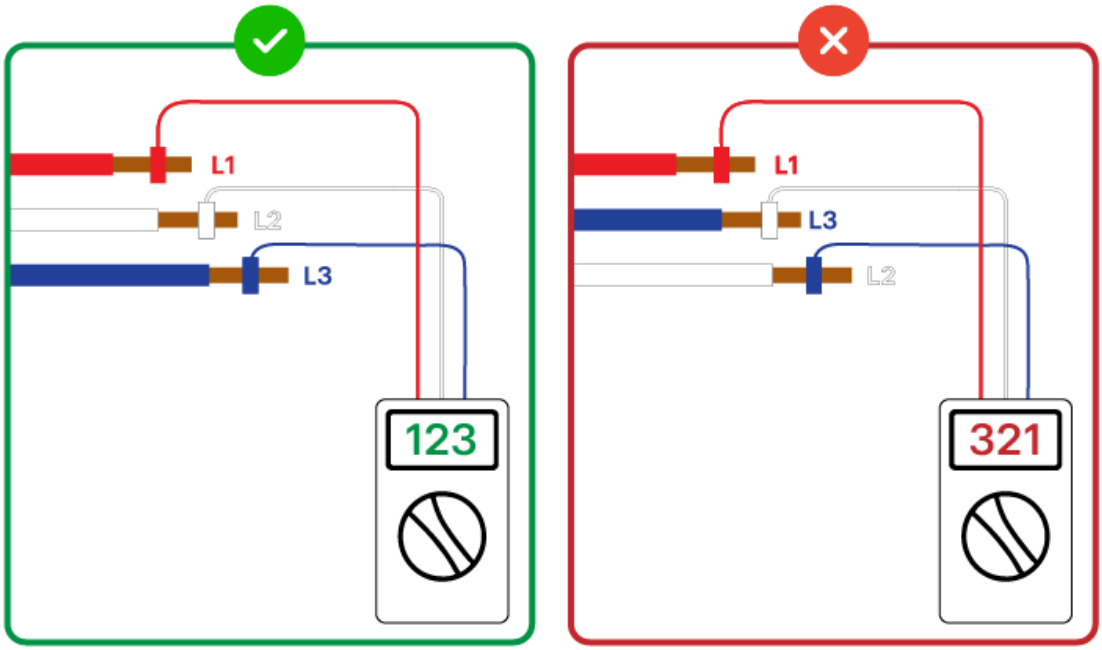


6. For each AC conductor:
   a. Strip the conductor insulation up to 19 mm. Add a wire ferrule if the conductor is finely stranded.
   b. Insert the conductor as far as possible into the terminal.

Figure 31. Insert Conductor in Terminal

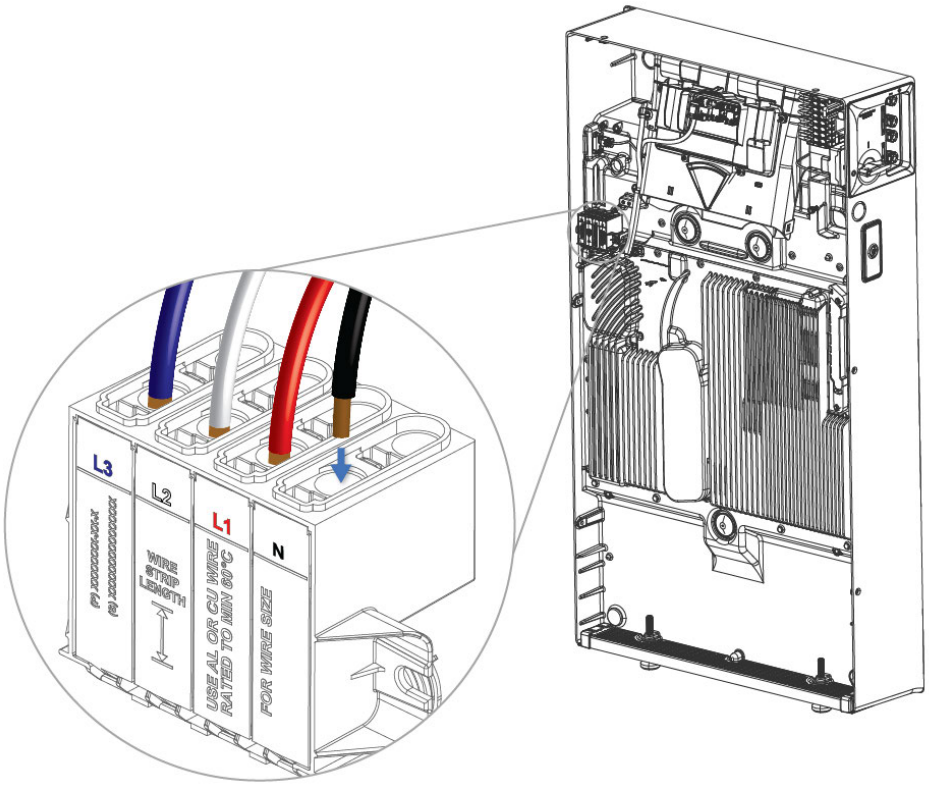


WARNING: Ensure the conductors are inserted into the round terminals and not the rectangular slots. Inserting the conductors anywhere other than the round terminals will result in poor wire termination.

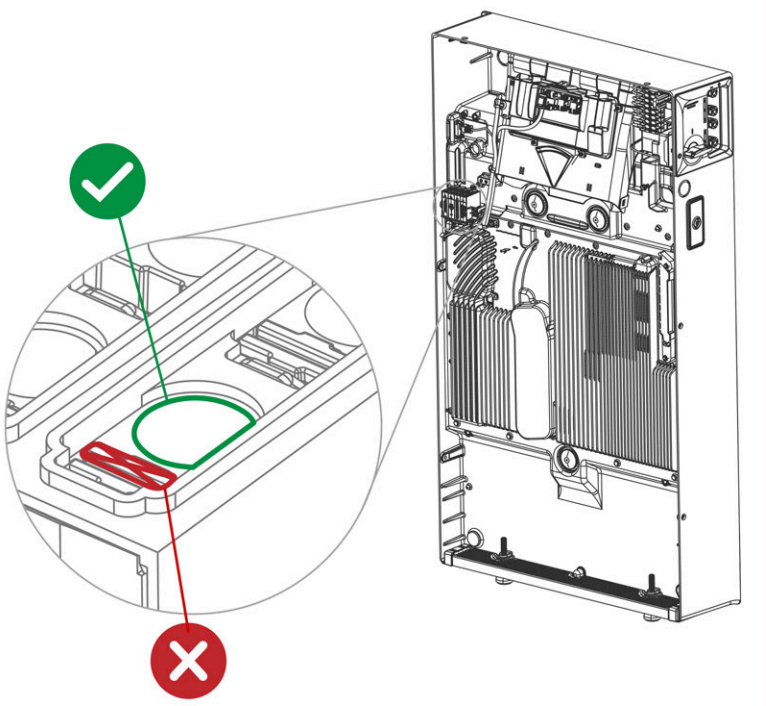

c. Perform a pull test to ensure the conductor is fully seated in the terminal. Push the conductor back in after the pull test.

Figure 32. Powerwall 3P AC Wiring

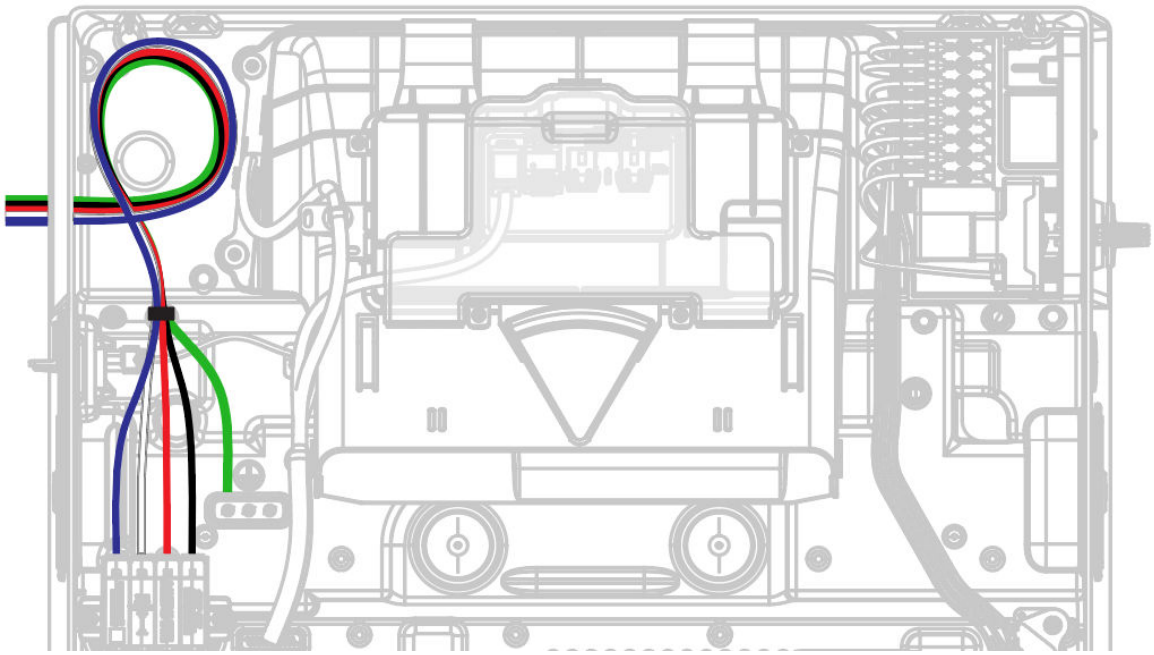


NOTE: Route the AC conductors from the knockouts on the left side of Powerwall 3P as shown above. The knockout on the right side of Powerwall 3P should only be used for the PV Protective Earth conductor.


d. After installing the conductors, gather them and secure them with the provided cable tie as shown above.

NOTE: If a conductor must be removed from the connector, insert a small slotted screwdriver into the actuation shaft to open the terminal. Pull the conductor free, then remove the screwdriver.

Figure 33. Spring Terminal with Screwdriver and Insert Conductor in Terminal

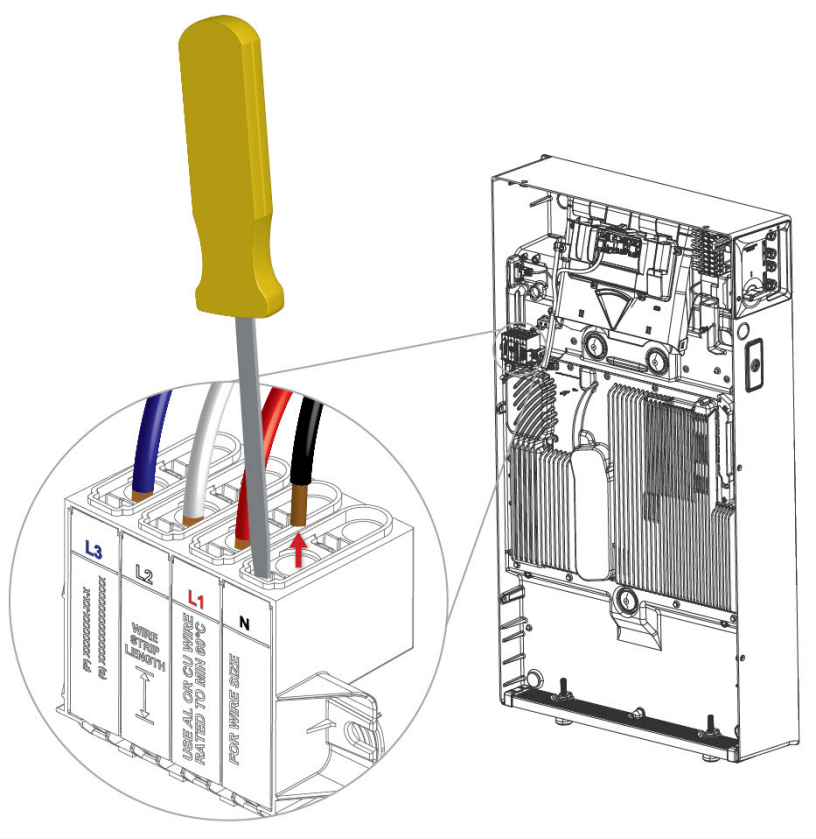


7. On the Powerwall 3P product label on the left side of the unit, use a paint pen, permanent marker, or similar to mark the configured power / current output.

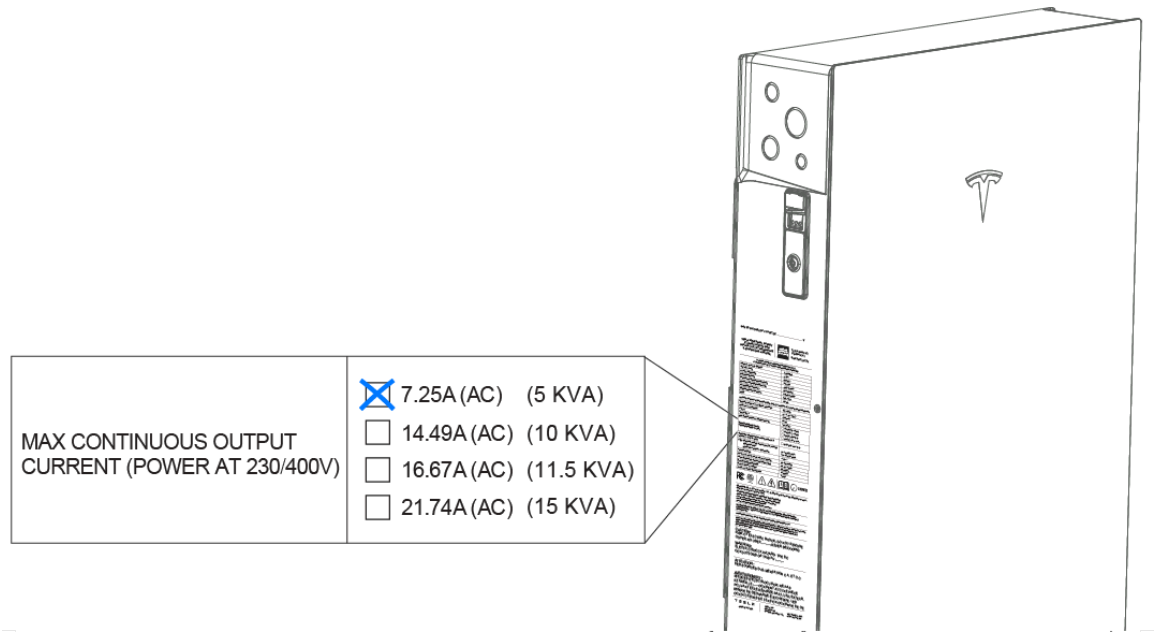


8. On the left side of Powerwall 3P, apply the model number label above the product label, then mark the appropriate **Inverter Rating** and **Energy Capacity** boxes on the label depending on the configured power / current output and number of Expansion units installed. In the following example, the Powerwall 3P has been configured with a power output of 5 kVA and has been installed with one Expansion unit.

Model Number:	-	Inverter Rating		-	Energy Capacity (kWh)	
1988000	-	5 kVA	X	-	13.5	
		10 kVA		-	27	X
		11.5 kVA		-	40.5	
		15 kVA		-	54	

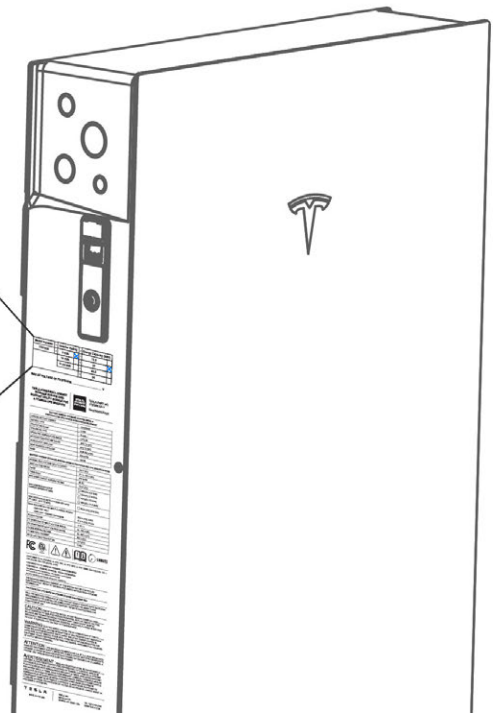

NOTE: For Powerwall 3P systems installed with Expansion unit(s), Tesla recommends connecting the Expansion Harness to the port on the right side of the leader Powerwall 3P so that the model number label on the left side of the unit is not obscured.

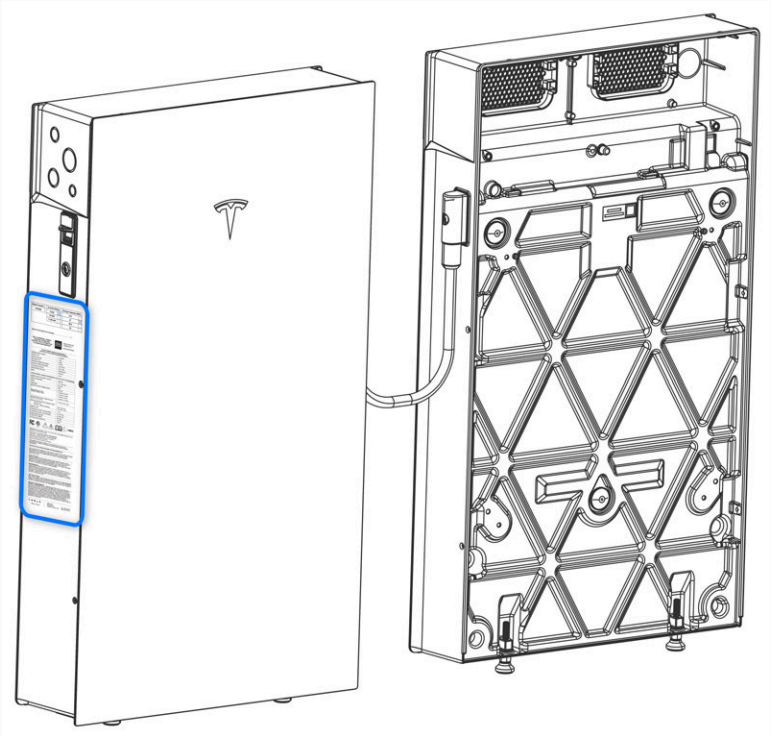

Install Clamp-on Ferrite Cores

If the Powerwall 3P unit or Expansion unit is shipped with ferrites, refer to *Powerwall 3P Installation Note: AC and DC Ferrites Installation*.

STEP 7: MAKE SOLAR PV CONNECTIONS


CAUTION: Only connect PV wires to the MC4 connectors in the integrated DC isolator as described in this step. Do not attempt to modify factory-installed wiring or connect PV wires to any other terminals.

NOTE: See *Powerwall 3P AC and PV Wiring on page 122* for wiring specifications.

NOTE: As noted in *Design Considerations on page 22*, third party MLPE solutions, such as optimizers, are not compatible with Powerwall 3P.


NOTE: If there are more than four PV strings, strings can be combined upstream of Powerwall 3P so long as the voltage and current ratings of the system do not exceed the capabilities of Powerwall 3P.

1. Before connecting PV strings, turn the Powerwall 3P switch OFF to shut the system down, then turn the integrated DC isolator OFF. See *Powerwall 3P Switch Locking Mechanisms on page 138* for instructions to lock the integrated DC isolator in the OFF position.

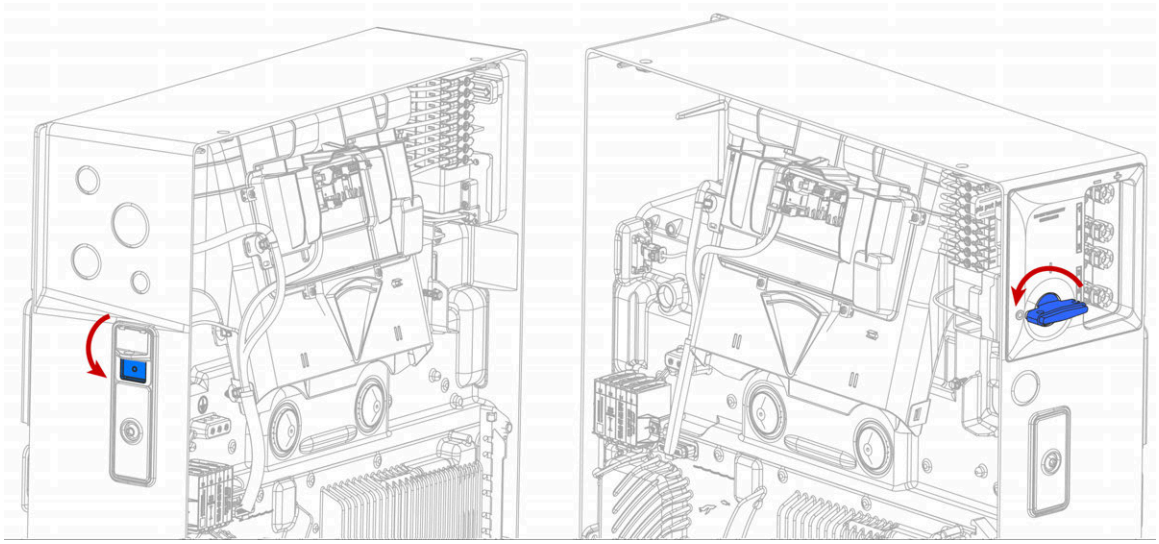

WARNING: Before proceeding, confirm both switches are OFF and there is a lack of voltage at the PV terminals.

2. Before connecting the PV strings to Powerwall 3P, use a PV string tester to test each string, confirming it is performing as expected. Refer to the testing requirements of AS/NZS5033:2021 cl 6.3.2.
    - Perform a string polarity test to confirm each string's positive and negative connectors are correctly identified before crimping MC4 connectors onto them and connecting them to Powerwall 3P.
    - Perform an insulation resistance test to confirm there are not ground faults or damaged wiring insulation in the PV string.
3. Route the PV array Protective Earth into the enclosure, through the conduit or cable gland. Create a service loop with extra wiring.
4. If required, connect the PV array Protective Earth to an equipment grounding terminal in Powerwall:
    a. Strip the conductor insulation up to 19 mm.
    b. Insert the Protective Earth conductor in an equipment grounding terminal and tighten the screw in the Earth terminal to 4 Nm.

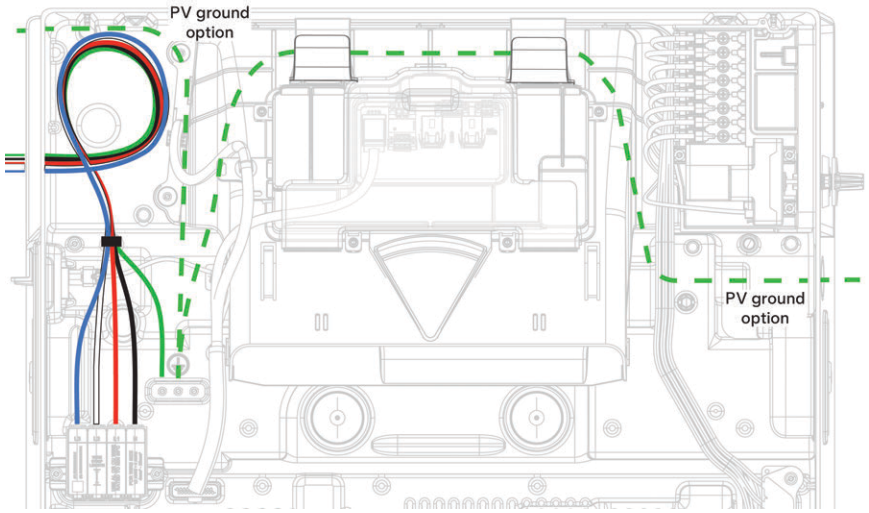


NOTE: Connect the Protective Earth conductor according to local regulations. In some jurisdictions this may mean connecting the Protective Earth conductor to the home electrical panel rather than to Powerwall 3P.

NOTE: It is best practice to connect the Protective Earth circuit before making any PV circuit connections.

NOTE: As shown above, the knockout on the right side of Powerwall 3P should only be used for the PV Protective Earth conductor. The PV Protective Earth conductor can be routed from either the right side or left side of Powerwall 3P. Route the AC conductors from the left side of Powerwall 3P.

5. Before crimping MC4 connectors onto the PV conductors, ensure there is enough excess wire to form a drip loop once the conductors are connected to Powerwall 3P.

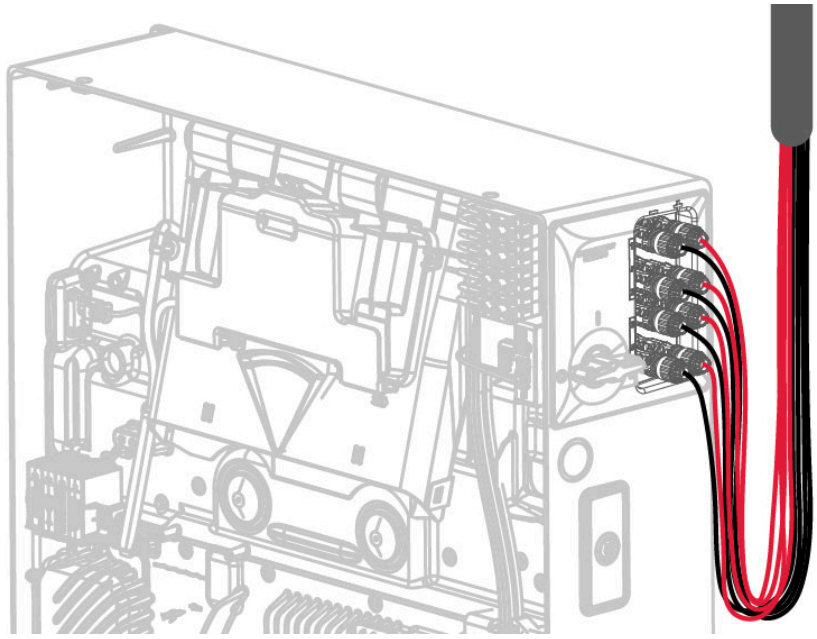

CAUTION: The drip loop is required to ensure moisture is redirected away from the connectors and Powerwall.

6. Crimp MC4 connectors onto each of the PV conductors, tightening and torquing each connector as prescribed by Stäubli.

CAUTION: Only genuine Stäubli Original MC4, MC4-Evo 2, or MC4-Evo ready connectors are compatible with Powerwall 3P (see *Compatible Stäubli MC4 Parts on page 36* for Stäubli part numbers). Using any other type of connector will void the Powerwall 3P warranty.

Figure 34. Stäubli Original MC4 Connector


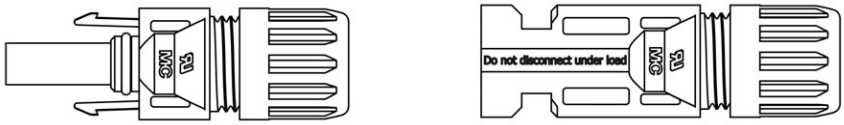


Figure 35. Stäubli MC4-Evo 2 Connector



Figure 36. Stäubli MC4-Evo Ready Connector




CAUTION: See official Stäubli guidance for installing MC4 connectors:

- *Stäubli video to assemble and crimp Stäubli Original MC4 or Original MC4-Evo 2 solar power connectors*
- *Stäubli video to assembly crimp-free MC4-Evo ready connectors*


See the *Stäubli Assembly Instruction video playlist* for video content in additional languages. See *Required Tools on page 37* for the required Stäubli crimping tools.

7. At Powerwall 3P, remove the MC4 caps from any MC4 connector that will have a PV string connected to it.

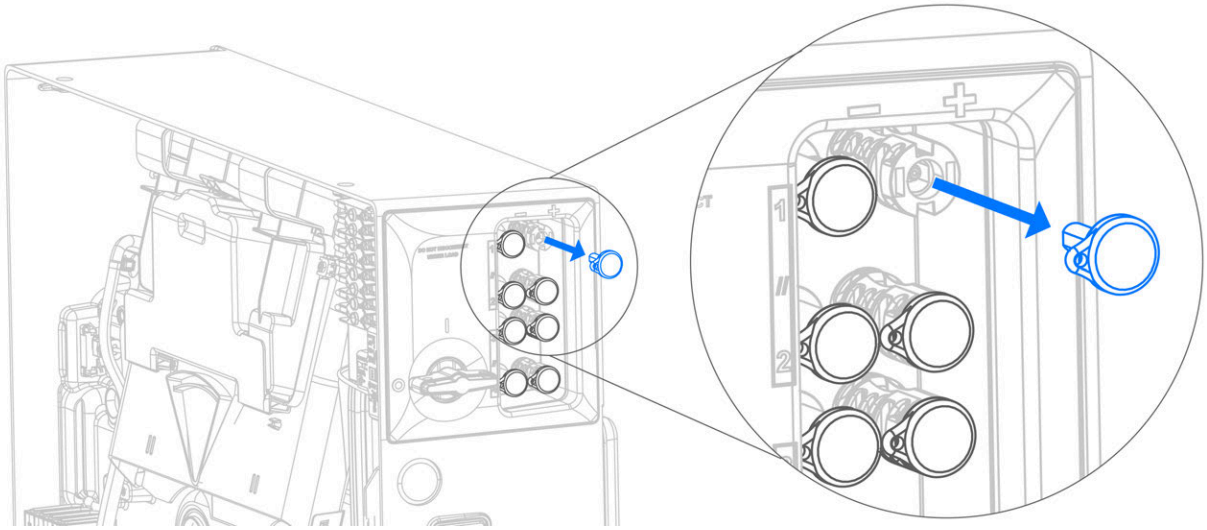


CAUTION: The MC4 caps must remain installed on the MC4 connectors unless a PV string is connected, as the caps ensure Powerwall 3P maintains its ingress rating.

8. Connect each pair of conductors to the MC4 connectors on Powerwall 3P, connecting String 1 to the topmost MC4 connectors (MPPT 1), and String 4 to the bottommost MC4 connectors (MPPT 4).

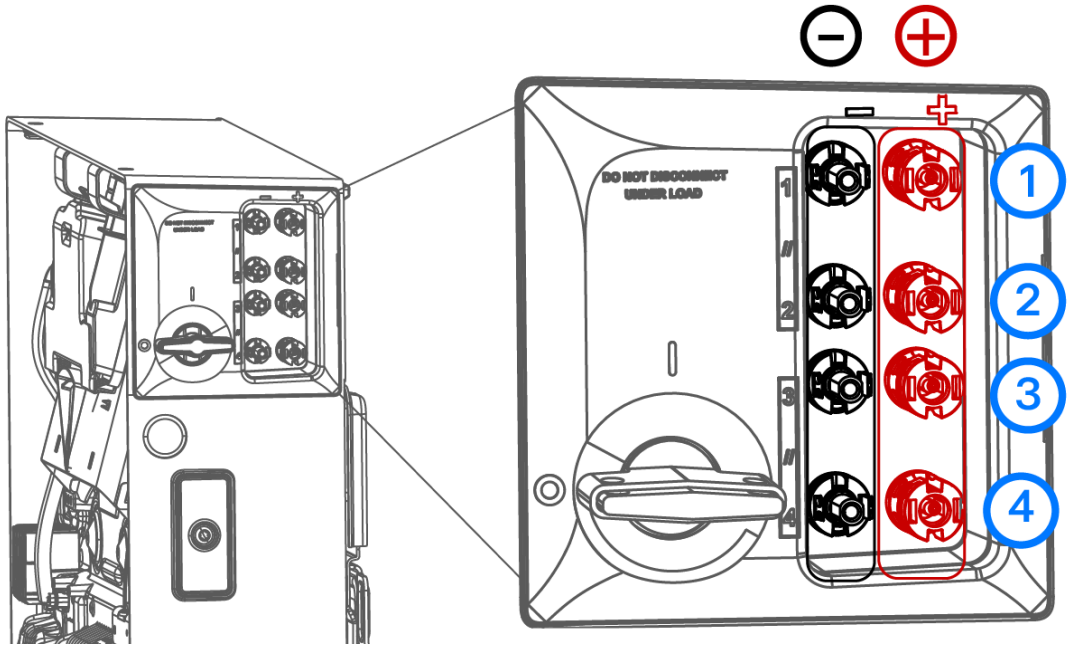


Disconnect MC4 Connectors Using Provided Tool

If needed, the MC4 connectors can be disconnected using the provided 90 degree MC4 disconnect tool.

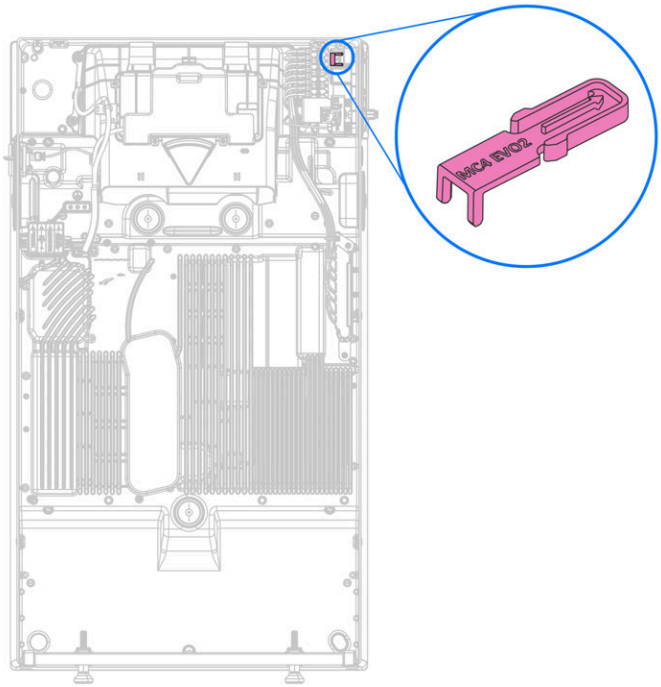


1. To disconnect the MC4 connectors for either String 1 (top string) or String 3 (third string from top), insert the forked end of the tool with the forks pointed UP:

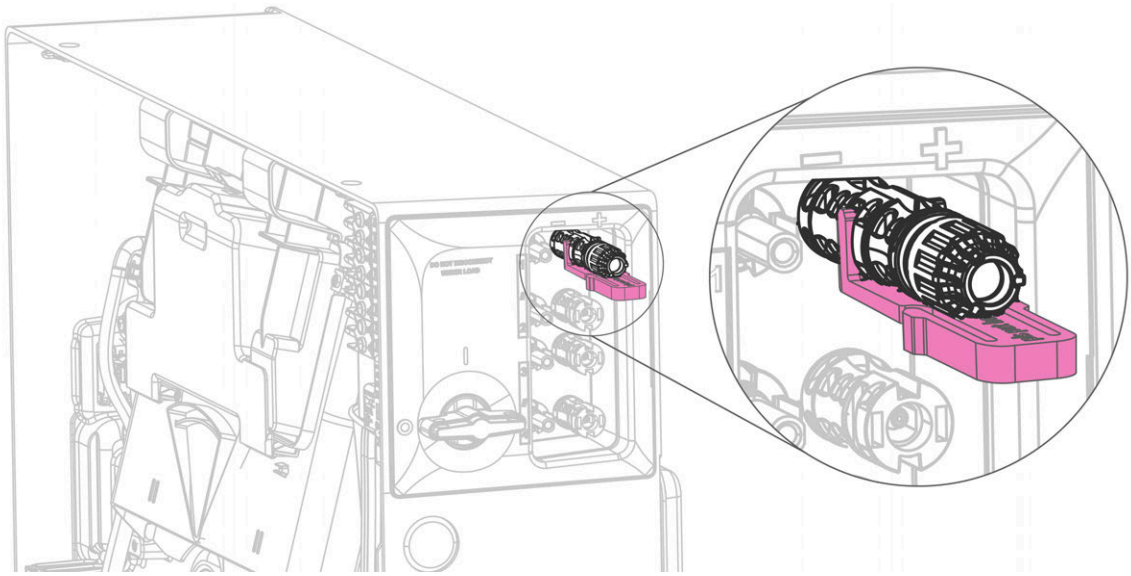


2. To disconnect the MC4 connectors for either String 2 (second string from top) or String 4 (bottom string), insert the forked end of the tool with the forks pointed DOWN:


STEP 7: MAKE SOLAR PV CONNECTIONS

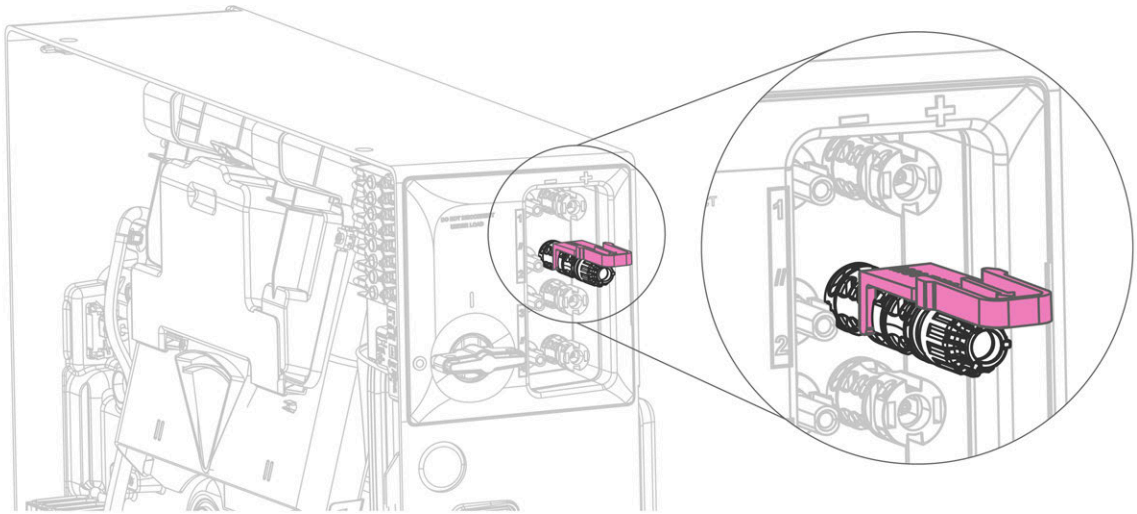

CAUTION: The MC4 caps must remain installed on the MC4 connectors unless a PV string is connected, as the caps ensure Powerwall 3P maintains its ingress rating.

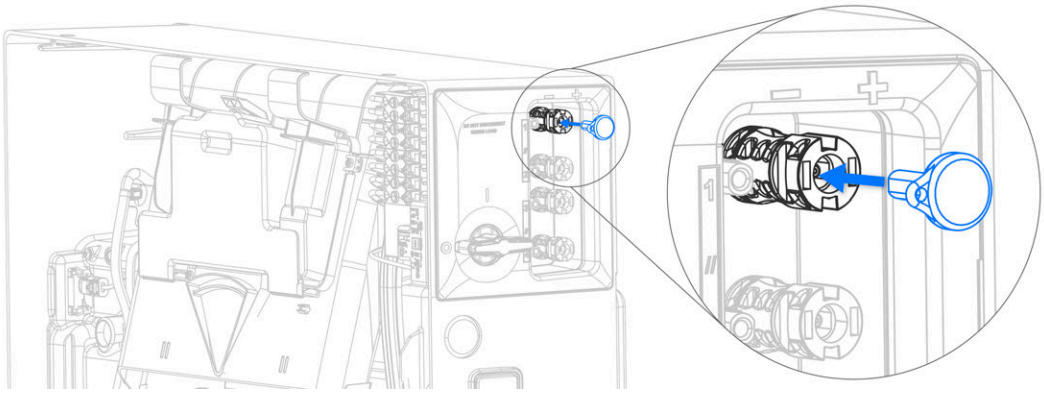

NOTE: Place the MC4 disconnect tool in the Powerwall 3P enclosure so that it is available if needed in the future.

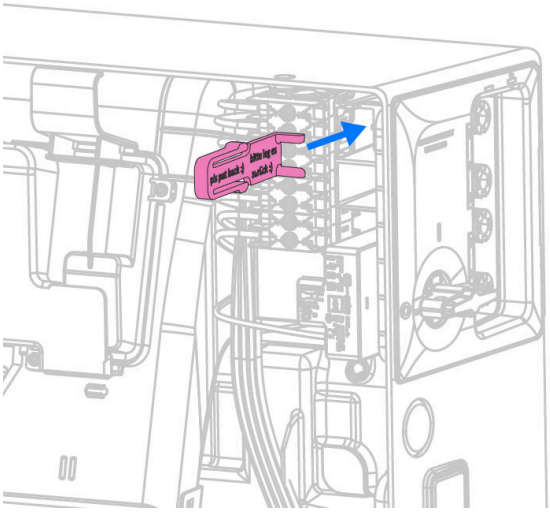

STEP 8: INSTALL ENERGY METERING

Before you start, see *Energy Metering on page 27* to find the available metering options and the example metering diagrams.

For Backup Gateway 2 Primary Meter X, there is no additional step required to install the meter or CTs as they are integrated in Backup Gateway 2. For Backup Gateway 2 Secondary Meter Y, Tesla 100A CTs must be installed and connected to the Meter Y CT terminals (see *Install Tesla 100 A CTs on page 89* for the installation instructions).


Depending on the site layout, it may not be possible to use the Backup Gateway 2 internal meters. Tesla Remote Meter and Tesla 200 A or 800 A CTs can be installed when needed (see *In the Tesla Remote Meter Box on page 90* for the installation instructions).

Install Tesla 100 A CTs

WARNING: Before installing, disconnecting, and/or adjusting CTs, ensure the circuits being measured are not energized and the system is completely powered down. Failure to de-energize the system may compromise operator and equipment safety.


1. Plug the Tesla 100 A CT into the terminal in the Backup Gateway. Ensure the connector is fully seated in the terminal.
2. Clamp the CT around the conductor to be measured.

Figure 37. Embedded Site CTs and Solar CT Connectors

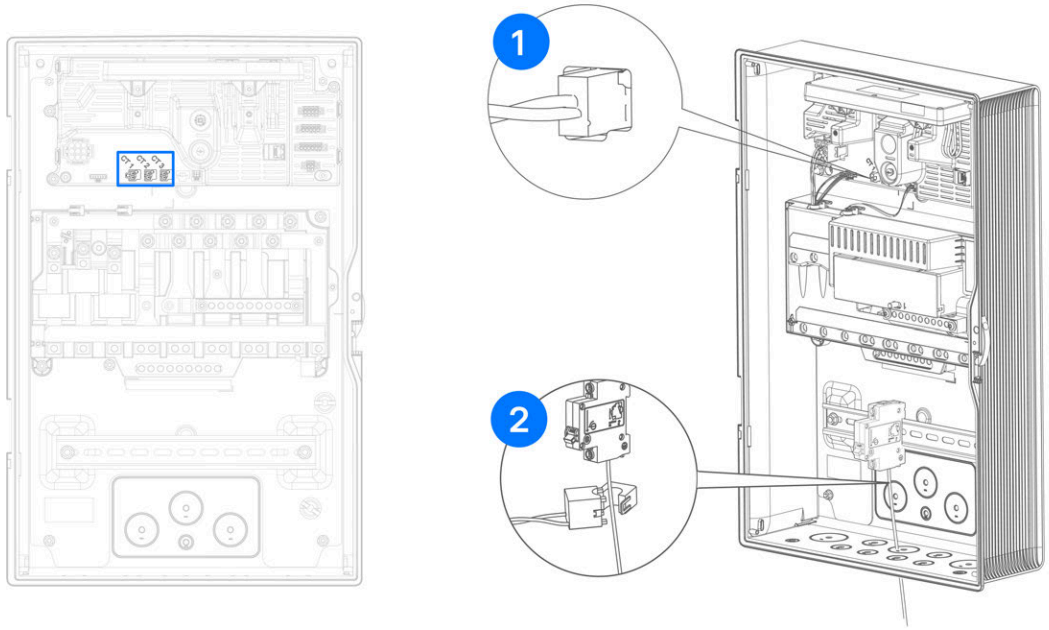

Tips


- Ensure CTs are facing the proper direction as indicated on the label. A CT will show negative current if installed backwards.

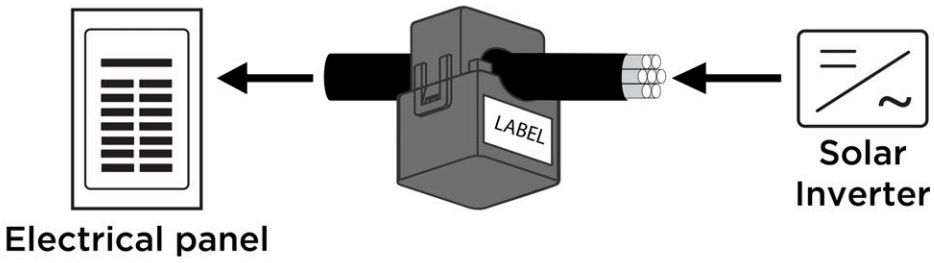

In the Tesla Remote Meter Box

Tesla Remote Meter Kit Contents

- Tesla P/N 2083765-xx-y

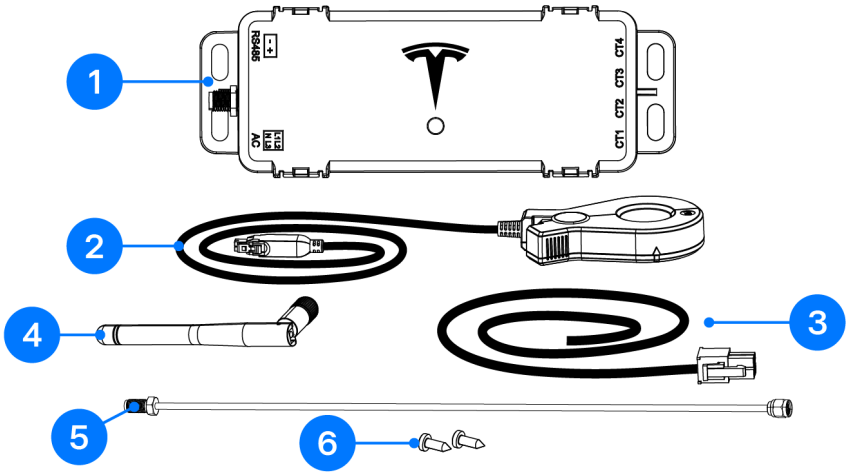

	Part Description	Quantity
1	Tesla Remote Meter	1
2	Tesla 200 A CT (1.5 m)	1
3	Voltage harness (600 mm)	1
4	External antenna	1
5	Antenna extension	1
6	Fasteners	2
Not pictured	RS-485 harness (1.2 m)	1

Tesla Remote Meter Accessories

The following accessories are compatible with Tesla Remote Meter and they can be ordered individually wherever required.


Part Description	Tesla P/N	Quantity
Tesla 200 A CT (1.5 m)	2033376-xx-y	1
Tesla 800 A CT (1.5 m)	2302437-xx-y	1
CT extension (3.5 m)	2060713-xx-y	1
CT Y-splitter	2232110-xx-y	1

About Tesla Remote Meter

Tesla Remote Meter Overview


Tesla Remote Meter can be connected to Powerwall 3P via Wi-Fi or an RS-485 (RS485) wiring harness.

Figure 38. Location of RS-485, AC, and External Antenna Terminals

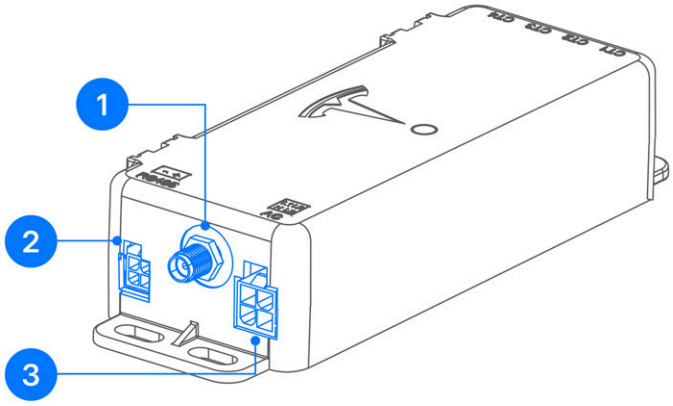

1	External antenna input
2	RS-485
3	AC power

Figure 39. Location of CT Terminals

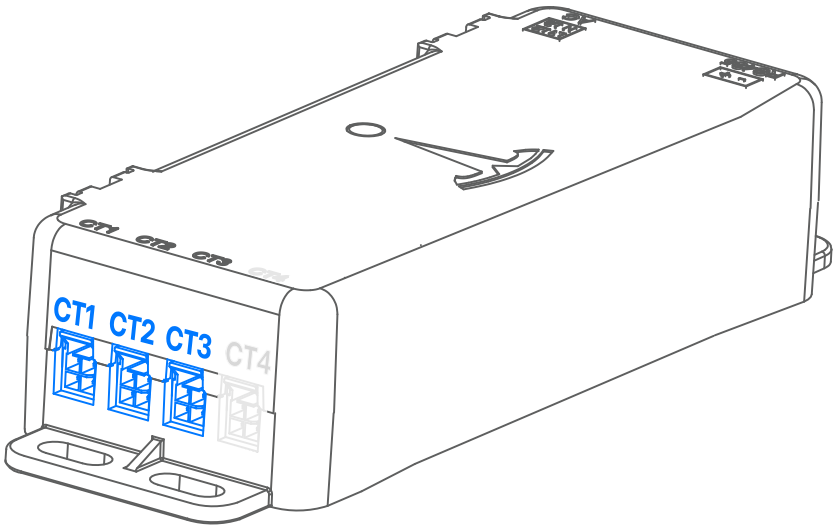


NOTE: At the time of publication, Tesla Remote Meter has (3) CT terminals. CT4 functionality will be available at a later date.

Tesla Remote Meter LED

Tesla Remote Meter has an LED which indicates the following status:

Solid green ON	Powered and operational

Figure 40. Tesla Remote Meter LED Location

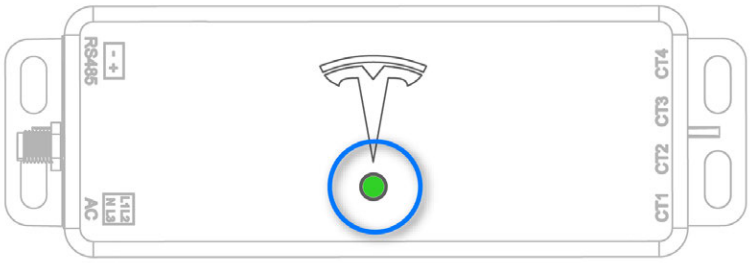

About Voltage Taps and Current Transformer Connections


The Tesla Remote Meter functions by measuring voltage (by voltage tap) and current (by Current Transformer, or CT) at key locations in the system. For the meter to function correctly, the following are critical:

1. The Tesla Remote Meter voltage line harness leads must be connected to the correct phases.

   NOTE: Regardless of the grid type the system is connected to, Tesla Remote Meter must always be connected to L1 and N. If the meter is connected to L2 and/or L3, but not L1, it will not be powered.

2. The CTs must be placed around conductors of the correct phase:
   - CT1 = L1
   - CT2 = L2
   - CT3 = L3


Figure 41. Voltage Harness Wiring and CT Placement

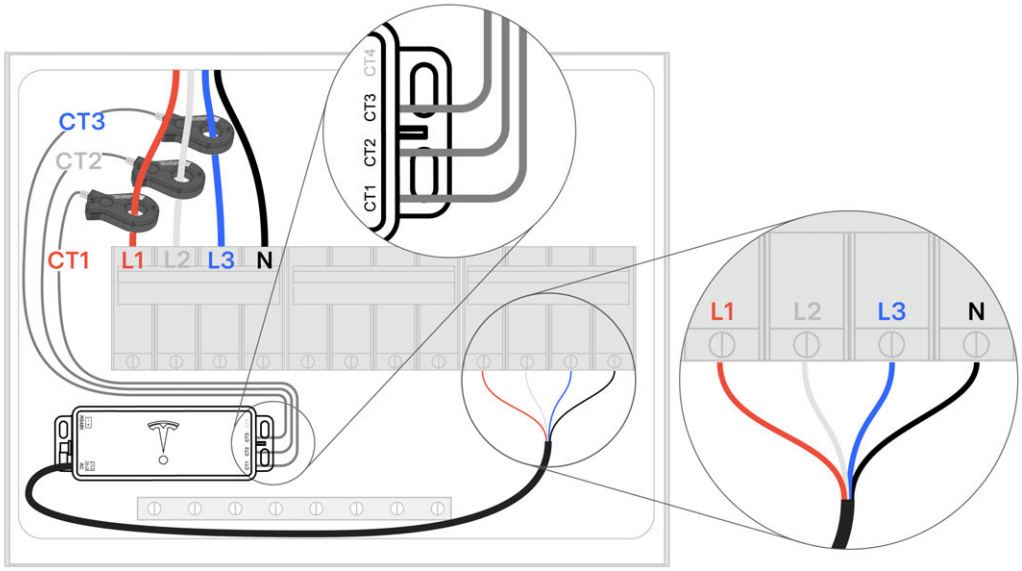

Install the Tesla Remote Meter and CTs

Plan Meter and CT Locations

Before installing the meter and/or CTs, ensure none of the following maximum distances are exceeded:

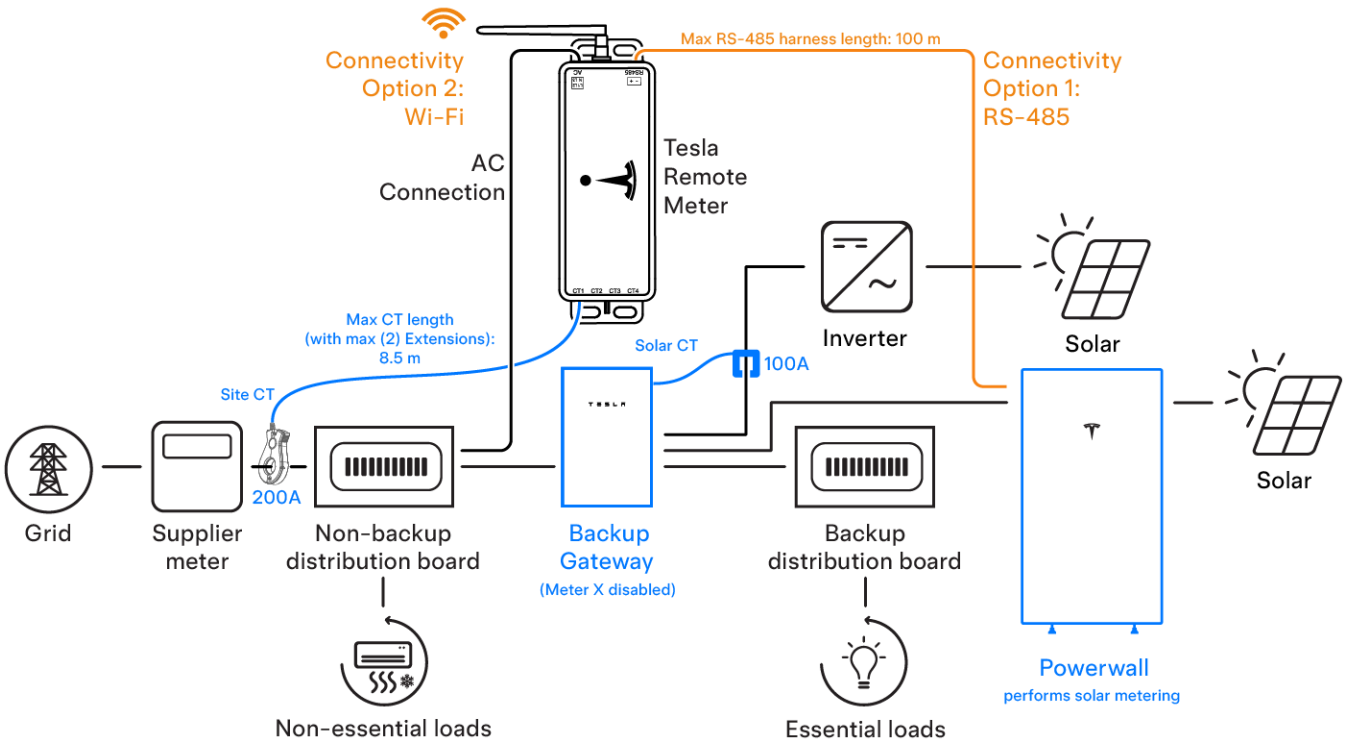


Distance to Measure	Wiring Option	Tesla P/N (if applicable)	Maximum Distance
Meter to Breaker	Voltage Harness	Not applicable (included in the kit)	600 mm
	If additional length is required: 1.5 - 6 mm^2 AC wiring	Not applicable (wiring supplied by installer)	To maintain accuracy, keep the meter within 61 m of its breaker when using 2.5 mm^2 wire
Meter to Point of Measurement	CT lead only	200 A CT: 2033376-xx-y 800 A CT: 2302437-xx-y	1.5 m
	If additional length is required: CT extension (3.5 m long)	2060713-xx-y (same extension for both 200 A and 800 A CTs)	8.5 m (CT extension (3.5 m) + CT extension (3.5 m) + CT lead (1.5 m) = max 8.5 m)
Meter to Powerwall 3P TACO (RS-485 wired connection)	RS-485 (RS485) harness	2045794-xx-y	1.2 m
	If additional length is required: 0.2 - 1.5 mm^2 communication wiring	Not applicable (wiring supplied by installer)	100 m

STEP 8: INSTALL ENERGY METERING

NOTE: A Powerwall 3P site can have a maximum of three Tesla Remote Meters: one connected via RS-485 and up to two connected via Wi-Fi.

Install the Meter

1. Using the screws provided in the meter kit, attach the meter to the inside of the main distribution board or to another surface.

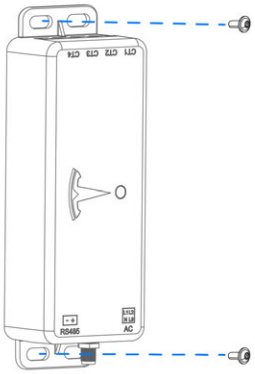

2. Connect the voltage line harness leads to a dedicated circuit breaker up to 16 A, of corresponding phase inside the distribution board.

   WARNING: Before making the AC power connections, turn the AC circuit breaker of the main service disconnect OFF and secure it against reconnection.

   NOTE: If a dedicated circuit breaker is not available, the voltage line harness can be spliced to existing breakers.

   a. **Red Wire**: Connect to L1 pole
   b. **White Wire**: Connect to L2 pole
   c. **Blue Wire**: Connect to L3 pole
   d. **Black Wire**: Connect to the circuit breaker's Neutral pole or Neutral busbar in the distribution board


3. Plug the voltage line harness into the meter (see *Location of RS-485, AC, and External Antenna Terminals on page 91*).

Install the CTs

WARNING: Before installing, disconnecting, and/or adjusting CTs, ensure the circuits being measured are not energized and the system is completely powered down. Failure to de-energize the system may compromise operator and equipment safety.

To install a CT:


1. Plug the CT into the corresponding CT terminal on the meter.

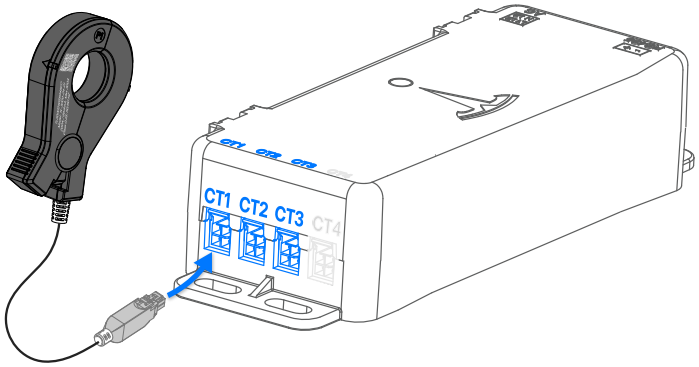

2. Open the CT and then place around the conductor(s) being measured.


NOTE: Ensure the CT is installed so that the side with white text on the CT housing is pointing towards the power source **(1)** (service entrance / grid for Site CTs, solar inverter for Solar CTs). Always verify CTs are in the correct orientation by observing power flow in the Tesla One app.

Figure 42. CT Orientation in Relation to Power Flow

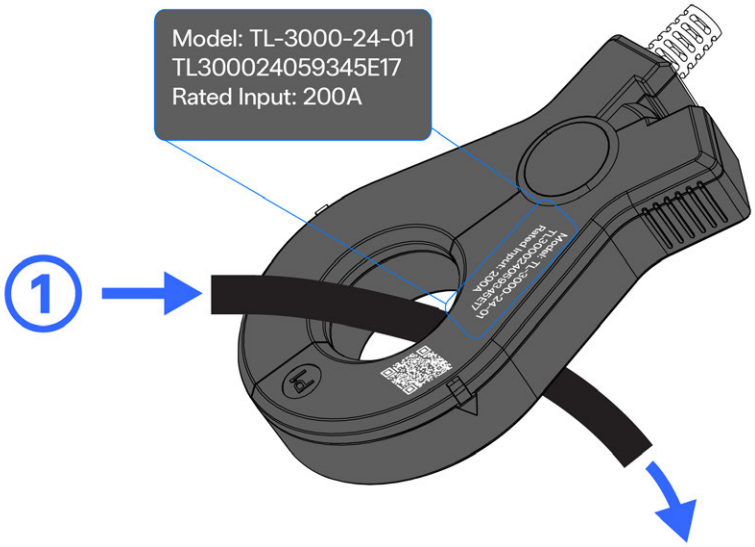

STEP 8: INSTALL ENERGY METERING

NOTE: Ensure the CT closes completely. If the CT is not closed, it will not measure properly. This is especially relevant if installing a CT around multiple conductors, or around large gauge wire.

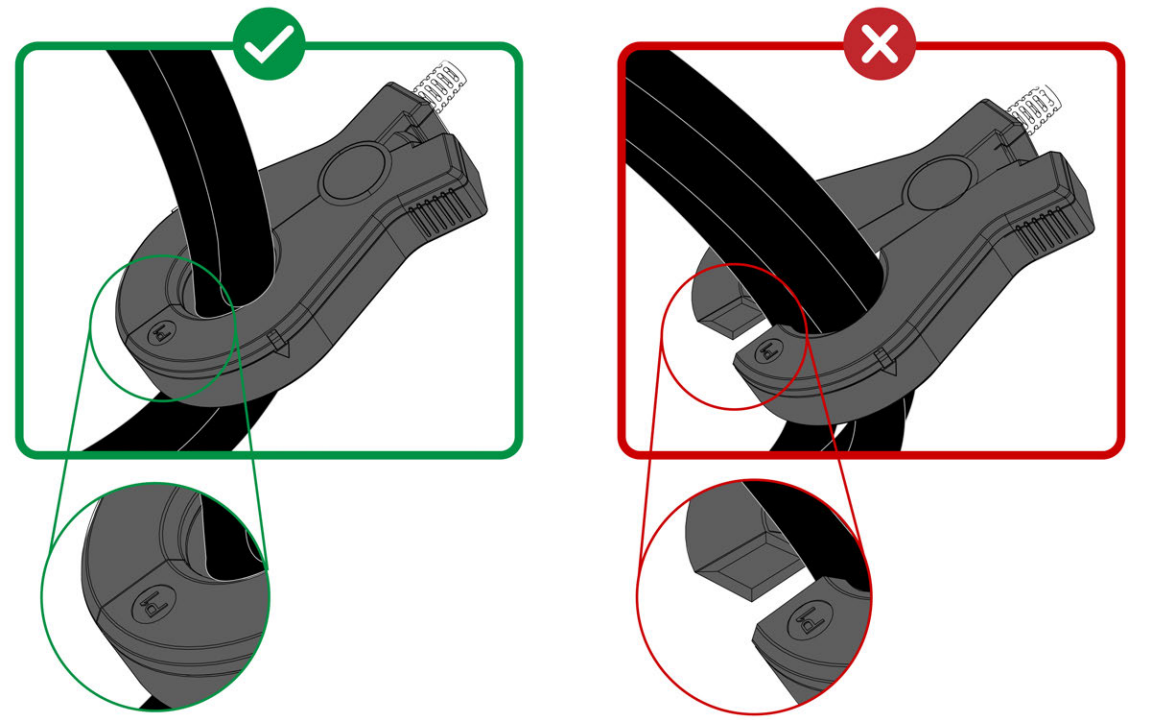

Connect Tesla Remote Meter to Powerwall 3P: Wi-Fi Option


When using Wi-Fi as the connection method, the signal can be disrupted by metal or stone when installing the meter inside an electrical panel, or by excessive distance between the meter and Powerwall 3P. For best performance, where possible, use the included external antenna and the antenna extension cable to extend the external antenna.

Alternatively, see *Connect Tesla Remote Meter to Powerwall 3P: Wired RS-485 Option on page 98*.

1. Drill a 6 mm hole in the bottom of the enclosure to prevent water intrusion.
2. Route the provided antenna extender through the enclosure hole as shown below.

   CAUTION: Ensure that the antenna extension cable is routed so it is not touching any high voltage (HV) components.

3. Thread the provided lock washer and nut onto the extender, then thread the antenna onto the end of the extender.
4. Secure the antenna against the bottom of the enclosure.

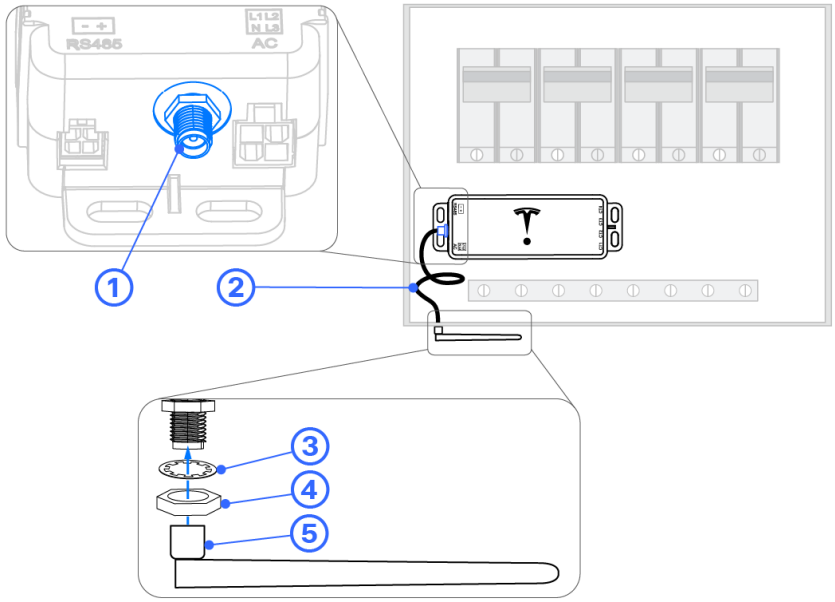

1	External antenna input
2	External antenna extender
3	Lock washer
4	Nut
5	External antenna

Meter configuration, including pairing the meter via Wi-Fi must be performed during commissioning in the Tesla One app. See commissioning instructions in the Powerwall 3P Commissioning Guide.

Connect Tesla Remote Meter to Powerwall 3P: Wired RS-485 Option


If connecting Tesla Remote Meter to the Powerwall 3P Tesla Asset Controller (TACO) via RS-485 (RS485), connect the wiring as follows. Alternatively, see *Connect Tesla Remote Meter to Powerwall 3P: Wi-Fi Option on page 98*.

STEP 8: INSTALL ENERGY METERING

NOTE: If required, extend the RS-485 harness up to 100 m using 0.2 - 1.5 mm^2 shielded twisted pair with drain wire.

1. Plug the 2-conductor RS-485 harness into the RS-485 terminal on the meter.
2. Connect the harness leads to the TACO by inserting them in the corresponding **Remote Energy Meter** connector.

   Figure 43. RS-485 Harness Connected, Ground Wire Connected to Powerwall 3P Equipment Grounding Terminal

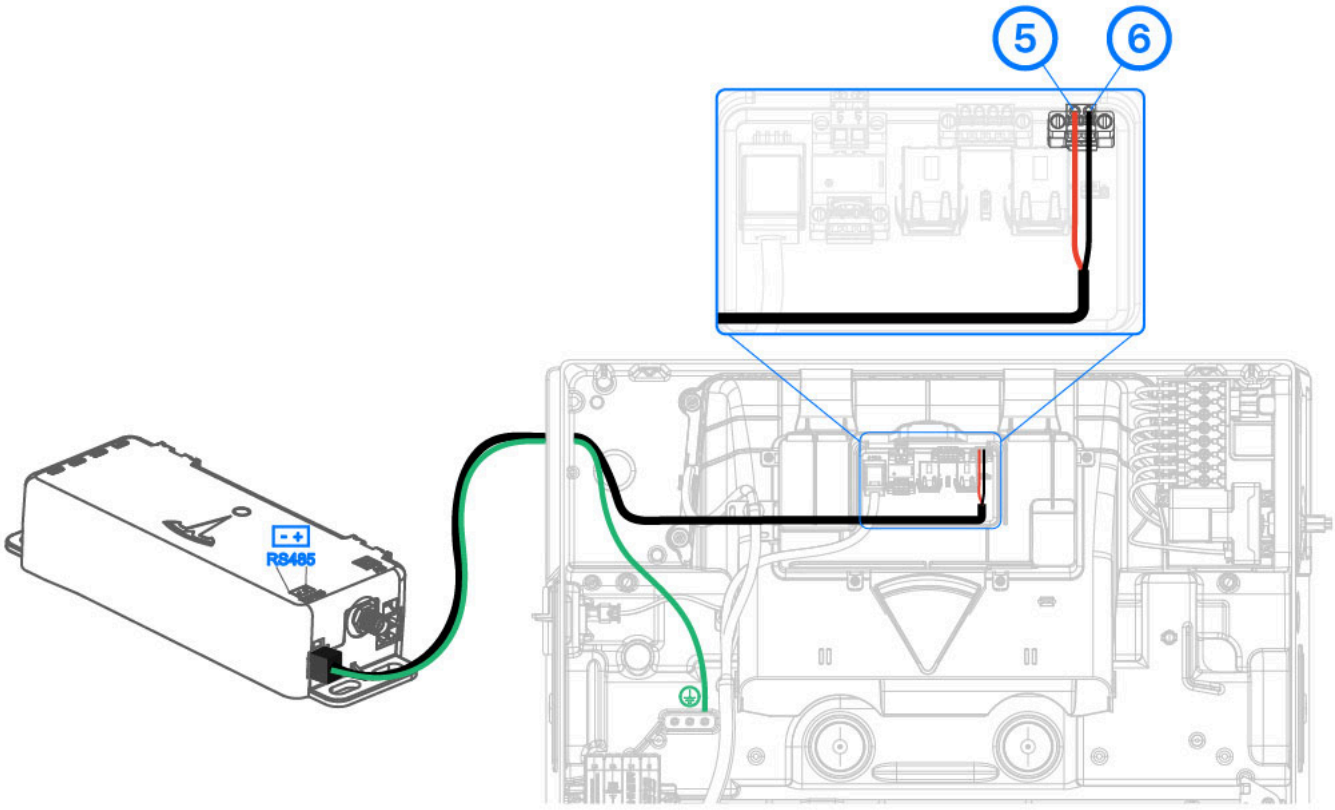


TACO Remote Energy Metering Port Pin	Terminal Name	Wire Gauge
5	RS-485 +	0.2-1.5 mm^2
6	RS-485 -	

NOTE: CAT5 or better wiring can be used for RS-485 wiring.

3. Connect the RS-485 ground wire to the nearest available equipment grounding terminal:


> **NOTE:** RS-485 harnesses with Tesla P/N 2045794-10-A and greater include the ground wire. For earlier revisions of this harness that do not include the ground wire, this step can be skipped.

> **NOTE:** If the Tesla Remote Meter kit includes a WAGO connector, use it to splice the RS-485 ground wire to a larger wire. If no WAGO connector is included, the RS-485 harness has a ground wire that is large enough to connect to an equipment grounding terminal or ground bar.

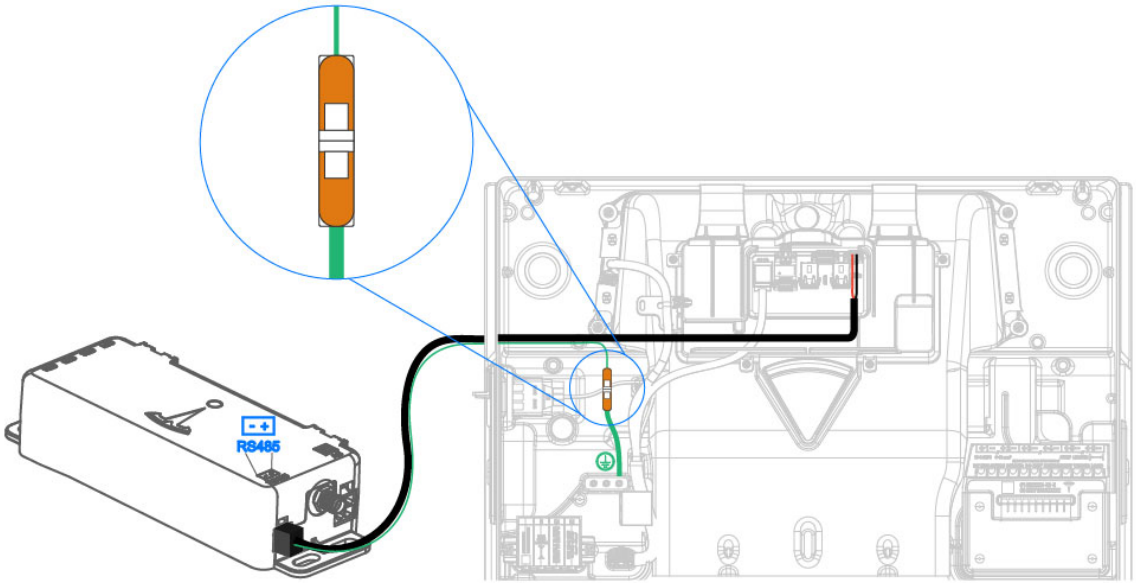

- Option 1: Connect the ground wire to the Powerwall 3P equipment grounding terminal as shown above.
- Option 2: Connect the ground wire to the distribution board equipment ground bar.

Figure 44. RS-485 Ground Wire Connected to Distribution Board Equipment Ground Bar (Single Phase Example)

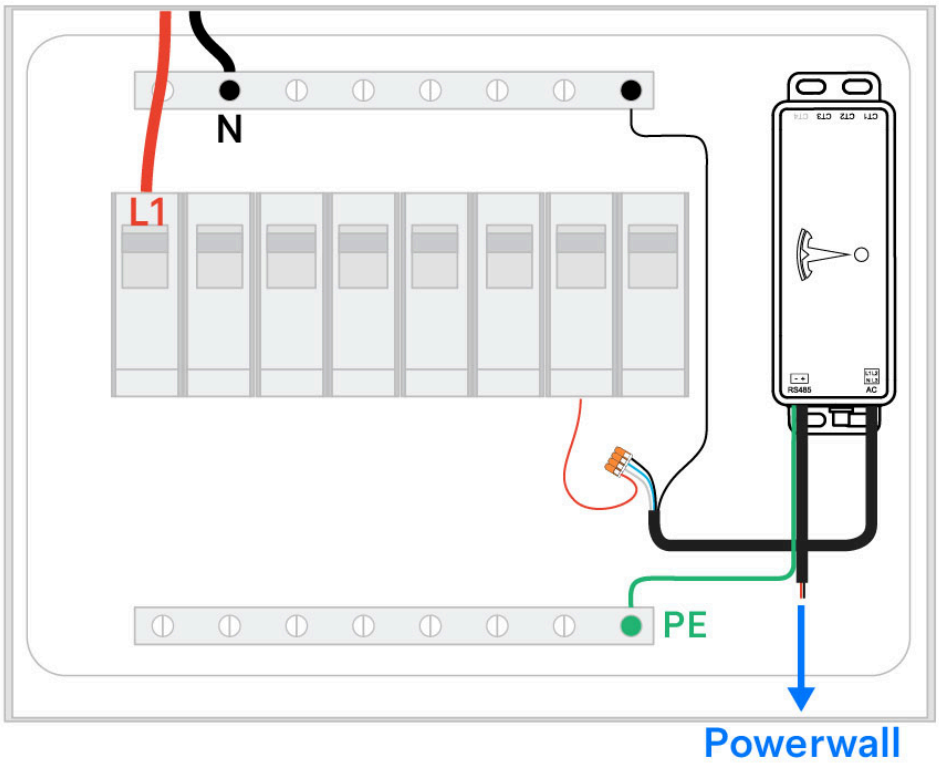

Meter and CT(s) configuration must be performed during commissioning in the Tesla One app. See commissioning instructions in the Powerwall 3P Commissioning Guide.

NOTE: If extending the RS-485 harness with wiring that includes a metal shield or drain wire, cut the excess shield and/or drain and insulate it with electrical tape.

Power On the Meter

Once the meter and CT(s) have been installed, the meter breaker can be closed to power on the meter for commissioning.

CAUTION: For any changes to meter wiring and/or CT placement, always turn the Tesla Remote Meter breaker **OFF** to power the meter off before performing any work.

STEP 9: COMPLETE THE INSTALLATION

Connect Powerwall 3P to the Internet via Wi-Fi or Ethernet

Internet connectivity is required to receive the full 10-year Powerwall warranty, and for the customer to see their system in the Tesla App. Cellular is available for commissioning and as a backup connection when Wi-Fi or Ethernet connections are lost.

Option 1: Connect Powerwall 3P to Internet via Wi-Fi

Once Powerwall has been registered to the customer, they can configure a Wi-Fi connection using the Tesla app. For customers without a strong Wi-Fi connection, install an Ethernet connection as follows.

NOTE: If the customer Wi-Fi network is available during the installation, the Wi-Fi connection can be configured during Device Setup.


Option 2: Connect Powerwall 3P to Internet via Ethernet

- Ethernet cable must be CAT5 cable at minimum.
- If not possible to run an Ethernet cable directly to the customer's network router, Powerline Ethernet socket adapters may be used.

  NOTE: If installing Powerline Ethernet socket adapters, ensure they are installed in the backup circuit.


- Connect the Ethernet cable to one of the RJ45 Ethernet terminals in the Powerwall 3P. The green LED on the Ethernet terminal will illuminate to indicate Ethernet is connected.

  NOTE: The amber LED on the Ethernet terminal will not illuminate. This is expected behavior.

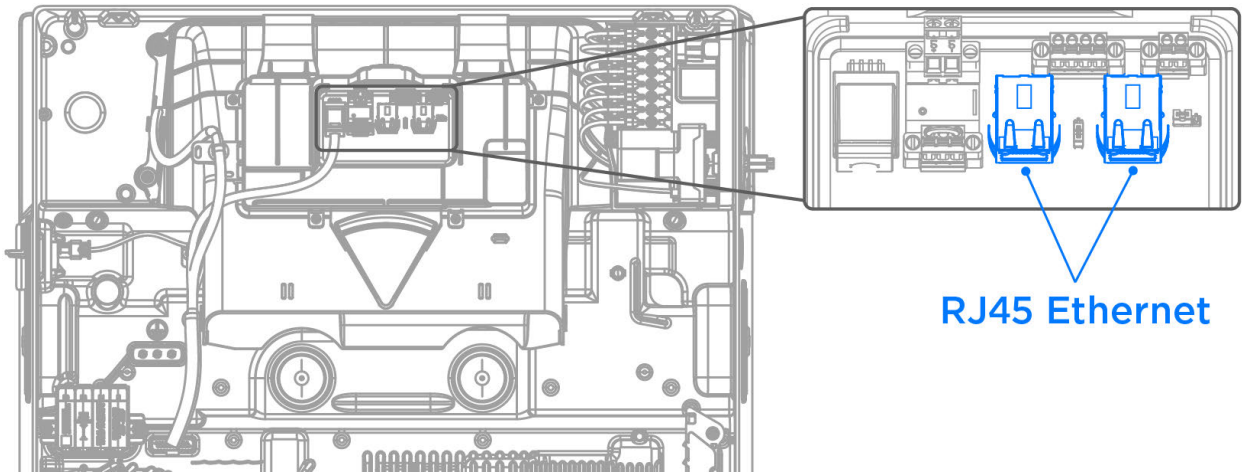

NOTE: See *Prepare Ethernet Wiring with RJ45 Connectors on page 129* for instructions to crimp RJ45 connectors on CAT5 (or better) cable.


NOTE: Only connect Ethernet wiring to the Powerwall 3P Ethernet ports. The Tesla Asset Controller in Powerwall 3P controls system operation, so these Ethernet ports are the only functional ports in the system. **Do not** connect Ethernet to the Backup Gateway Ethernet port.

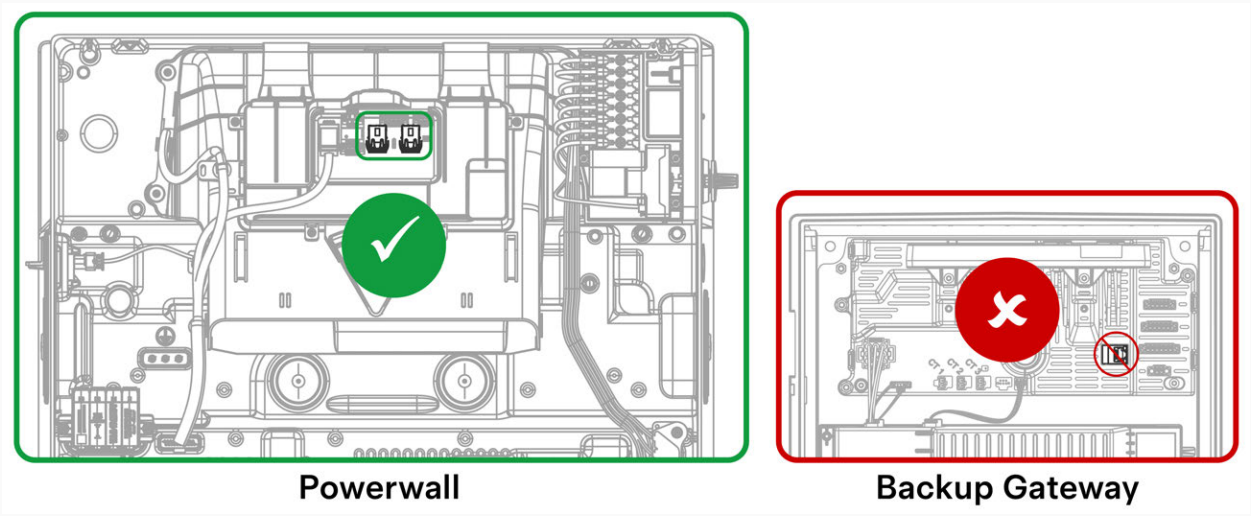

Close Backup Gateway 2 Wiring Compartment

1. **Before closing any installed hardware**, take photos of the completed wiring in the Powerwall, Backup Gateway 2, and main distribution board.
2. Inspect the AC and PV wiring terminals to ensure all wire strands are properly inserted.
3. Ensure that all conduit junctions and cable entry points are secure and properly sealed.
4. Install the Backup Gateway deadfront panel and secure it firmly with the original screw. Mount the Backup Gateway door, and latch it shut.

   Figure 45. Install the Backup Gateway Deadfront Cover and Glass Door

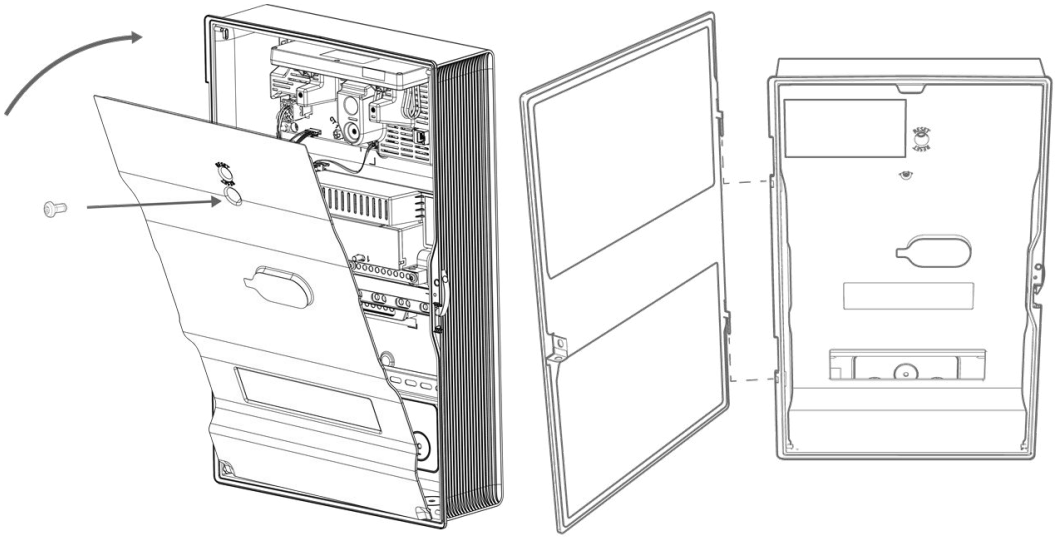

NOTE: If the Backup Gateway is installed outdoors or in a high-traffic area, the latch can be locked shut.




5. Clearly label all circuit breakers.

STEP 10: TURN ON AND COMMISSION THE SYSTEM


WARNING: Turn the Powerwall 3P Enable switch OFF to de-energize the system before terminating any conductors inside Powerwall 3P. Confirm lack of voltage at the AC and PV terminals before proceeding.

NOTE: If Powerwall 3P experiences a fault, causing the integrated DC isolator to trip, the switch may remain in the ON position even though Powerwall 3P is disabled. Contact Installer Support for guidance to address any issues and reset Powerwall 3P to resume operation.

Prepare the System for Commissioning

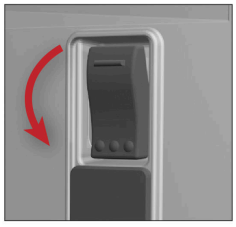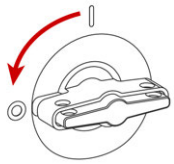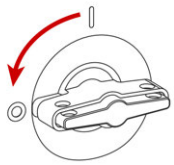Powerwall Installation Complete?	Solar Installed?	Enable (On / Off) Switch	Integrated DC Isolator	Powerwall 3P Breaker	Commissioning
No (the home does not have AC service (new construction or grid outage), the installation crew did not have all required parts / materials to complete the install, or a job reschedule is required due to weather / installation taking longer than expected)	No	Leave the Enable switch **OFF** 	Leave the integrated DC isolator **OFF** 	Leave the Powerwall 3P breaker **CLOSED** (ON)	Commissioning cannot be completed at this time
Yes	No	Leave the Enable switch **ON** 	Leave the integrated DC isolator **OFF** 	Leave the Powerwall 3P breaker **CLOSED** (ON)	See *Commission the System Ahead of Solar Installation on page 106* **WARNING:** Turn the Powerwall 3P Enable switch OFF to de-energize the system terminating any conductors inside Powerwall 3P. Confirm lack of voltage at the AC and PV terminals before proceeding.

STEP 10: TURN ON AND COMMISSION THE SYSTEM

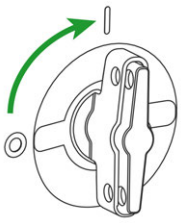Powerwall Installation Complete?	Solar Installed?	Enable (On / Off) Switch	Integrated DC Isolator	Powerwall 3P Breaker	Commissioning
Yes	Yes	Leave the Enable switch **ON** 	Leave the integrated DC isolator **ON** 	Leave the Powerwall 3P breaker **CLOSED** (ON)	See *Commission the System After Powerwall and Solar Installation on page 109*

Commission the System Ahead of Solar Installation

Powerwall Installation Crew Instructions:

1. Close the AC circuit breaker for Powerwall 3P and the Backup Gateway.
2. Turn the Powerwall 3P Enable switch **ON**.
3. Launch the **Tesla One** app.


   NOTE: Ensure Tesla One is updated to version 7.9.1 or greater, or *install Tesla One* if using for the first time.

4. Navigate to **Device Setup** to begin commissioning.
5. Select **Scan** and scan the Powerwall 3P QR label to connect to the TeslaPW Wi-Fi network.

   NOTE: Connect to Powerwall 3P to commission the system. **Do not attempt to connect to Backup Gateway to commission**.


6. Address any alerts to complete commissioning, skipping PV commissioning steps.

   NOTE: When commissioning a system with no solar, Powerwall will charge from grid until State of Energy (SOE) is 20%. This is expected behavior.

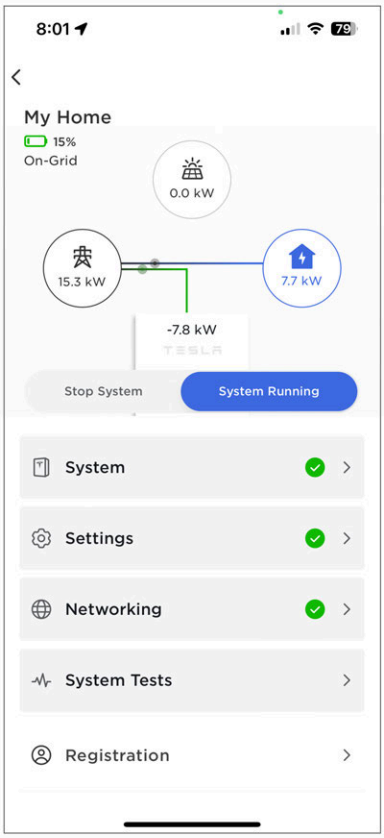

7. Perform the Backup Test, selecting **Solar not required**.

STEP 10: TURN ON AND COMMISSION THE SYSTEM

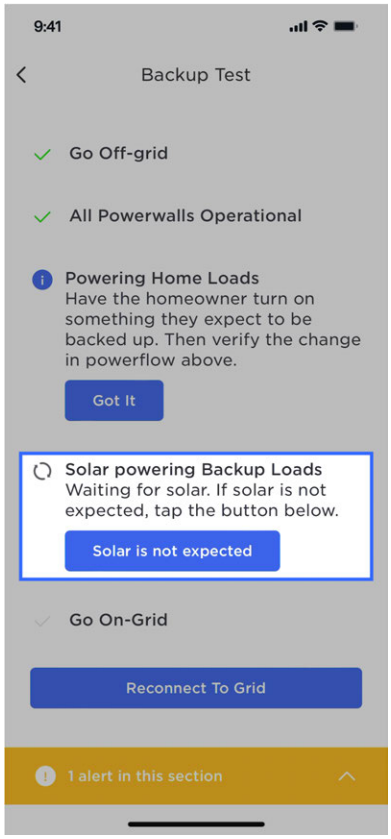

NOTE: The Backup Test can be performed during the Backup Gateway 2 device update. There is no need to wait for the update to complete before performing the Backup Test.


8. Leave the system running in Tesla One.
9. Leave the Powerwall 3P Enable switch **ON** and the breaker **CLOSED** to enable charging.
10. Leave the following accessories with the customer, for use by the Solar installation crew:
    - Ferrite core for PV conductors
    - Cable tie and cable tie mount for PV conductors
    - ¾″ and 1″ EMT connectors
    - Extra T20 fasteners for front cover
    - Installation quick guide (for guidance on correctly installing PV wiring)

NOTE: See the *Powerwall 3 Device Setup Guide* for instructions. on navigating Device Setup in Tesla One.

STEP 10: TURN ON AND COMMISSION THE SYSTEM


Solar Installation Crew Instructions:

1. Retrieve the Powerwall 3P accessories from the customer. These should have been left by the Powerwall crew.
2. Turn the Powerwall 3P Enable switch OFF to de-energize the system; see *Appendix F: Shutting Down Powerwall 3P on page 199* for complete de-energization instructions.

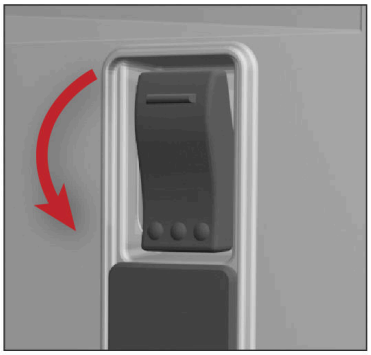

WARNING: Confirm lack of voltage at the AC and PV terminals before proceeding.

3. See *STEP 7: Make Solar PV Connections on page 82* for instructions to complete the solar installation.
4. Re-energize Powerwall 3P:
   a. Remove the lock / tag and breaker hasp from the Powerwall 3P breaker, then turn the breaker ON.
   b. Turn the Powerwall 3P Enable switch ON.

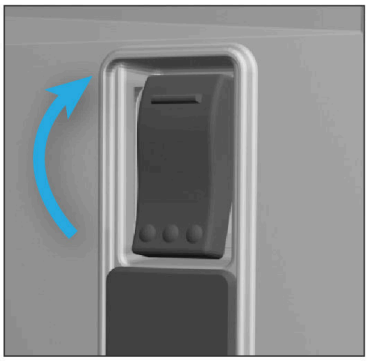

5. Launch the **Tesla One** app.

NOTE: Ensure Tesla One is updated to version 7.9.1 or greater, or *install Tesla One* if using for the first time.

6. Navigate to **Device Setup** to begin commissioning.
7. Select **Scan** and scan the Powerwall 3P QR label to connect to the TeslaPW Wi-Fi network.


NOTE: Connect to Powerwall 3P to commission the system. **Do not attempt to connect to Backup Gateway to commission**.

8. Address any alerts to complete commissioning.
9. On the Powerwall 3P *Device* page, compare the MPPT voltages with those listed on the planset to confirm the installation matches what is expected for the strings.
10. Perform the Backup Test with solar.

11. Install the Powerwall 3P front cover, fastening with the new T20 fasteners that were left with the customer.
12. Leave the system running in Tesla One.
13. Leave the Powerwall Enable switch **ON** and the breaker **CLOSED** to enable charging.

NOTE: See the *Powerwall 3 Device Setup Guide* for instructions. on navigating Device Setup in Tesla One.

NOTE: The Powerwall 3P On / Off switch has a locking mechanism. When the switch is locked it cannot be turned on.

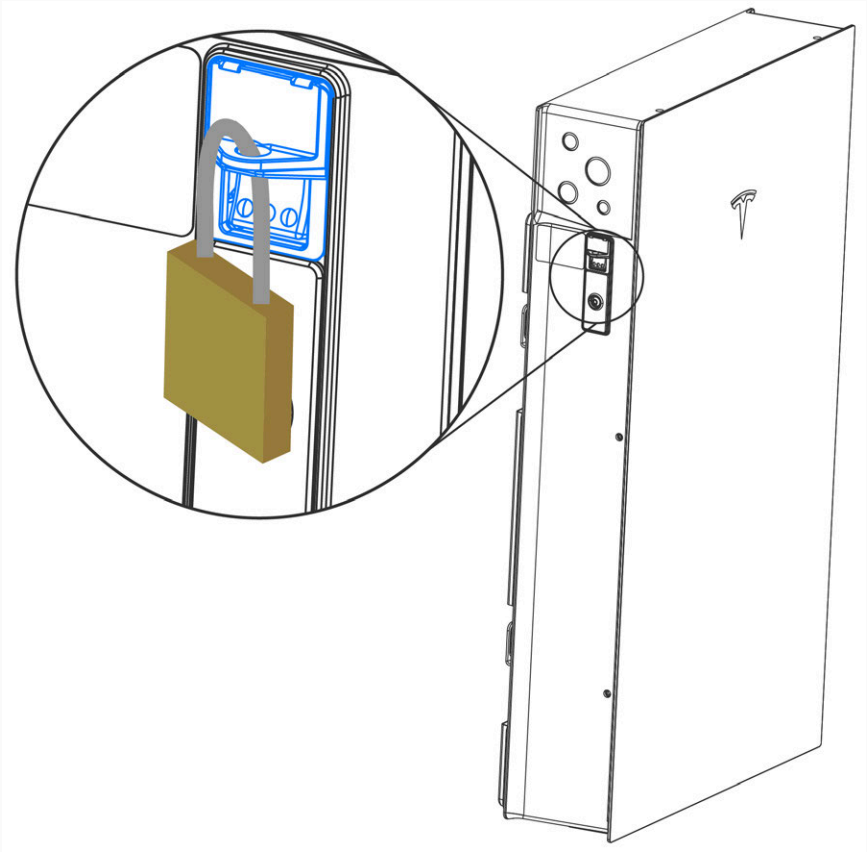

Commission the System After Powerwall and Solar Installation

1. Close the AC circuit breaker for Powerwall 3P and the Backup Gateway.
2. Turn the Powerwall 3P Enable switch **ON**.
3. Launch the **Tesla One** app.

   NOTE: Ensure Tesla One is updated to version 7.9.1 or greater, or *install Tesla One* if using for the first time.

4. Navigate to **Device Setup** to begin commissioning.
5. Select **Scan** and scan the Powerwall 3P QR label to connect to the TeslaPW Wi-Fi network.

   NOTE: Connect to Powerwall 3P to commission the system. **Do not attempt to connect to Backup Gateway to commission**.


6. Address any alerts to complete commissioning. See the *Powerwall 3 Device Setup commissioning guide* for additional instructions.

STEP 10: TURN ON AND COMMISSION THE SYSTEM

NOTE: The Backup Test can be performed during the Backup Gateway 2 device update. There is no need to wait for the update to complete before performing the Backup Test.


7. Leave the system running in Tesla One.
8. Leave the Powerwall Enable switch **ON** and the breaker **CLOSED** to enable charging.

NOTE: The Powerwall 3P On / Off switch has a locking mechanism. When the switch is locked it cannot be turned on.

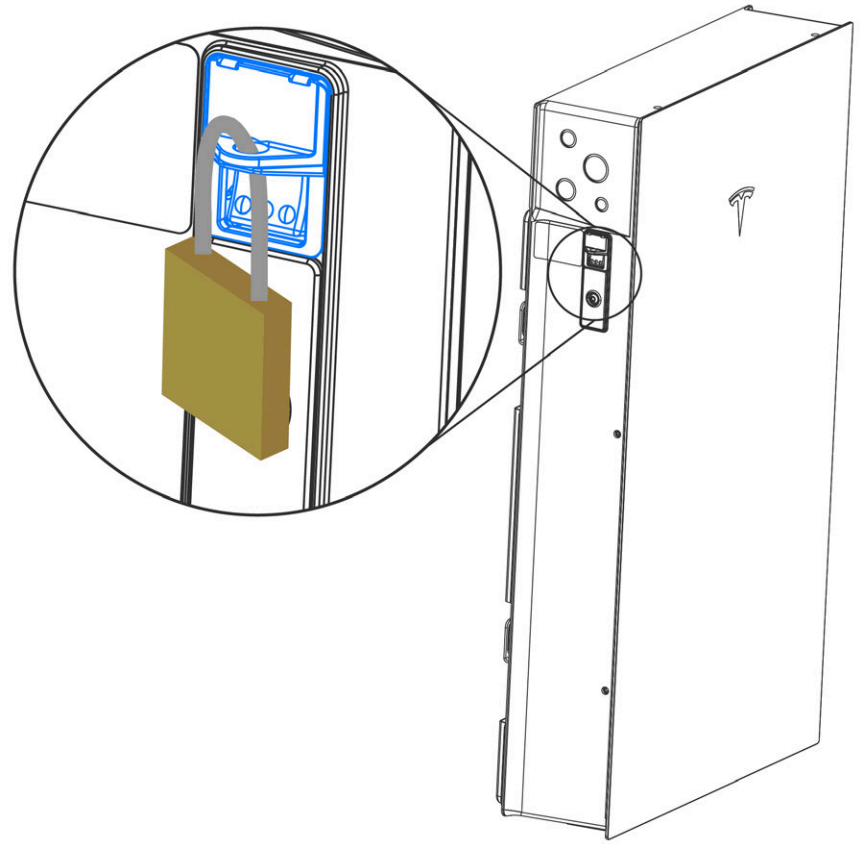


STEP 10: TURN ON AND COMMISSION THE SYSTEM

NOTE: To view the Powerwall 3P firmware version, connect to Powerwall 3P in the Tesla One Device Setup interface and view the **Device Version** under *Software*. The firmware version is also available on the *Summary* page, along with more information about system settings.

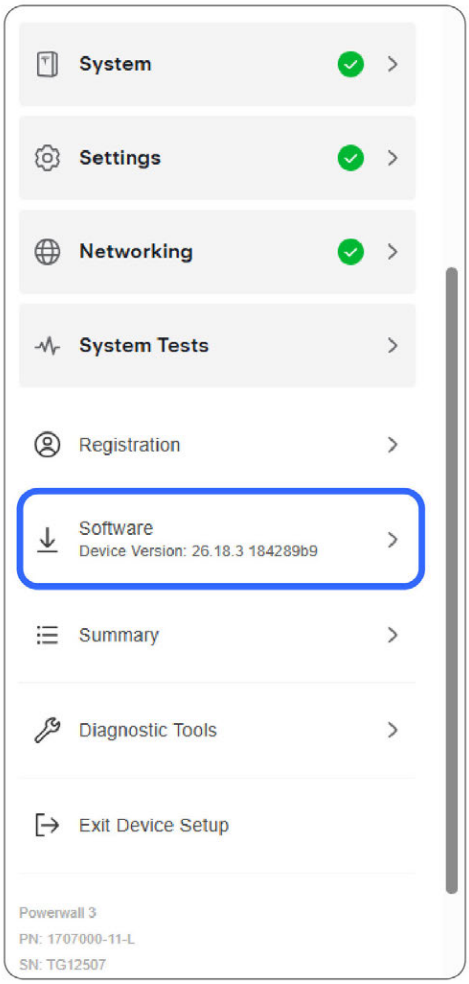


STEP 11: INSTALL POWERWALL 3P FRONT COVER

1. Inspect the AC and PV wiring terminals to ensure all wire strands are properly inserted.
2. Ensure that all conduit junctions and cable entry points are secure and properly sealed.
3. Arrange all communication wires inside the Tesla Asset Controller cover, then close the cover.

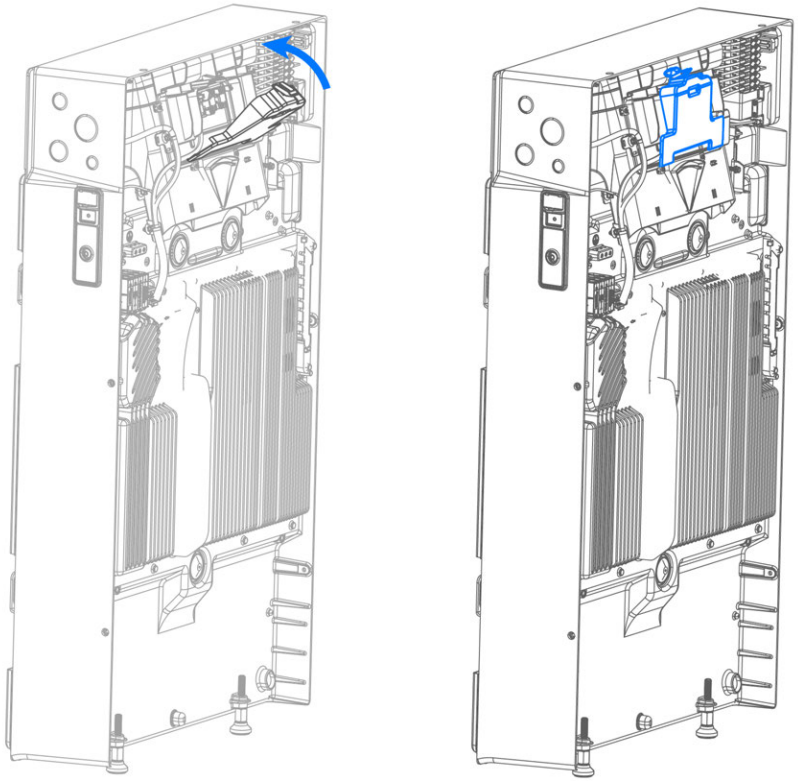

4. Arrange all wires neatly inside the Powerwall wiring compartment.


5. Install the air intake screen over the opening at the bottom of Powerwall, ensuring it snaps into place.

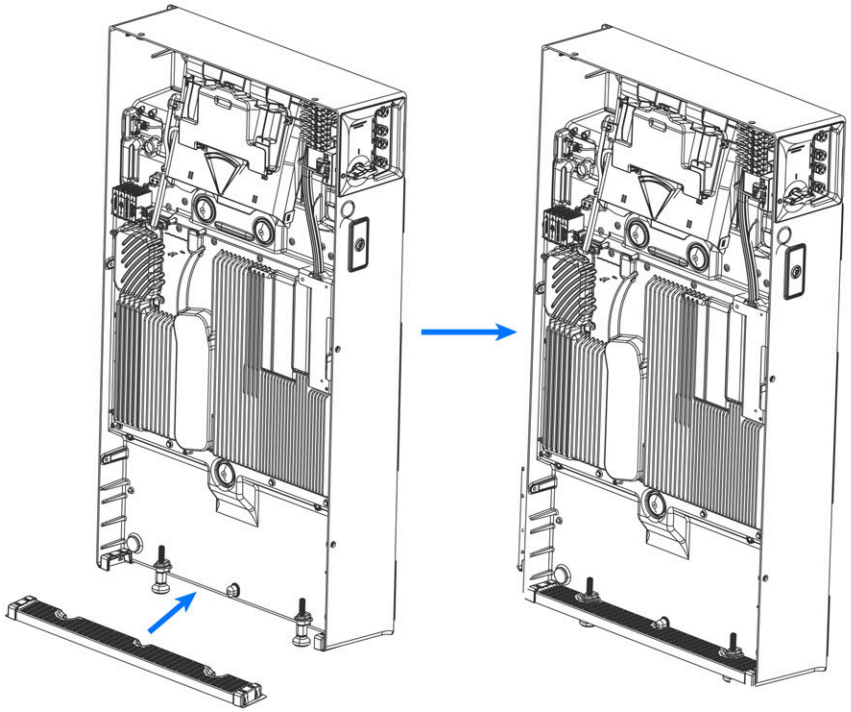

6. Clean the front edge of the Powerwall enclosure with a microfiber cloth to remove any debris that might interfere with the seal.
7. Carefully remove the glass front cover from its packaging and, using a microfiber cloth, clean the sealing gasket (**1**) around the edge of the front cover and the front edge of the enclosure (**2**) to remove any debris that might interfere with the seal.


> ⚠ **CAUTION:** Take extreme care when handling the sealing gasket. Damage to or contamination of the gasket or its mating surface could compromise Powerwall's ingress protection, resulting in product damage.

STEP 11: INSTALL POWERWALL 3P FRONT COVER

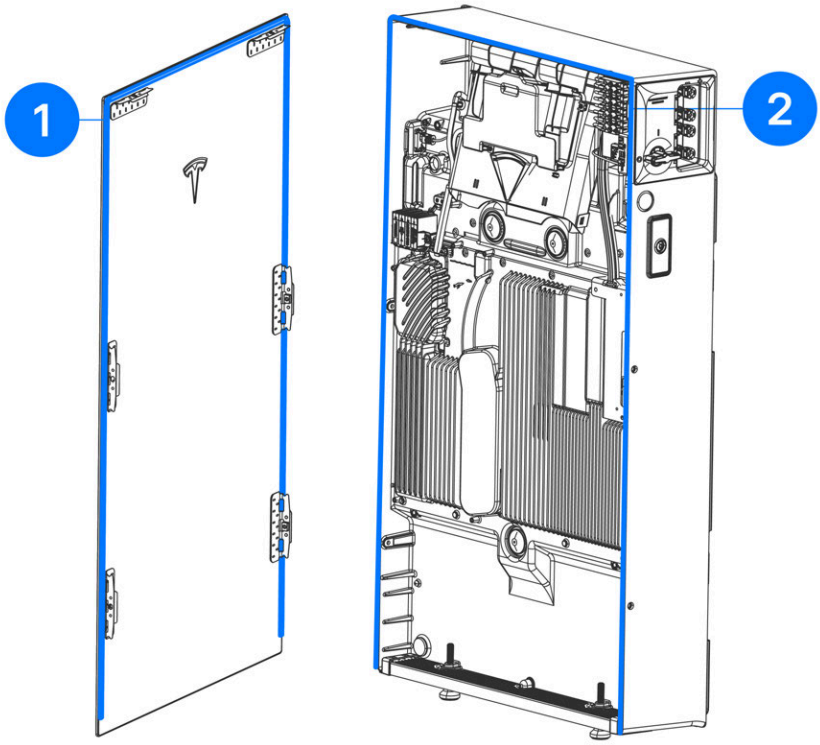

8. Carefully install the glass front cover:
   a. Align the lower mounting tabs with the two alignment shelves in the enclosure (**A**).
   b. Rotate the front cover toward the enclosure to engage the top mounting tabs with the enclosure (**B**). Maintain pressure (approximately 2 Nm) on the front of the cover to compress the sealing gasket.


> ⚠ **CAUTION:** Maintain pressure to keep the sealing gasket compressed until all fasteners are installed and tightened. If the sealing gasket is not compressed, the fasteners may thread form in the enclosure, breaking the front cover mounting tabs.

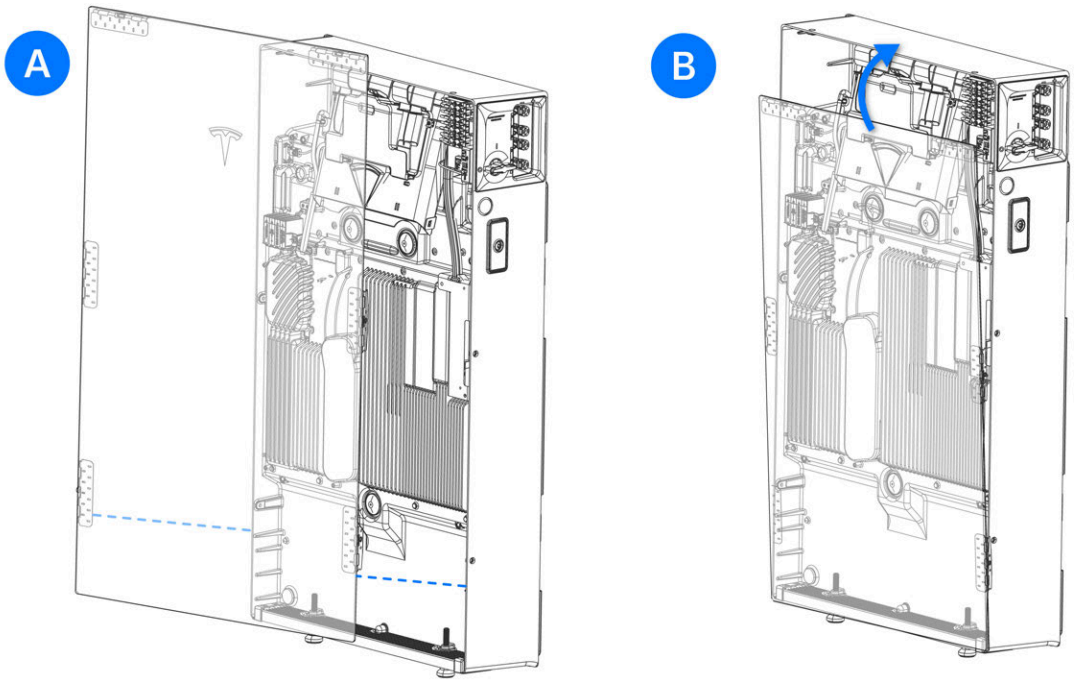

c. Install and tighten the top (2X) T20 fasteners in the fastener slots (**C**).
d. Install and tighten the remaining (4X) T20 fasteners in the fastener slots on the sides of the unit (**D**).
e. Tighten each fastener to approximately 2.8 Nm.

> **CAUTION:** Do not use an impact driver to torque the fasteners.

> **CAUTION:** If the fasteners are not tightened, water may enter the unit, leading to equipment damage.

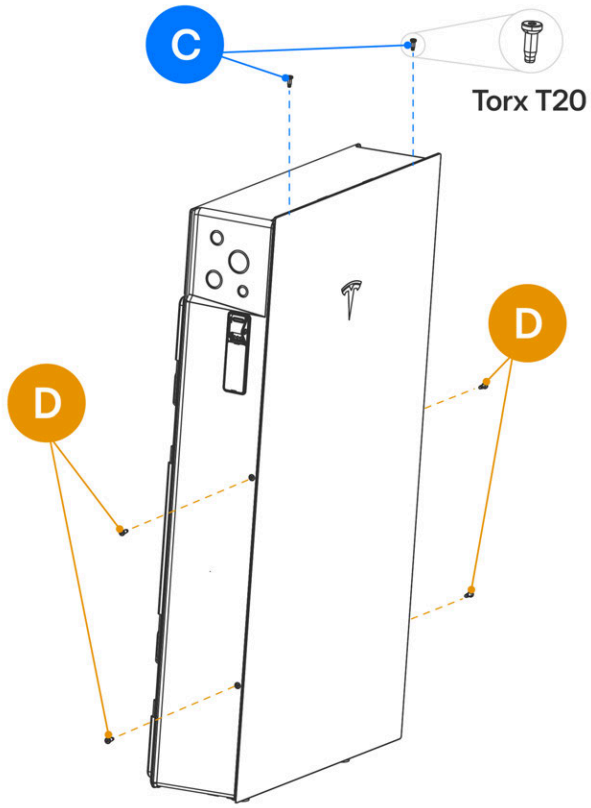

STEP 12: INTRODUCE THE HOMEOWNER TO THEIR SYSTEM

1. Ask the homeowner to download and install the Tesla mobile app, log in or create a new Tesla account, and assist them with registering their product.
2. Show the homeowner the location of the serial number sticker on the left side of Powerwall, below the On/Off switch.
3. Demonstrate the capabilities of the Tesla mobile app, such as how to change the operation mode.
4. Simulate an outage by opening the main breaker and show that Powerwall is powering backup loads.
5. Archive the photos from the installation.

Technical Support

Resources for Certified Installers, including the latest versions of installation manuals, are available within the Tesla Partner Portal:

https://partners.tesla.com

Maintenance

Powerwall 3P does not require pre-scheduled preventative maintenance. The only maintenance required by an owner is to keep the unit connected to the internet and free and clear of debris, especially around the air intake and exhaust. When needed, the air intake vent can be removed and hosed off.

To clean Powerwall 3P, use a soft, lint-free cloth. If needed, the cloth can be dampened with mild soap and water only. Do not use cleaning solvents to clean Powerwall 3P, or expose Powerwall 3P to flammable or harsh chemicals or vapors.

APPENDIX A: POWERWALL 3P ANCHORING DETAILS

General Anchoring Notes

NOTE: The details below are minimum guidelines and are not guaranteed to be applicable.

NOTE: Use only fasteners suitable to the installation location; for instance, use galvanized or stainless steel fasteners for exterior applications.

NOTE: All wall framing referenced in the details must be part of the home's main permitted bearing wall and/or lateral force resisting system. The contractor and their licensed design professional are responsible for ensuring the walls, and their load transfer connections, are structurally sound to support all code-specified vertical and lateral loading imposed by the equipment. Improper mounting or the use of a wall that is not structurally sound could result in serious injury and/or product damage.

NOTE: At the contractor's expense and with no liability to Tesla, the homeowner and contractor can work with a third party licensed engineer and building department to develop alternative supports.

NOTE: Do not mount below or above windows of the same story wall. Mounting equipment on fences, half walls, retaining walls, or other non-structural construction is not allowed. Supporting framing must be part of a permitted structure and any unusual framing near the mounting area that may compromise the wall's integrity shall be evaluated by the contractor and their licensed design professional.

Anchoring Details for Ground- or Wall-mounting Powerwall 3P with Wall Bracket on Existing Approved Foundation

Reference these anchoring details when mounting Powerwall 3P to the provided mounting bracket.

NOTE: For any of the following mounting configurations:


- Maximum washer outer diameter is 27.5 mm
- Maximum fastener head height is 12 mm
- Maximum fastener shaft diameter is 10 mm

Concrete Masonry Unit Wall

Minimum strength must be 11 MPa.

Use at least four (one in each corner, in any available anchor slot) 10 mm concrete anchors of sufficient length for 50 mm embedment into the material.

Anchors shall not be installed within 305 mm of wall edges or 38 mm of masonry block edges.

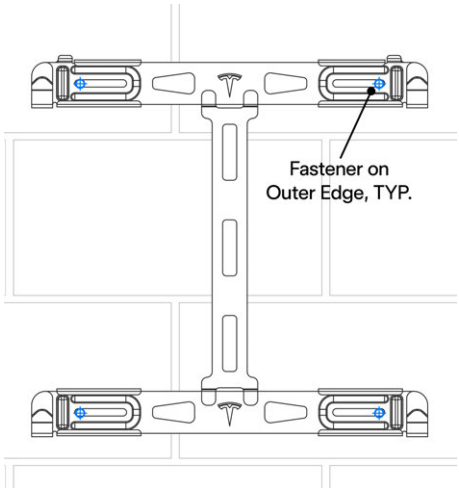


APPENDIX A: POWERWALL 3P ANCHORING DETAILS

Solid Concrete Wall

Minimum strength must be 18 MPa.

Use at least four (one in each corner, in any available anchor slot) 10 mm concrete anchors of sufficient length for at least 64 mm embedment into the wall.

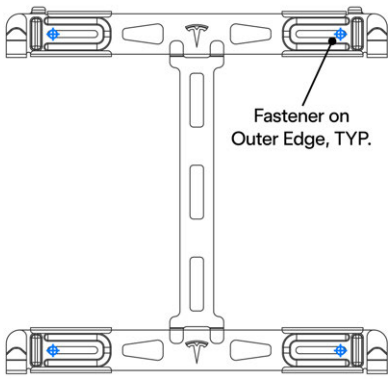

Brick Wall


(Double and Single Layer of Brick Masonry)

Minimum strength must be 12 MPa.

Use at least four (one in each corner, in any available anchor slot) 6 mm masonry anchors of sufficient length for 79 mm embedment.

NOTE: Faux brick veneer is not a supported wall type for Powerwall installations.

NOTE: Fasteners shall not be installed in mortar joints.

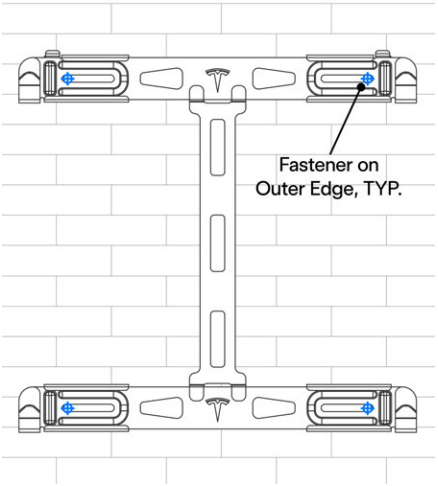

Channel Strut (Unistrut)


Struts must be minimum 12 gauge, and either 22 mm or 41 mm.

If mounting on wood structural members, attach each strut to at least two structural members, using at least one 6 mm wood screw with washer per structural member, of sufficient length for at least 64 mm embedment into the structural members.

If mounting on metal structural members, attach each strut to at least three structural members, using at least one #14 (6 mm) sheet metal screw with washer per structural member, of sufficient length to penetrate at least 3 threads beyond the structural members.

NOTE: For either wood or metal structural members, these requirements are per Powerwall (e.g. two structural members per Powerwall on wood structural members, or three structural members per Powerwall on metal structural members).

To attach the bracket to the struts, use at least four (one in each corner) 10 mm hex head screws with washers and strut nuts.

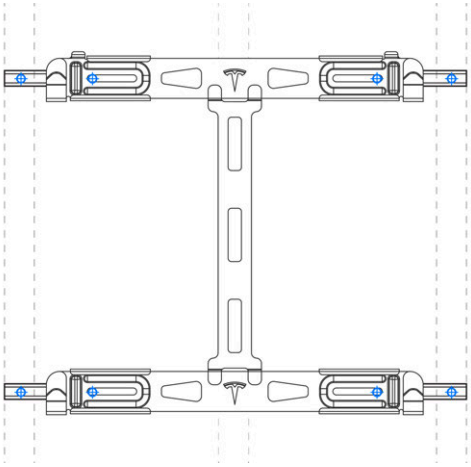


Channel strut shall have a maximum unsupported span of 610 mm and shall not be cantilevered.

Wood Structural Members 305 mm to 432 mm

If anchoring directly into wood structural members, use at least four (one in each corner) 6 mm wood screws with washers, of sufficient length for at least 64 mm embedment into the structural members.


NOTE: See *Channel Strut (Unistrut) on page 118* for structural member spacing greater than 432 mm, up to 610 mm.

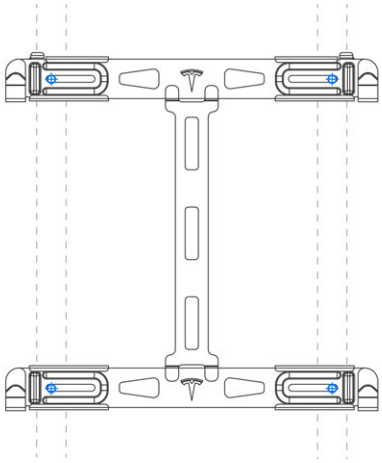

Wood Structural Members 305 mm to 432 mm

If anchoring to blocking between wood structural members, use minimum 38 x 89 mm blocks, end-nailed into structural members with two 16d (89 x 4 mm) nails or toe-nailed into structural members with four 8d (64 x 3 mm) nails. Use at least four (one in each corner) 6 mm wood screws with washers, of sufficient length for at least 64 mm embedment into the blocking.

NOTE: See *Channel Strut (Unistrut) on page 118* for structural member spacing greater than 432 mm, up to 610 mm.

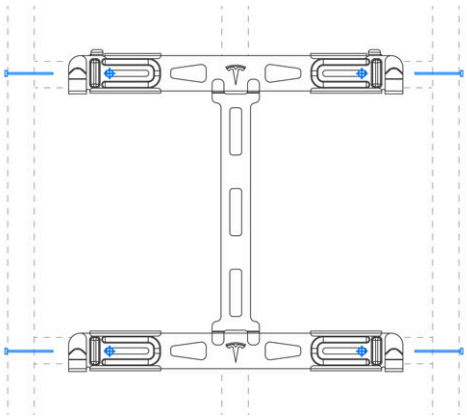


Metal Structural Members 305 mm to 432 mm

If anchoring directly to metal structural members, structural members must be minimum 18 gauge. Use at least four (one in each corner) #14 (6 mm) sheet metal screws with washers, of sufficient length to penetrate at least 3 threads beyond the structural member.

If backing is needed between the structural members, the backing must be minimum 18 gauge. Attach backing to metal structural members with 12 gauge 76 x 76 mm angle clip or Simpson SFC2.25 clips with two #10 sheet metal screws in each leg.

NOTE: See *Channel Strut (Unistrut) on page 118* for structural member spacing greater than 432 mm, up to 610 mm.

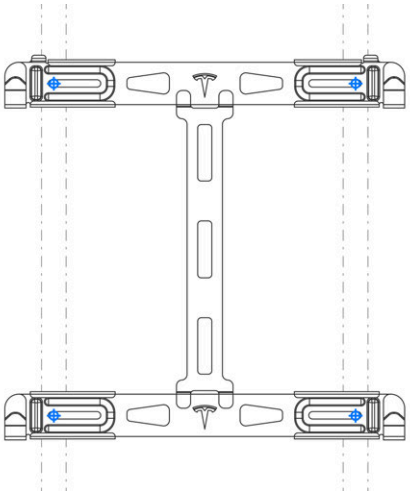


Powerwall 3P Center of Mass

Table 8. Center of Mass for Powerwall 3P and/or Expansion Unit(s)

Configuration	Includes	Total Weight	Center of Mass (mm) (+/- 4 mm)		
			X	Y*	Z
(1) Powerwall 3P	(1) front cover, (1) wall bracket	132 kg	304	506	84
(1) Powerwall 3P and (1) Expansion (stacked)	(1) front cover, (2) wall brackets, (1) set of Expansion stacking accessories, (1) Expansion harness	245.6 kg	304	487	168
(1) Powerwall 3P and (2) Expansions (stacked)	(1) front cover, (3) wall brackets, (2) set of Expansion stacking accessories, (2) Expansion harnesses	359.1 kg	304	479	251
(1) Powerwall 3P and (3) Expansions (stacked)	(1) front cover, (4) wall brackets, (3) set of Expansion stacking accessories, (3) Expansion harnesses	472.6 kg	304	476	333
(1) Expansion unit	(1) front cover, (1) wall bracket	118.5 kg	304	464	75
(2) Expansions (stacked)	(1) front cover, (2) wall brackets, (1) set of Expansion stacking accessories, (1) Expansion harness	232 kg	304	464	159
(3) Expansions (stacked)	(1) front cover, (3) wall brackets, (2) set of Expansion stacking accessories, (2) Expansion harnesses	345.5 kg	304	464	241

*In these measurements, the Powerwall 3P / Expansion feet are at the lowest height setting. The feet can be adjusted up to 12 mm in height.


Figure 46. Measuring Center of Mass from Bottom Left Corner of Front Cover and Surface of Supporting Structure

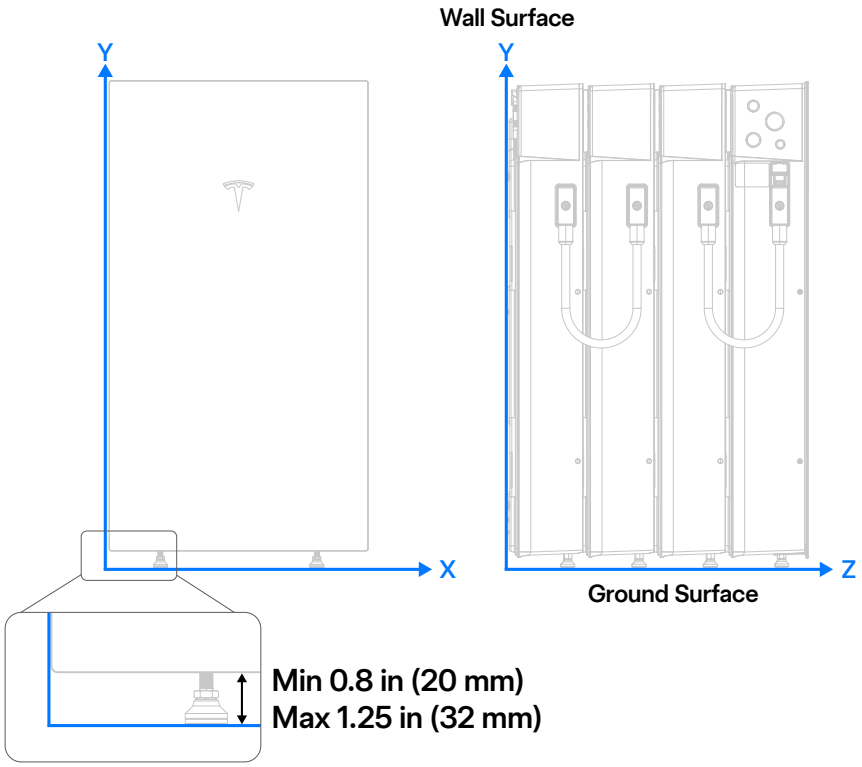

NOTE: A structural designer or other qualified person acceptable to the local authority may use the total weight and center of mass information for the individual or stacked assembly to calculate the applicable building code design forces acting on the supporting structure.

APPENDIX B: WIRING REFERENCE

Powerwall 3P AC and PV Wiring

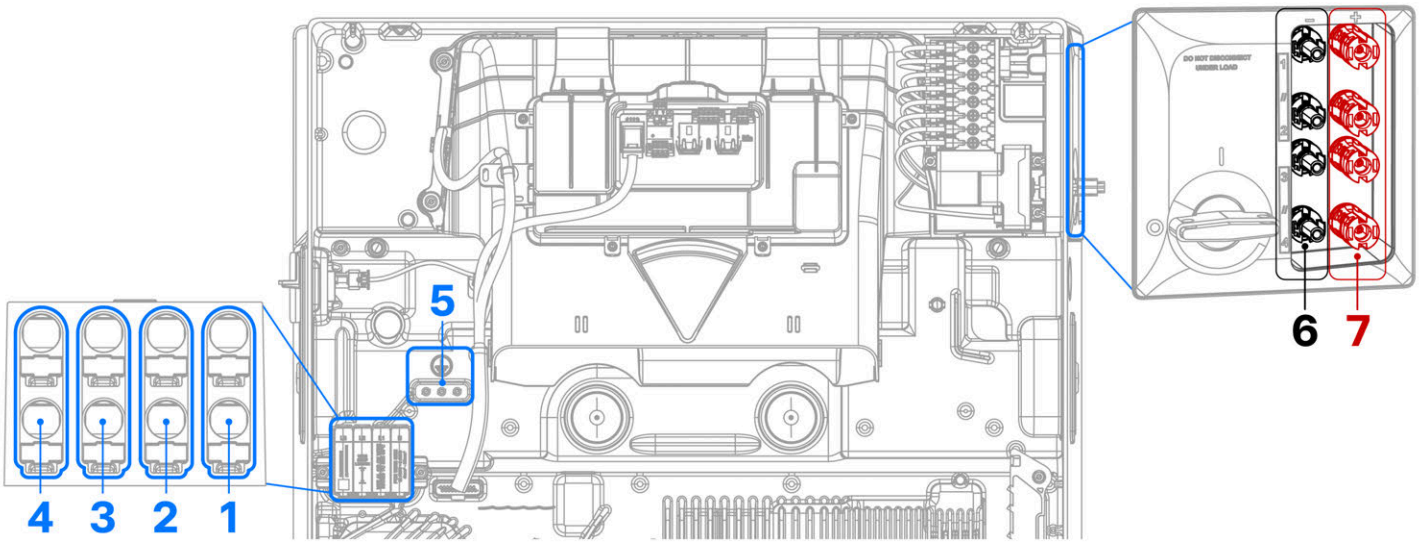

	Terminal Name	Recommended Wire Color	Wire Size	Wire Strip Length	Torque
1	N (Neutral)	Black	2.5 - 25 mm^2	19 mm	N/A
2	L1 (Line 1)	Red			
3	L2 (Line 2)	White			
4	L3 (Line 3)	Blue			
5	Protective Earth terminals	Green or Green/ Yellow		19 mm	4 Nm
6	Integrated Stäubli MC4-Evo 2 connectors for negative (-) PV connections*	Black	Follow Stäubli guidance for selecting the correct Stäubli Original MC4, MC4-Evo 2, or MC4-Evo ready connectors sizes depending on the size of the PV wire		
7	Integrated Stäubli MC4-Evo 2 connectors for positive (+) PV connections*	Red			

*Stäubli Original MC4, MC4-Evo 2, and MC4-Evo ready connectors are compatible with the integrated connectors on Powerwall 3P.

CAUTION: Only genuine Stäubli Original MC4, MC4-Evo 2, or MC4-Evo ready connectors are compatible with Powerwall 3P. Using any other type of connector will void the Powerwall 3P warranty.

Figure 47. Stäubli Original MC4 Connector

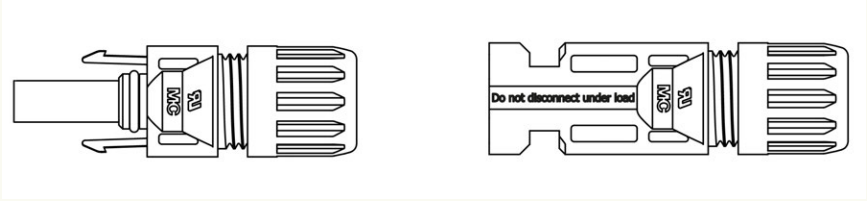


Figure 48. Stäubli MC4-Evo 2 Connector


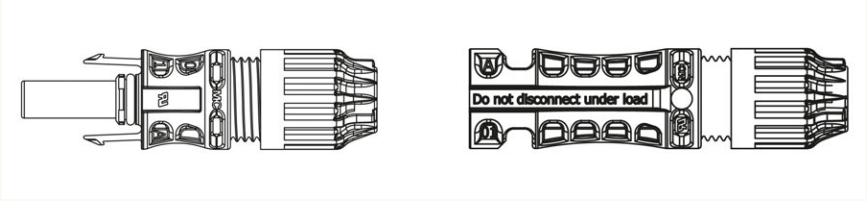


Figure 49. Stäubli MC4-Evo Ready Connector

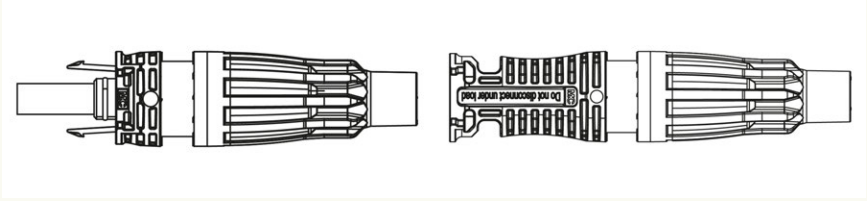

NOTE: Use only copper or tin-plated copper wire for PV connections.


NOTE: AC power output terminals are rated to a minimum of 90°C.

NOTE: Use only copper conductors in the GND terminals.

Verifying Genuine Stäubli Original MC4, MC4-Evo 2, and MC4-Evo Ready Connectors

Only genuine Stäubli Original MC4, MC4-Evo 2, or MC4-Evo ready connectors are compatible with Powerwall 3P. Look for the following indicators to verify that an MC4 connector is a genuine Stäubli connector:

1. **Print on Connector**: Look for the **STOP** and **Do not disconnect under load** text printed on the side of the connector:

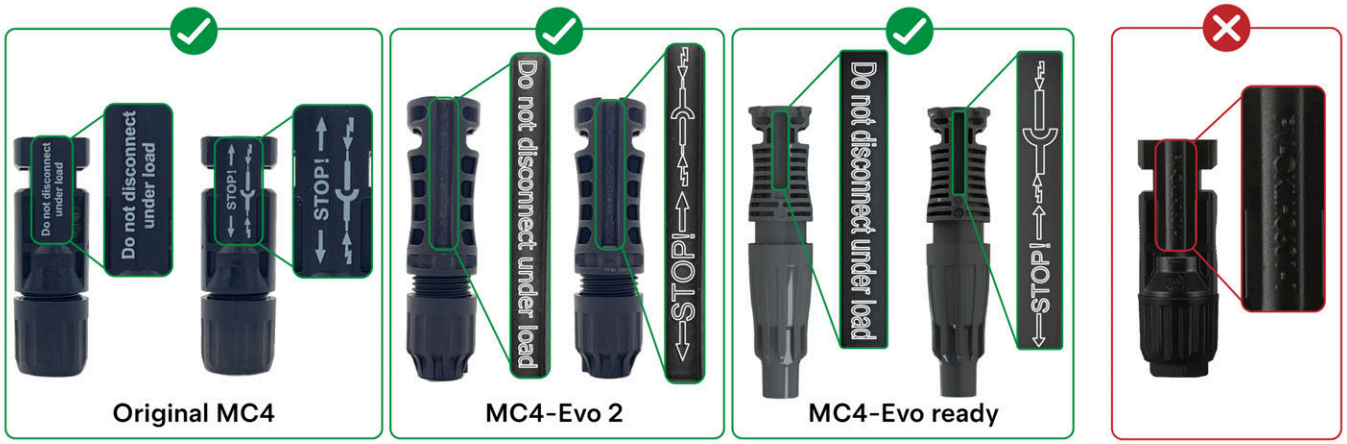

2. **Polarity Symbol**: Look for the presence (and print quality) of a polarity indicator (+ and -) on the connector body of both the plug and socket components:



3. **O-Ring Color**: Verify the o-ring on the socket is black, and not any other color:



4. **MC and UL Markings**: Verify the presence (and print quality) of the UL and MC markings on the insulator body of both the plug and socket components:




Optional: Install Y-Splitters to Parallel MPPTs


Where the PV input current exceeds the maximum current rating per MPPT (I_{MP}) of 16 A, Y-splitters can be used to parallel MPPTs to double the total PV input current capacity to 32 A.

For a string with I_{MP} > 16 A (up to 32 A):

1. Connect the Stäubli MC4-Evo 2 Y-splitter with the plug (positive) output to the positive conductor, then connect the two socket (negative) inputs to MPPTs 1+ and 2+ (or MPPTs 3+ and 4+).

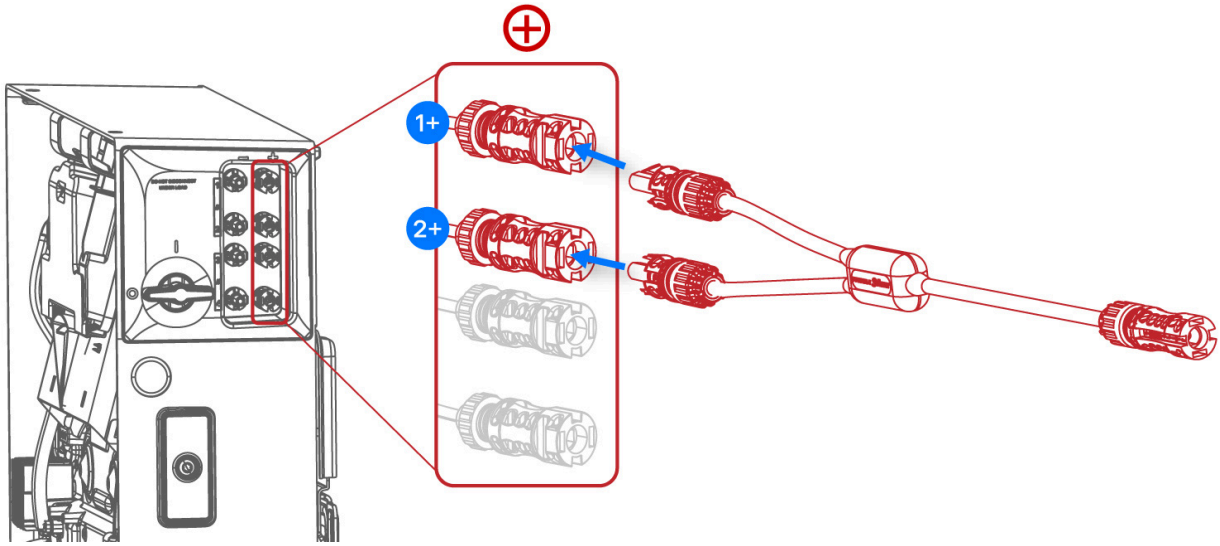


2. Connect the Stäubli MC4-Evo 2 Y-splitter with the socket (negative) output to the negative conductor, then connect the two plug (positive) inputs to MPPTs 1- and 2- (or MPPTs 3- and 4-).

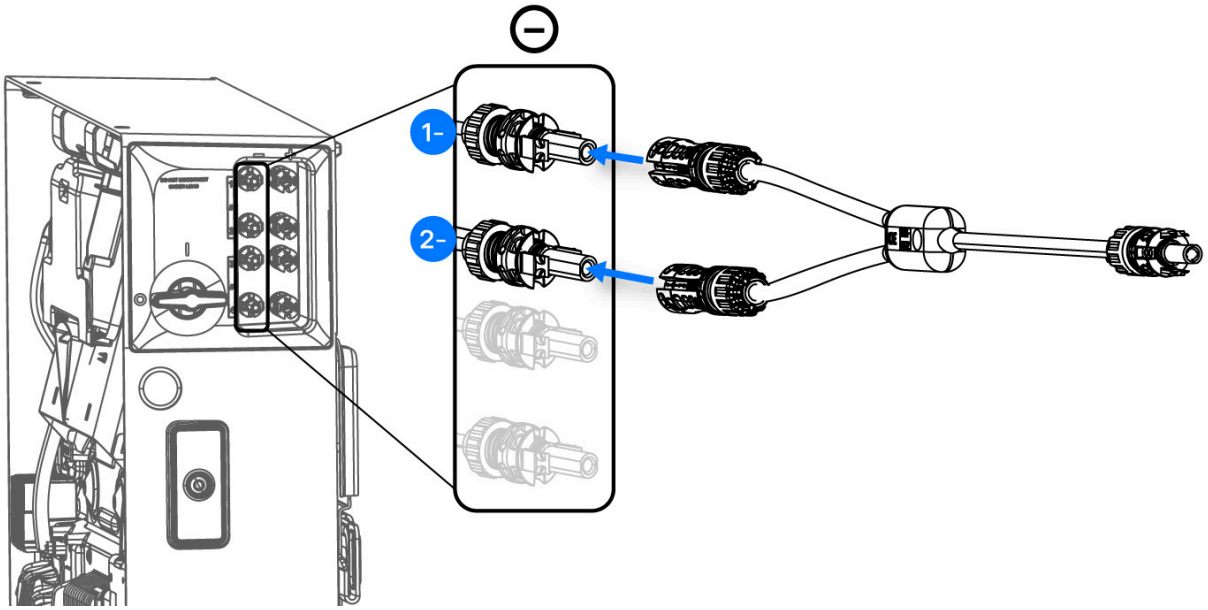

CAUTION: The following MPPTs can be paralleled. Do not attempt to parallel any other combination of MPPTs

- MPPTs 1 and 2
- MPPTs 3 and 4

Tesla Asset Controller (TACO) Low Voltage and Communication Wiring

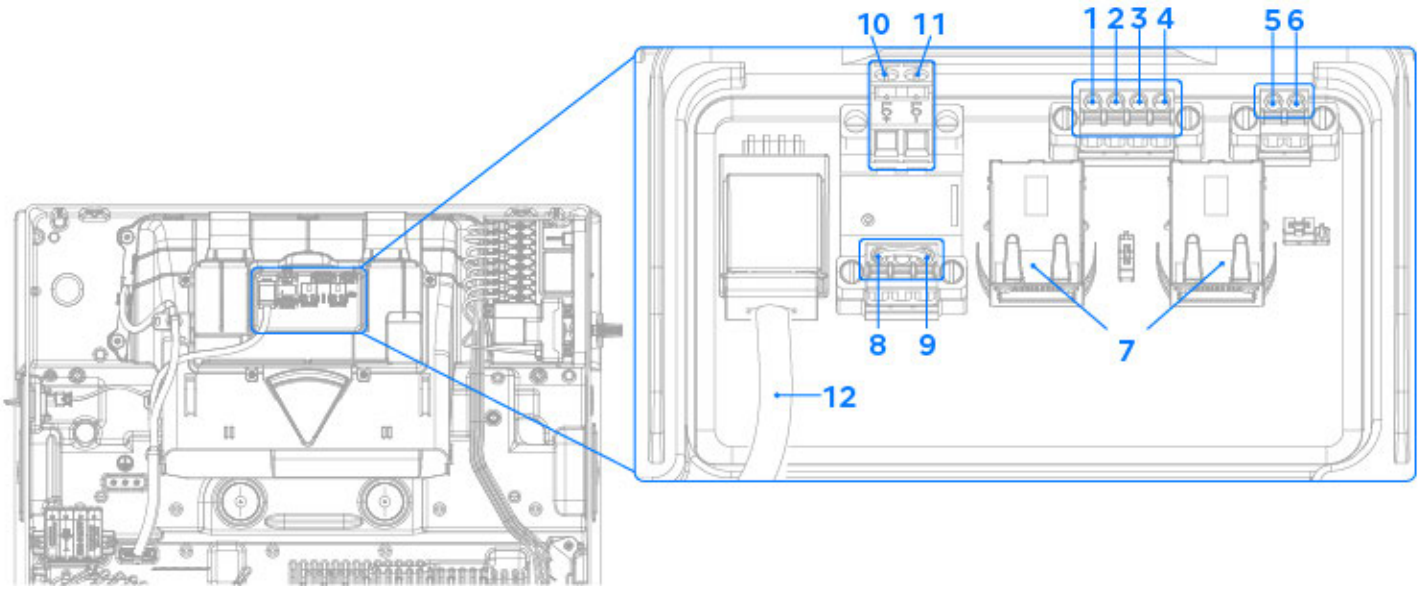

Communication Wiring to Backup Gateway 2

NOTE: Refer to local codes and standards for correct wiring practices and wire colors.

	Terminal Name	Recommended Wire Color	Wire Gauge	Wire Strip Length	Maximum Cable Length
1	CN- (CAN LO)	Orange	0.2 - 1.5 mm^2	8 mm	45 m for 1.5 mm^2, 35 m for 1 mm^2
2	CN+ (CAN HI)	Blue	0.2 - 1.5 mm^2		
3	GND	Black	1 - 1.5 mm^2		
4	12V	Red	1 - 1.5 mm^2		

The connector can accept wire gauges as small as 24 AWG, but the recommended minimum wire gauge for GND and 12V is due to potential voltage drop on long wire runs with smaller conductors.

Tesla Remote Meter RS-485 (RS485) Wiring (See *Connect Tesla Remote Meter on page 98*)

	Terminal Name	Recommended Wire Color	Wire Gauge	Wire Strip Length	Maximum Cable Length
5	RS-485 +	Red	0.2 - 1.5 mm^2	8 mm	100 m
6	RS-485 -	Black	0.2 - 1.5 mm^2		

Ethernet Jacks (See *Ethernet Wiring on page 129*)

	Terminal Name	Recommended Wire Color	Wire Requirements	Maximum Cable Length
7	RJ45 Ethernet jacks	-	CAT5 or better Ethernet wiring (see *Prepare Ethernet Wiring with RJ45 Connectors on page 129*)	100 m

	Terminal Name	Recommended Wire Color	Wire Gauge	Wire Strip Length	Maximum Cable Length
8	RSD +	Red	0.2 - 1.5 mm^2	8 mm	150 ft (45 m)
9	RSD -	Black	0.2 - 1.5 mm^2		

NOTE: The terminal between the two RSD terminals is not used.

Load Shedding (See *Load Shedding Feature on page 130*)

	Terminal Name	Recommended Wire Color	Wire Gauge	Wire Strip Length
10	Load Control +	-	0.2 - 1.5 mm^2	8 mm
11	Load Control -	-	0.2 - 1.5 mm^2	

TACO Low Voltage Harness

	Terminal Name
12	TACO low voltage harness (provides 12V power to TACO)

Prepare Ethernet Wiring with RJ45 Connectors

Recommended Tools


- RJ45 Ethernet crimping tool
- Ethernet tester


Prepare Ethernet Wiring

1. Cut the desired length of CAT5 (or better) wire.

   NOTE: See *Plan Cable Length Between Components on page 45* for maximum wire length between components.

2. Using an RJ45 Ethernet crimping tool, crimp the RJ45 connectors to the T-568A wire color standard as shown below:

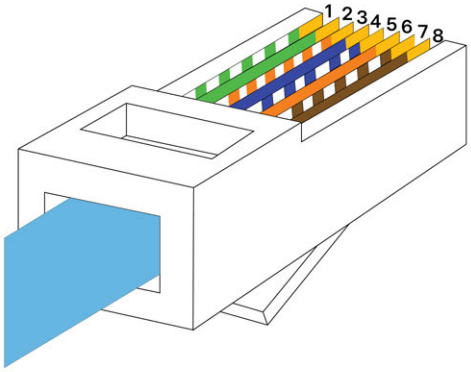

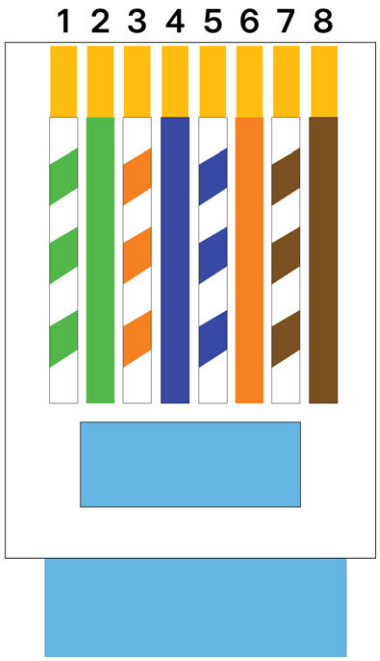

Pin-out	Wire Color
1	Green striped
2	Green
3	Orange striped
4	Blue
5	Blue striped
6	Orange
7	Brown striped
8	Brown

3. Test the Ethernet cable using an Ethernet tester. Ensure the readings from either end of the cable match, 1-8 in ascending order.

Load Shedding Feature

Overview

Beginning with Powerwall software version 25.2 and Tesla One version 12.32, Powerwall 3P allows for load shedding, meaning a low voltage, dry contact control circuit can be wired to control a specific load. For instance, an air conditioning load controlled by a thermostat can be wired to the Powerwall 3P Aux wiring terminals so that the load can be shed when the Powerwall system is off-grid.

CAUTION: Only use the load shedding feature to control loads; **the load shedding feature is not approved for AC-coupled solar**.

When load shedding has been configured and the Powerwall system is on-grid, the low voltage control circuit is closed and the load is powered. When the system is operating off-grid, the low voltage control circuit is open and the load is OFF.

When the system is wired for load shedding, the controlled load breaker can remain in the backup panel.


Wiring the System for Load Shedding

NOTE: The load shed relay is rated up to 60 V (DC or AC) and 2 A.

1. Route the low voltage cable to the equipment that is being load shed (in the example below, the cable is routed to the condenser).
2. Identify the two existing low voltage control wires at the condenser (in the example below, these wires connect the thermostat to the condenser).
3. Remove only one of the low voltage control wires (either wire can be removed).
4. Splice the low voltage control wire to one wire from the low voltage cable that was routed to the condenser in Step 1.

   NOTE: If installing an override switch, splice the low voltage control wire to the low voltage cable *and* to the switch (switch requirements defined below). The second low voltage control wire will also need to be spliced to the switch before being connected to the condenser.
5. Terminate the second wire from the low voltage cable at the condenser (where the wire was removed in Step 3).
6. Route the opposite end of the low voltage cable to Powerwall 3P and connect the wires to the **Aux** connector.

   NOTE: See *Tesla Asset Controller (TACO) Low Voltage and Communication Wiring on page 127* for wiring specifications.

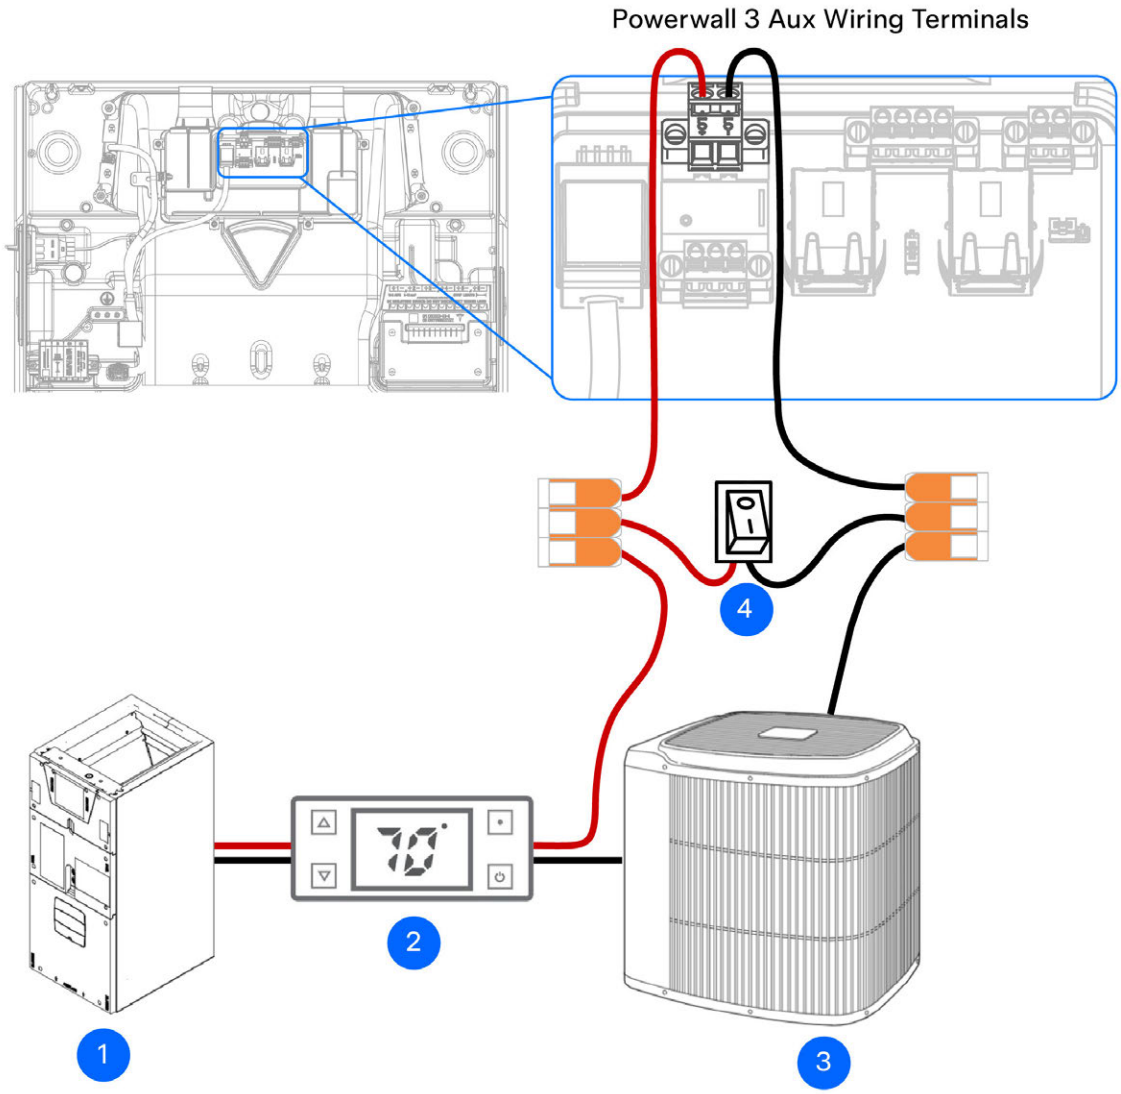

1	Air handler unit
2	Thermostat
3	Condenser
4	Optional override switch[1]

[1] Because the Powerwall 3P load shedding relay is normally open, a connected load will turn off when the TACO is not powered. Although this is unlikely to occur during typical operation, an override switch can be installed as shown above, allowing the customer to turn the connected load back on in the event the TACO is not powered. If installing an override switch, ensure it meets the following requirements:

- Rated for at least 60V, 2A
- Outdoor rated if installed outdoors
- Terminals must accept 0.2 -1.5 mm^2 wire

Configure Load Shedding in Device Setup

The load shedding feature must be configured during device setup in the Tesla One app; see the for complete instructions to configure the system.


1. Select **Advanced Settings** from the *Settings* screen.
2. Select **TACO Load Control Relay**.
3. Select **Off-grid Load Shedding** from the *Configuration Type* menu, then select **Done**.

NOTE: The low voltage control circuit is by default open on loss of power to the TACO. If the TACO is not back fed 12V from a Backup Gateway 2, it may open when the Powerwall 3P Enable switch is turned OFF, or if the system is "Stopped" in Tesla One. It may also open briefly during firmware updates and under abnormal fault conditions.

Configure Backup Gateway 2 Load Control Relay

As another option, a low voltage, dry contact control circuit can also be connected to the Backup Gateway 2 Aux terminals (see *Aux Wiring on page 135* for wiring specifications). For these systems, up to two low voltage control circuits can be connected, with one connected to Powerwall 3P and the other connected to Backup Gateway 2. If connecting only one low voltage control circuit, the installer can choose either the Powerwall 3P or the Backup Gateway 2.

To connect a low voltage control circuit to Backup Gateway 2, follow the steps outlined above, but route the low voltage cable to Backup Gateway 2 and connect the wires to **terminals 3 and 4** on the **Aux** connector:

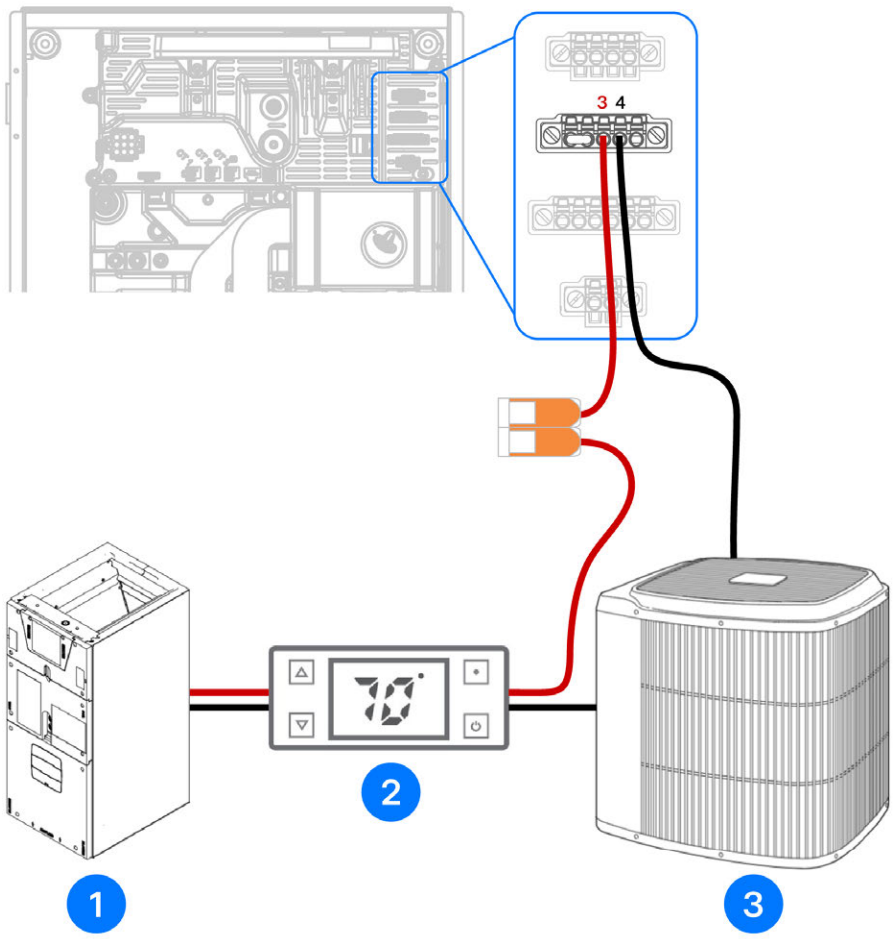

1	Air handler unit
2	Thermostat
3	Condenser

To configure the load shedding feature for Backup Gateway 2:

1. Select **Advanced Settings** from the *Settings* screen.
2. Select **Gateway Load Control Relay**.
3. Select **Off-grid Load Shedding** from the *Configuration Type* menu, then select **Done**.

Backup Gateway 2 Wiring

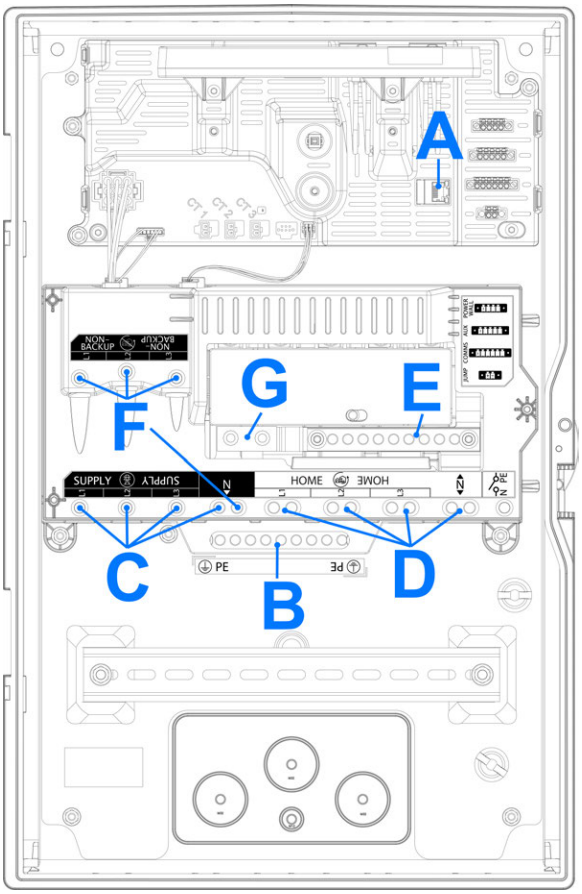


Table 9. Backup Gateway 2 Wiring: Power

	Terminal Name	Recommended Wire Color	Wire Size
A	Ethernet terminal - not used, see *Ethernet Jacks (See Ethernet Wiring) on page 127*		
B	Earth Bar	Green or Green/Yellow	2.5 – 25 mm^2
C	Grid Supply (L1, L2, L3, N)	Red, White, Blue, Black	2.5 – 35 mm^2
D	Backup Loads and Generation (L1, L2, L3, N)	Red, White, Blue, Black	2.5 – 35 mm^2
E	Generation Neutral Bar (N)	Black	2.5 – 25 mm^2
F	Non-Backup Loads and Generation Backup Loads and Generation (L1, L2, L3, N)	Red, White, Blue, Black	2.5 – 35 mm^2
G	Switched Neutral-Earth link	-	16 mm^2

Backup Gateway 2 Communication Wiring

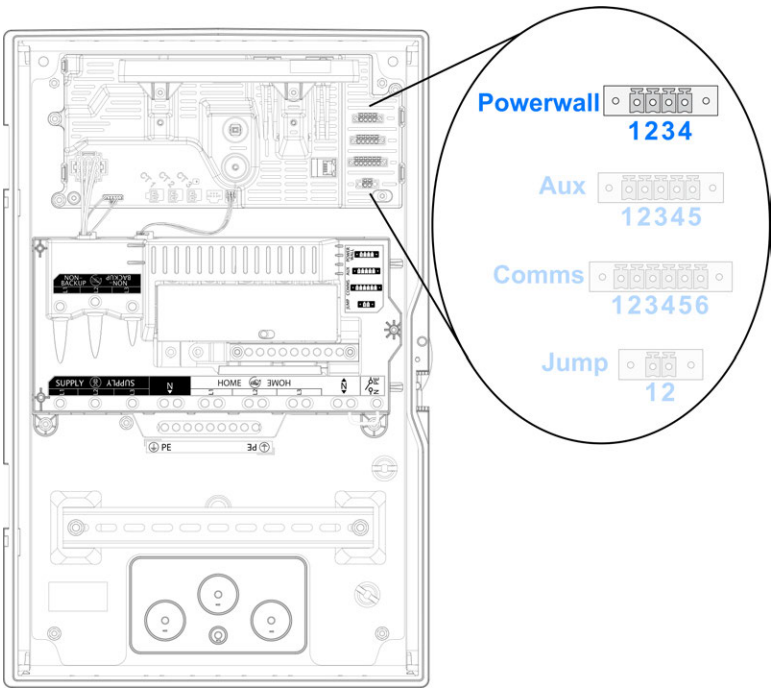


Table 10. Powerwall Communication Wiring

	Terminal Name	Recommended Wire Color	Wire Size	Wire Strip Length	Maximum Cable Length
1	12V	Red	1.5 mm^2 1.0 mm^2	8 mm	45 m for 1.5 mm^2, 35 m for 1 mm^2
2	GND	Black			
3	CN + (CAN HI)	Blue	0.2 - 1.5 mm^2		
4	CN – (CAN LO)	Orange			

The connector can accept wire gauges as small as 24 AWG, but the recommended minimum wire gauge for GND and 12V is due to potential voltage drop on long wire runs with smaller conductors.

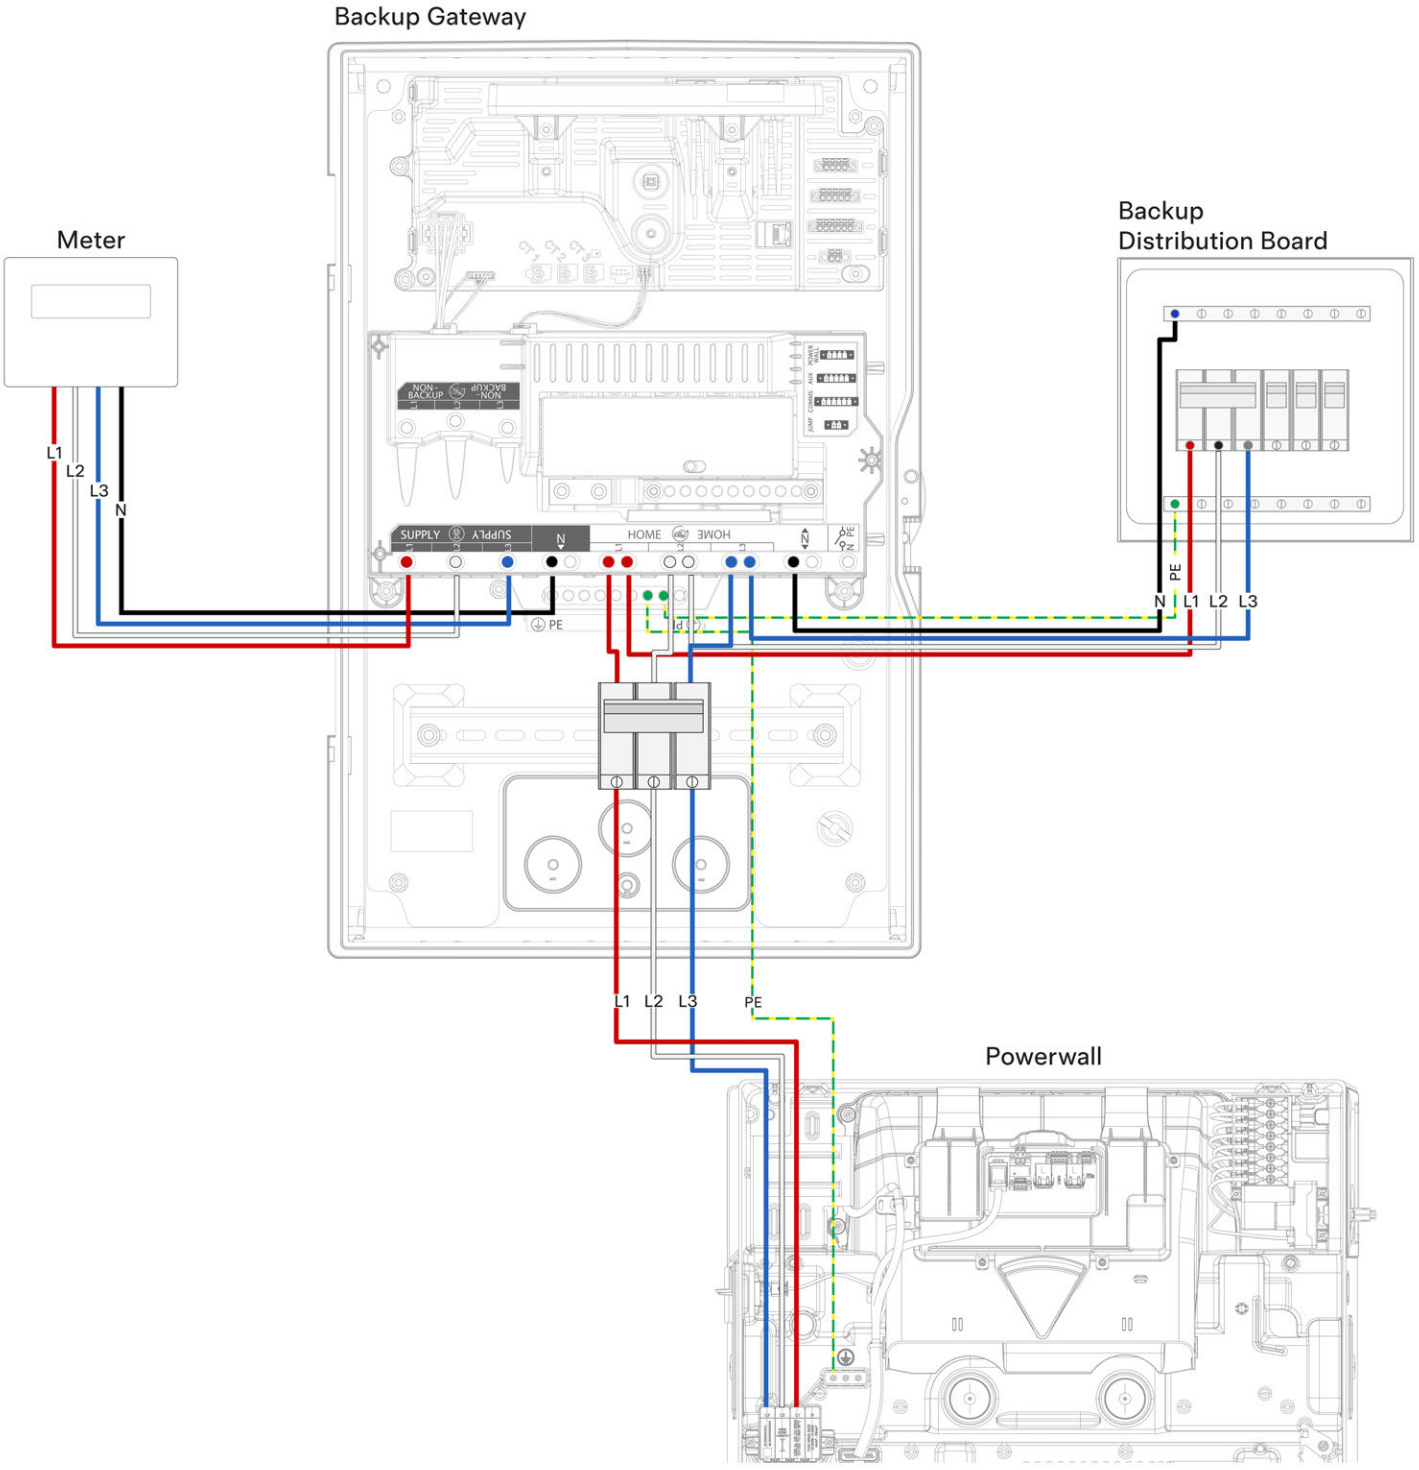
NOTE: 4-conductor communication cable must be 300 V rated or double insulated with one twisted pair shielded copper cable.

Table 11. Aux Wiring

	Terminal Name	Recommended Wire Color	Wire Size	Wire Strip Length
1	Site Shutdown (OUT)	-	0.2 - 1.5 mm^2	8 mm
2	Site Shutdown (IN)	-	0.2 - 1.5 mm^2	
3	Generator / Load Control (+)	Red	0.2 - 1.5 mm^2	
4	Generator / Load Control (-)	Black	0.2 - 1.5 mm^2	
5	Interlock pin	-	0.2 - 1.5 mm^2	

APPENDIX C: SYSTEM WIRING DIAGRAMS

The following diagrams are intended for illustration purposes only, representing sample site layouts to show example system layout and metering. These diagrams should not be considered complete plan sets.



Backup Gateway
Meter
Backup
Distribution Board
L1
L2
L3
N
PE
SUPPLY
HOME
N
L1 L2 L3
PE
Powerwall

APPENDIX D: SAFETY FEATURES

Powerwall 3P Switch Locking Mechanisms

On / Off Switch Locking Mechanism


The Powerwall 3P On / Off switch has a locking mechanism. When the switch is locked, it cannot be turned on.

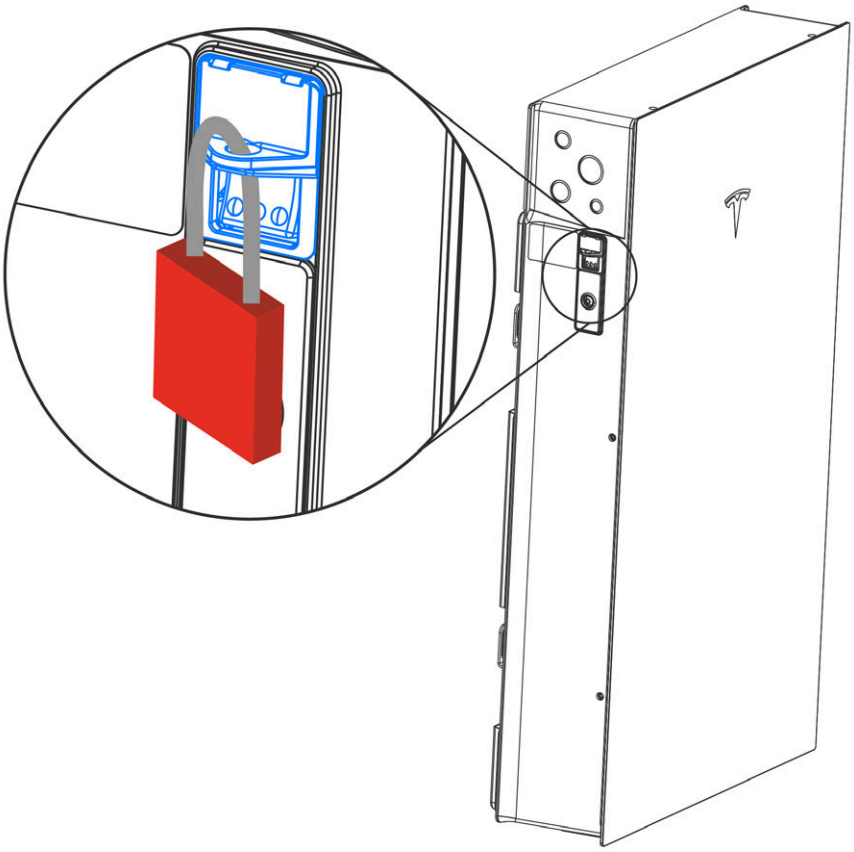

Integrated DC Isolator Locking Mechanism

The Powerwall 3P integrated DC isolator has a locking mechanism. When locked, it cannot be turned on. To use the locking mechanism:

1. Push the front of the switch in to make the keyholes on either end of the switch accessible.
2. Place a 4 mm shackle lock through one of the keyholes.

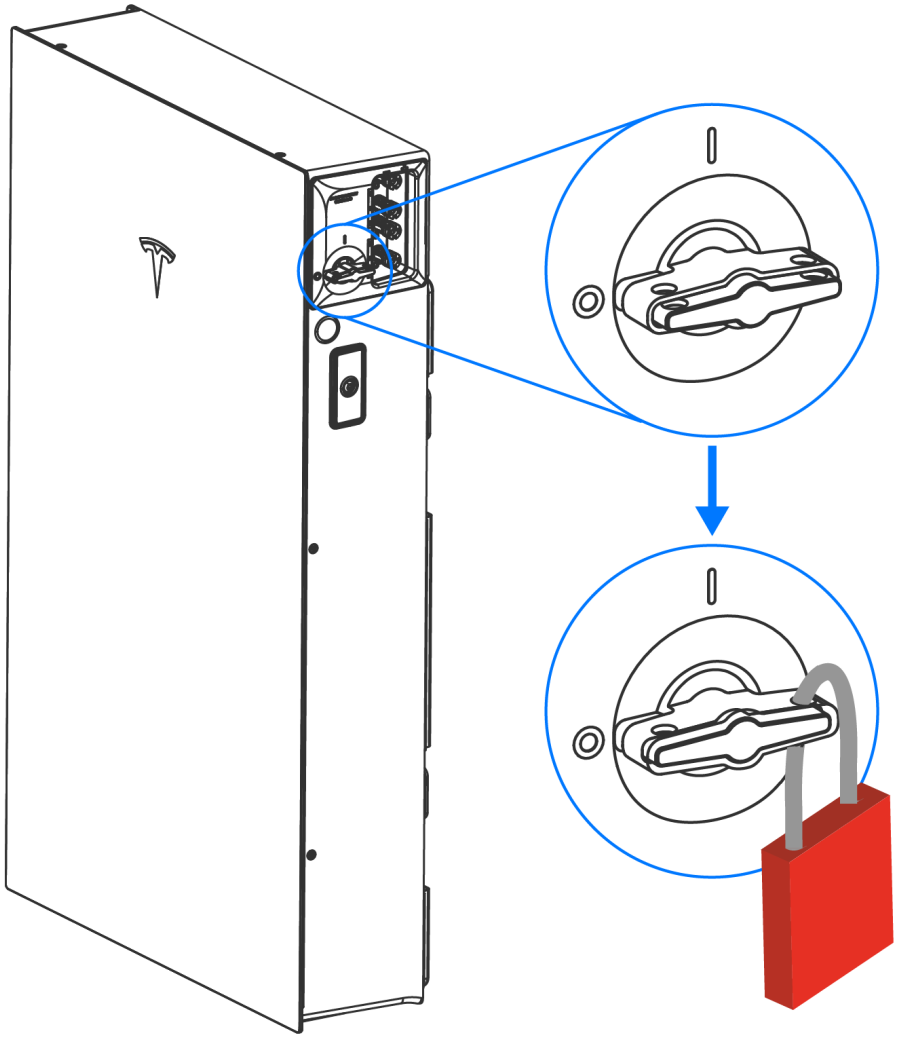

NOTE: If Powerwall 3P experiences a fault, causing the integrated DC isolator to trip, the switch may remain in the ON position even though Powerwall 3P is disabled. Contact Installer Support for guidance to address any issues and reset Powerwall 3P to resume operation.

NOTE: If the integrated DC isolator appears to be in the ON position but Powerwall 3P is not producing solar as expected, contact Installer Support.

Arc Fault Detection and Protection

The Arc-Fault Circuit Interrupter (AFCI) mechanism detects series arcs within the PV array.

The detection algorithms work based on both voltage and current. When an arc fault is detected, Powerwall 3P stops converting power and disconnects from the grid. Once a fault has been detected, it can only be reset manually on-site using the mobile app via remote command. The reset cannot be automatically cleared. The fault is displayed with an LED visual indicator, which cannot be reset automatically.

To activate the AFCI self-test feature, power cycle the unit.

Protective Earth Impedance Check

The protective earth (PE) connection is checked by firmware for sufficiently low impedance at least once per day.

The scheduled time for the PE impedance test is every morning before closing the inverter side AC relays.


Upon detected loss of PE or identification of a high impedance value, Powerwall 3P does not connect to the grid until the fault is cleared manually or a repeated PE impedance test demonstrates a sufficiently low impedance.

System LED Behavior

Powerwall LED Behavior


Tesla Logo LED

Powerwall has an illuminated logo LED. Expansion units do not have an LED and therefore the logo is not illuminated. The following diagram and table are relevant only for Powerwall units (not Expansion units).

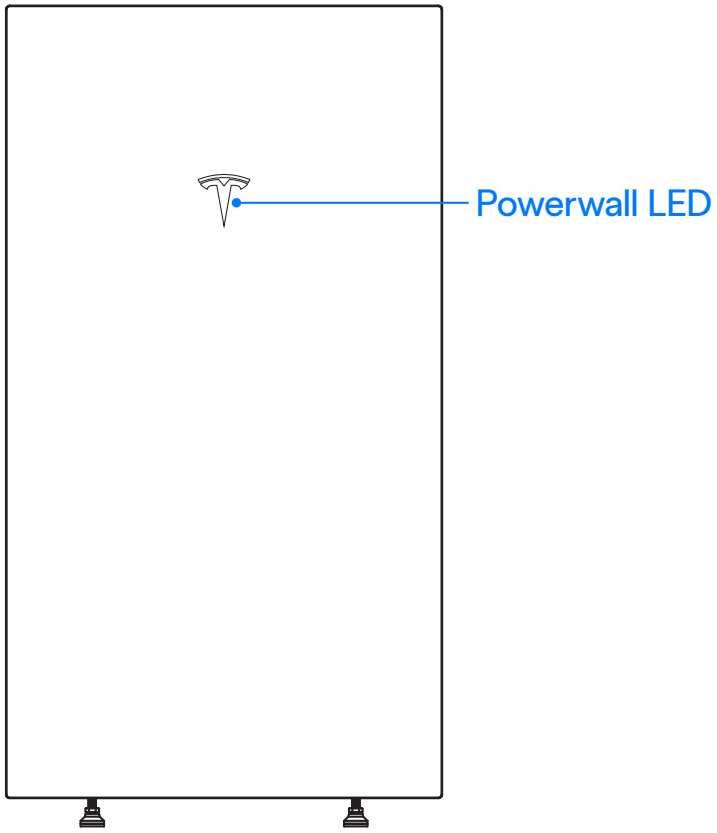

LED State	Indication
Solid white	Normal operation
Flashing white	Powerwall is idle. Will enter sleep state if no actions in progress
Off	Powerwall is off or in sleep state
Flashing Red	Inverter (PWS) fault, e.g. GFCI, etc.

Tesla Asset Controller (TACO) LEDs

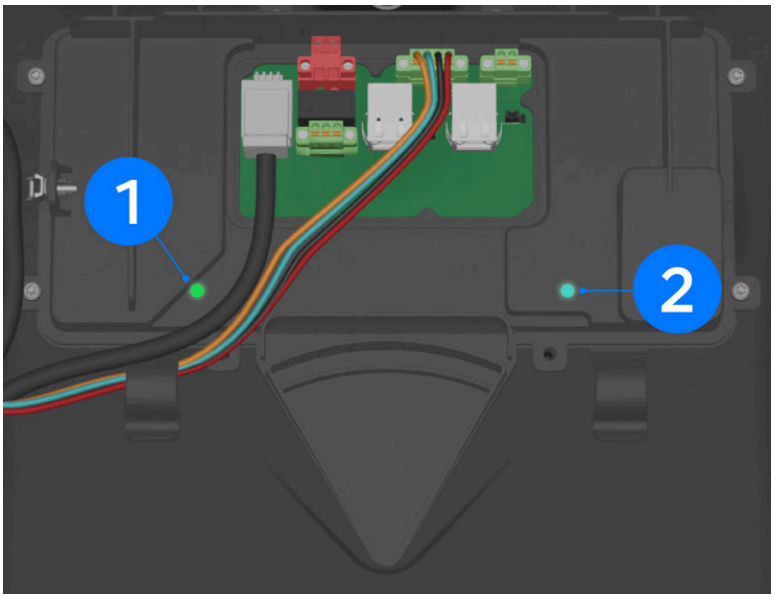

Power LED (1)	Status LED (2)	Status	Details
Solid green	Solid light blue	Ready to commission	TACO is powered and the config application is running. TeslaPW network should be broadcasting
Solid Green	Solid Green	Not ready to commission	TACO is powered but the config application is not yet running. If Powerwall 3P remains in this state permanently, contact Install Support
Solid Green	Red	Not ready to commission	TACO is powered but the unit is still booting up. If Powerwall 3P remains in this state permanently, contact Install Support
OFF	OFF	No power (12V) to TACO	Note that power can be provided by either the Backup Gateway 2 12V or internal 12V. 1. Turn the Powerwall 3P switch ON and wait at least 5 minutes 2. Confirm the TACO low voltage harness is plugged all the way in (see *TACO Low Voltage Harness on page 128*, refer to the section in the Powerwall 3P Installation Manual) 3. Confirm the 12V wiring from Backup Gateway 2 to Powerwall 3P (TACO terminals 1-4 in *Communication Wiring to Backup Gateway 2 on page 127*) is correct If Powerwall 3P remains in this state, contact Install Support

NOTE: During a firmware update, LED 2 may flash red. This is expected behavior, and the flashing will stop once the firmware update is complete.

NOTE: The Tesla Asset Controller LEDs are not visible when the Powerwall 3P front cover is installed.

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

Multi-Unit Installation Overview


Powerwall 3P can be installed with additional Powerwall 3P units for additional solar and storage capabilities, and/or with Powerwall 3P Expansion units for additional storage (kWh).

CAUTION: Do not connect the Leader and Follower Powerwall 3P units using a Powerwall 3P Expansion Harness. Attempting to connect a Powerwall 3P to anything other than an Expansion unit using the Expansion Harness may impact product performance or lead to product failure.

Maximum Number of Powerwall 3P Units	Up to (4) Powerwall 3P units
Leader Powerwall 3P	The Powerwall 3P connected to the Backup Gateway 2 via 12V / CAN communication wiring is designated as the **Leader Powerwall 3P** **NOTE:** The system is commissioned by connecting to the Leader Powerwall 3.
Follower Powerwall 3P	Any Powerwall 3P other than the Leader is connected via inter-Powerwall Ethernet wiring and is designated as a **Follower** unit
Maximum Number of Expansion Units	Up to (3) Expansion units (for a maximum total of (7) units) **NOTE:** Expansion units must be connected to the **Leader Powerwall 3P**; they will not function if connected to a **Follower** unit.

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

Figure 50. Multi-Powerwall 3P System with up to Four Powerwall 3P Units and up to Three Expansion Units

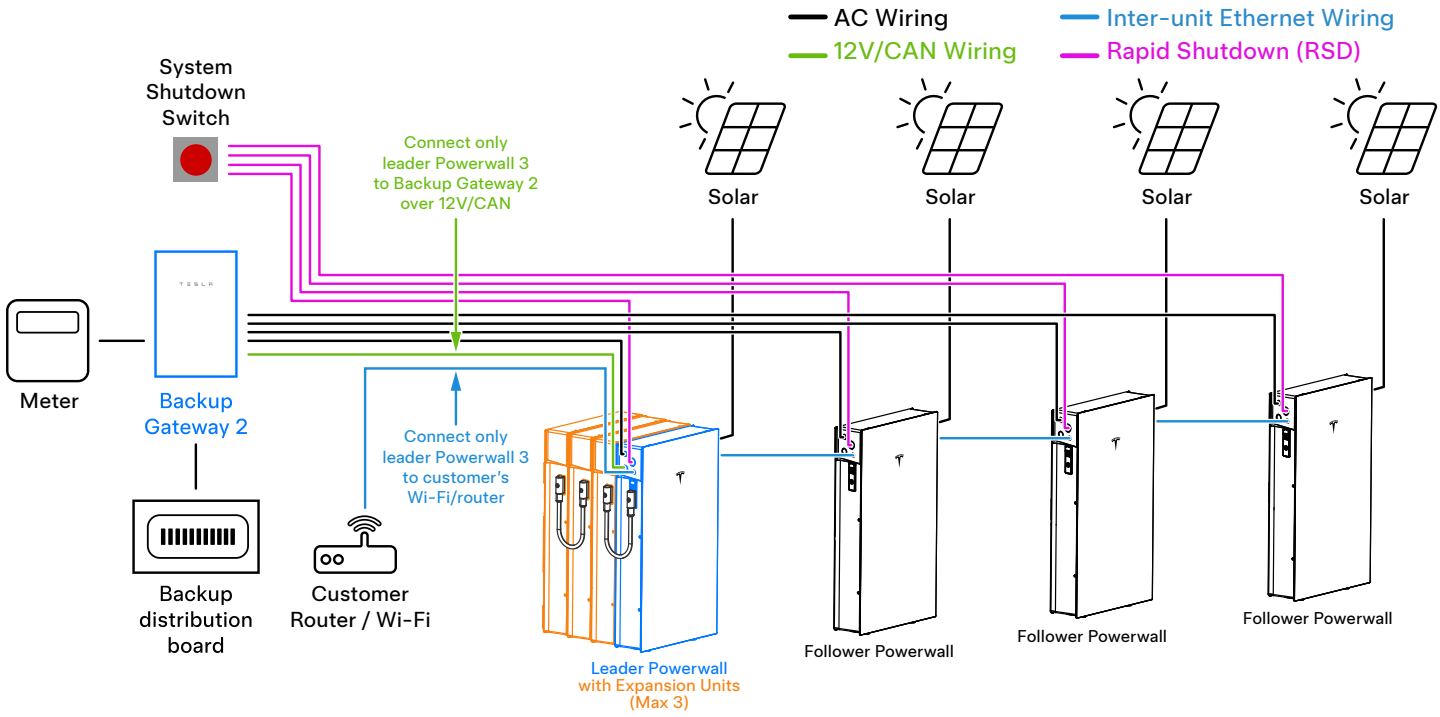

Electrical Equipment Sizing and Overcurrent Protection

Pre-Requisites for Design

Before designing a Powerwall 3P system with three or more Powerwall 3P units:

- AC line impedance must be measured at the installation site to ensure the utility grid connection is able to support the desired quantity of Powerwalls. If the required grid impedance is too high, the Powerwalls may not connect to the grid, resulting in undesirable operation. See *Impedance Requirements for Multi-Powerwall 3P Systems on page 146* for maximum impedance values.
- To minimize impedance:
  - Install the Powerwalls as close as possible to the point of interconnection with the grid. The recommended maximum wire length is 10 m.
  - Install wires larger than required by code between the Powerwall generation panel and the point of interconnection with the grid. For example, if the design requires 95 mm^2 wire, use 120 mm^2 wire.
- Designers must properly size overcurrent protection and loads to account for the full power potential of multiple Powerwalls. For example, a 4-Powerwall system is capable of discharging up to 46 kW of power.

Service Type and Capacity Requirements

Up to (4) Powerwall 3P units can be installed on a single site, but the maximum number of Powerwalls may be limited by the site electrical service, utility grid infrastructure, or local requirements; therefore an impedance test is required to confirm.

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

Line Impedance Requirements

The sensitivity of the system to line impedance increases with the number of Powerwalls in the system. (See *Impedance Requirements for Multi-Powerwall 3P Systems on page 146* for the maximum allowable impedance as it relates to number of Powerwalls.)

If grid impedance at a site exceeds the maximum allowable value, do either of the following:

- Decrease the impedance of the site grid connection. This may require coordinating with the local electrical utility. See "Minimize Impedance" in *Pre-Requisites for Design on page 144* for suggestions.
- Reduce the quantity of Powerwalls installed at the site to meet the maximum allowable impedance value.

If impedance values exceed the requirement for the installed number of Powerwalls, the system may not function properly.

Measuring Line Impedance

To determine the line impedance at a site, measure between Line and Neutral where the Powerwalls will be interconnected to the site electrical system with testing equipment such as the following:

- Fluke 1660 Series Installation Tester (1662, 1663, or 1664)
- Metrel-MI3000 Multifunction Tester
- Megger LTW315 Loop Impedance Tester

Example Line Impedance Test Instructions

For details on line impedance testing, refer to the test equipment manufacturer's instructions. The steps below are general guidelines only.

WARNING: Impedance tests must be performed on an energized electrical system. Impedance tests should be carried out only by trained electricians using appropriate safety equipment and safety practices.

1. Follow manufacturer instructions to calibrate and zero the impedance tester before taking measurements.
2. If the site has a 3-phase electrical system, complete the test on L1 first, then move to L2 and L3 in sequence.
3. Connect all three voltage test leads – Line, Neutral, and Ground.
4. Follow manufacturer instructions to verify that the correct voltage is present. Switch the tester to a voltage measurement mode and check Line-to-Neutral and Line-to-Ground voltages.
5. Follow manufacturer instructions and take an impedance measurement where the Powerwalls will be interconnected to the site electrical system. Switch the tester to the appropriate impedance measurement mode and take the following readings:
    - Line-Neutral
    - Line-Ground

    NOTE: The Line-Neutral impedance measurement is the value referenced in *Impedance Requirements for Multi-Powerwall 3P Systems on page 146*.
6. Record the impedance measurements.
7. On 3-phase systems, repeat steps 3-6 for each remaining phase.

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

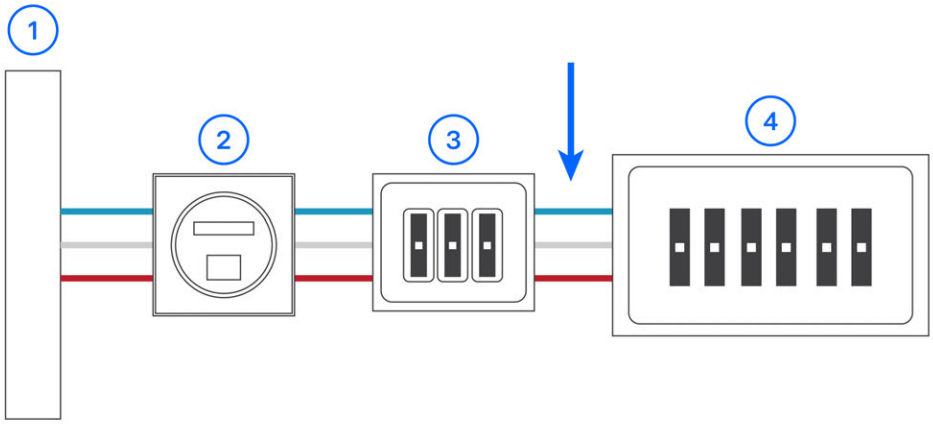


Table 12. Recommended Interconnection Point for Large Multiple Powerwall Systems

1	Service Entrance
2	Meter
3	Main Switch
4	Main Panel

NOTE: Impedance should always be measured at the point of Powerwall interconnection.

Table 13. Impedance Requirements for Multi-Powerwall 3P Systems

# of Powerwalls	Maximum Line Impedance
	Line - Neutral
3	0.27 Ohms
4	0.20 Ohms

NOTE: Only (4) Powerwall 3P units can be installed per site.

NOTE: For Powerwall 3P systems, Expansion units are not considered in impedance measurements.

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

Install Multiple Powerwall 3P Units

Leader to Follower Communication	Ethernet (see *Prepare Ethernet Wiring with RJ45 Connectors on page 129*)
Internet Connection for Multiple Units	**Option 1**: The Leader Powerwall 3 is connected to customer router over Wi-Fi
	Option 2: Either the first or last Powerwall 3P (can be Leader or Follower) in the chain is connected to customer router via Ethernet **NOTE:** Only connect the router to a Powerwall 3P at either end of the chain; do not connect it in the middle of the chain (see *Connecting Powerwall 3P Units via Ethernet on page 148* for example diagrams).
Maximum Wire Length Between Units	See *Plan Cable Length Between Components on page 45*
Overcurrent Protection Devices	Each Powerwall 3P requires its own circuit breaker
Splitting PV Production Between Multiple Powerwall 3P Units	Splitting PV production (strings) equally between the Powerwall 3P units is preferred but not required

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

Connecting Powerwall 3P Units via Ethernet

All Powerwall 3P units other than the **Leader** unit must be connected via inter-Powerwall Ethernet wiring and are designated as **Follower** units. The units can be connected in any order, so long as each unit is connected to at least one other unit.

Figure 51. Option 1: Leader Powerwall 3P Connected to Customer Router via Wi-Fi (Leader at Start of Chain)

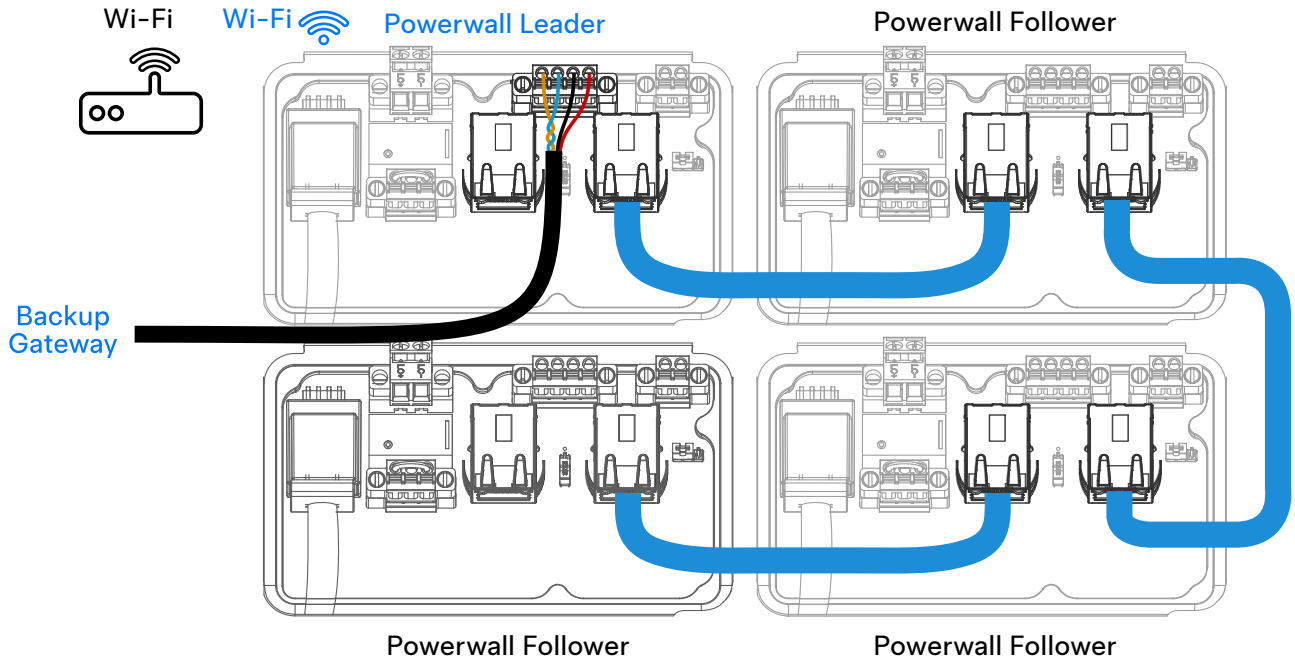


Figure 52. Option 2: Leader Powerwall 3P Connected to Customer Router via Wi-Fi (Leader in Middle of Chain)



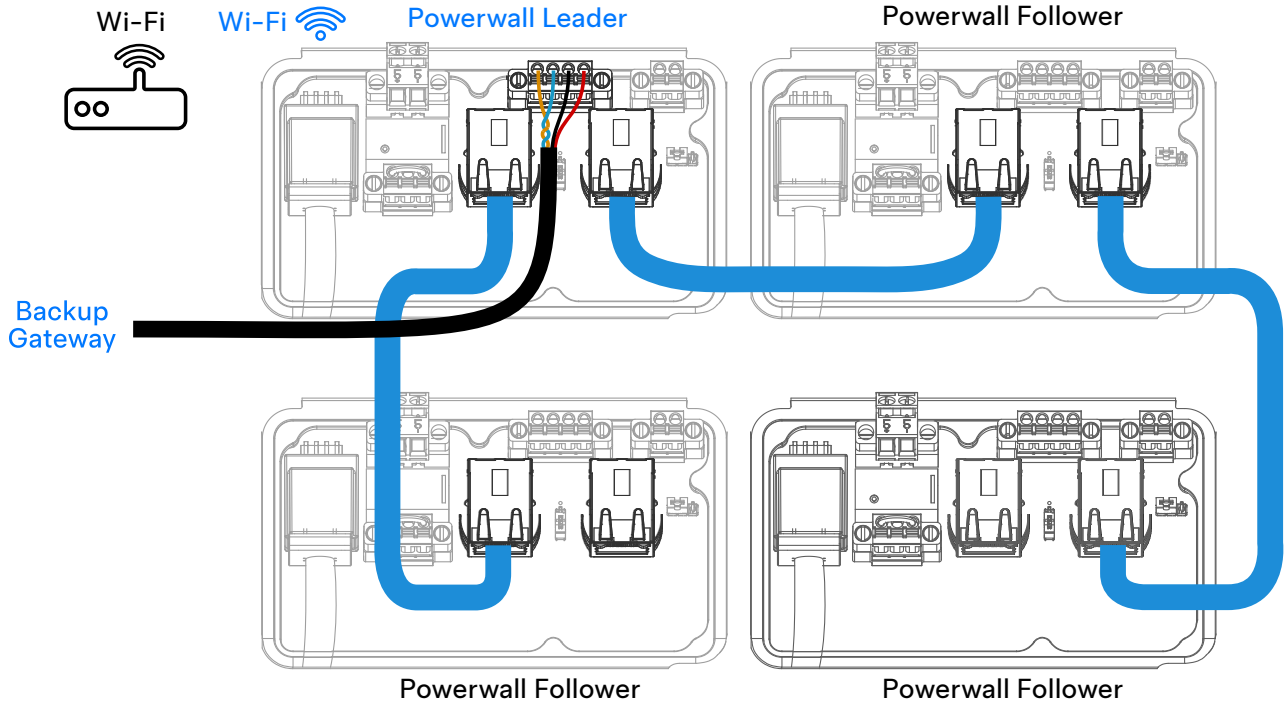


Figure 53. Option 3: Leader Powerwall 3P Connected to Customer Router via Ethernet

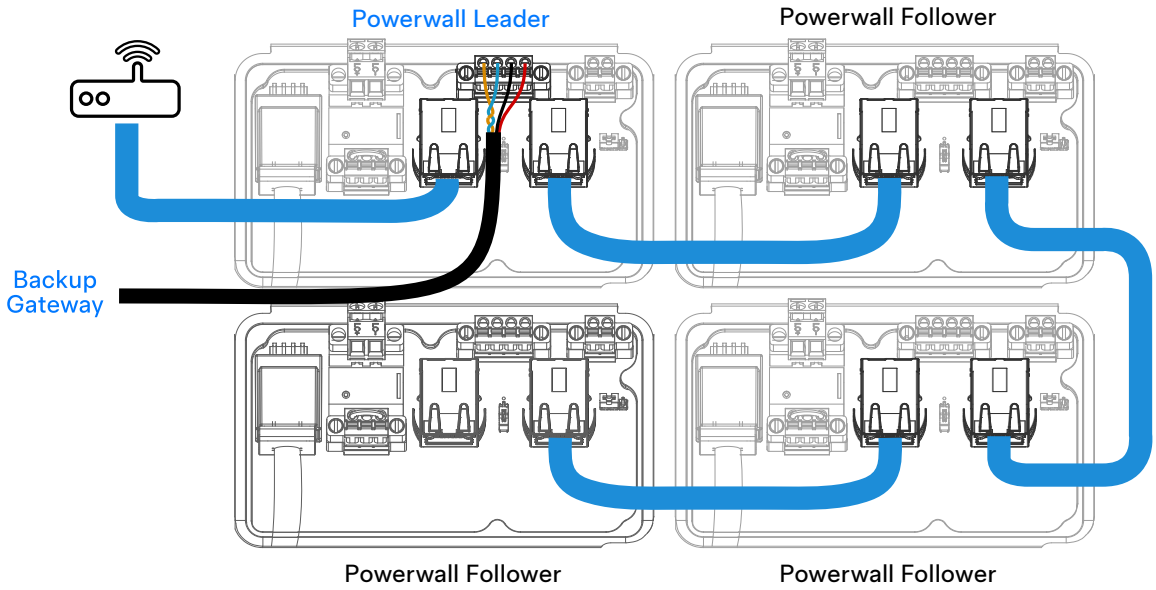

NOTE: If connecting the system to the customer router via Ethernet, connect the router to either the first or last Powerwall 3P in the chain. Do NOT connect the router in the middle of the chain.

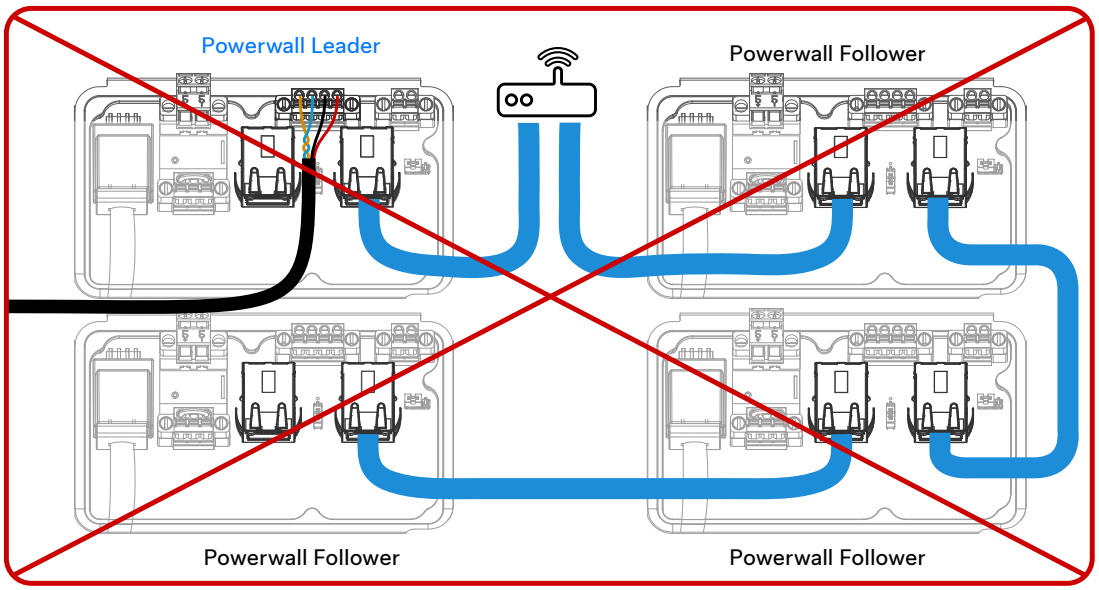

Commissioning Multi-Powerwall 3P Systems

For instructions to commission a multi-Powerwall 3P system, see the .

Install Expansion Units with Powerwall 3P

Figure 54. Powerwall 3P with Stacked Expansion Units


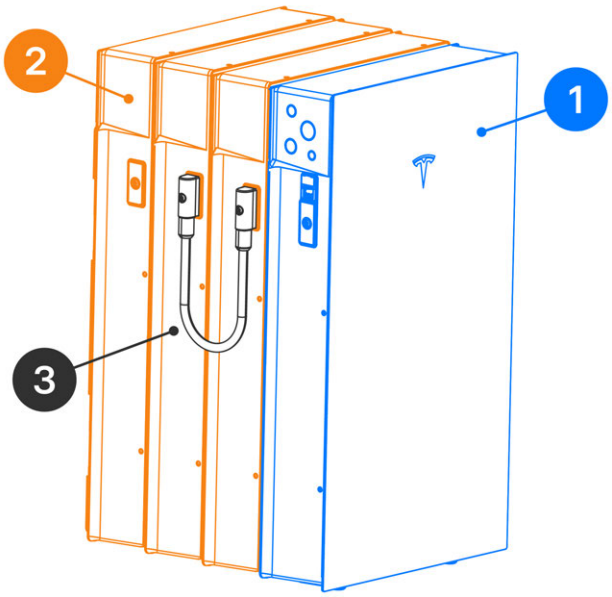


Figure 55. Powerwall 3P with Wall-Mounted Expansion

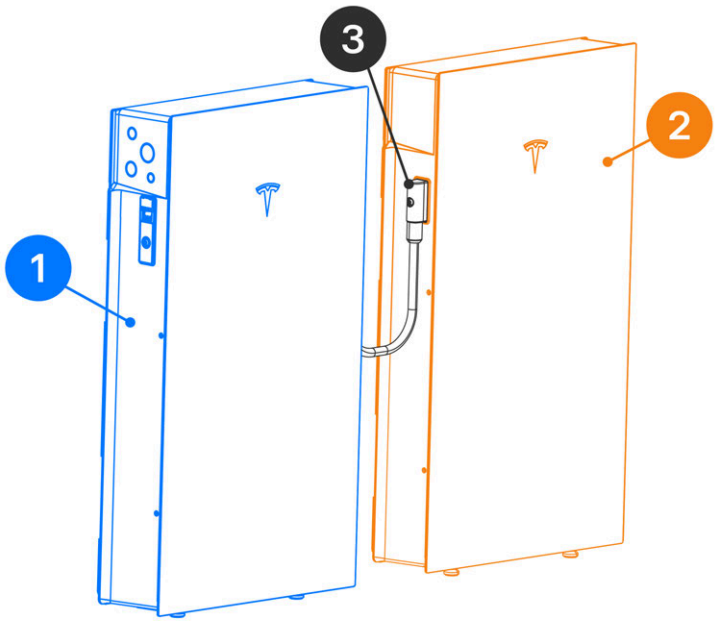

1	Powerwall 3P
2	Powerwall 3 Expansion
3	Expansion Harness

Expansion units offer additional storage for Powerwall 3P systems. Key points about Expansion units include:

- **Function**: An Expansion unit does not include an inverter; it is only additional storage (kWh)

  NOTE: Expansion units do not have an LED. Wall-mounted Expansion units are installed with the same glass front cover as Powerwall 3P, but the logo on the front will never light because there is no LED in the unit.

  NOTE: Expansion units are not field serviceable.


- **Dimensions**: The Expansion enclosure is the same height and width as Powerwall 3P, but is 25 mm slimmer than Powerwall 3P (*see diagram on page 152*)
- **Mounting**: Expansion units can be mounted individually, or ground-mounted in a stacked configuration behind a Powerwall 3P
- **Expansion Connection**: Expansion units can only be connected to Powerwall 3P or other Expansion units via the Expansion Harness (see *Expansion Harness on page 153*). Each unit (Powerwall 3P and Expansion) has (2) Expansion ports, one on each side of the enclosure

  NOTE: The Expansion units are electrically paralleled with a Powerwall 3P.

- **System Size**: Up to (3) Expansion units can be connected to the Leader Powerwall 3P
- **Flexibility**:
  - The Expansion Harness can be plugged in on either side of a Powerwall 3P or an Expansion unit


APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

- Powerwall 3P can be installed at either end of a chain of Expansion units

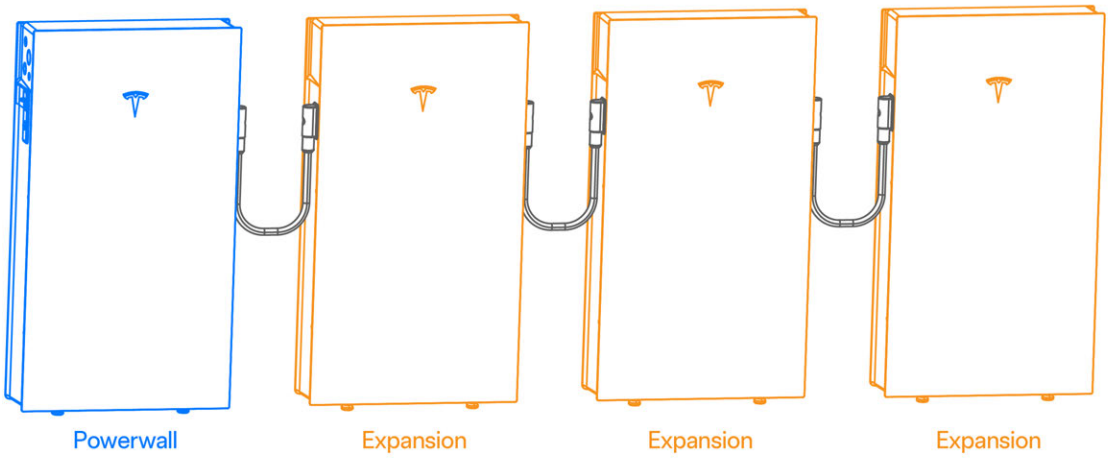

NOTE: When Expansion units are wall-mounted and connected on only one side of Powerwall 3P, the maximum combined harness length is 4 m (see *Allowable Harness Combinations on page 180* for more information). When Expansion units are connected on both sides of Powerwall 3P, there is no limit on the maximum combined harness length.

NOTE: Tesla recommends connecting the Expansion Harness to the port on the right side of the leader Powerwall 3P so that the model number label on the left side of the unit is not obscured.

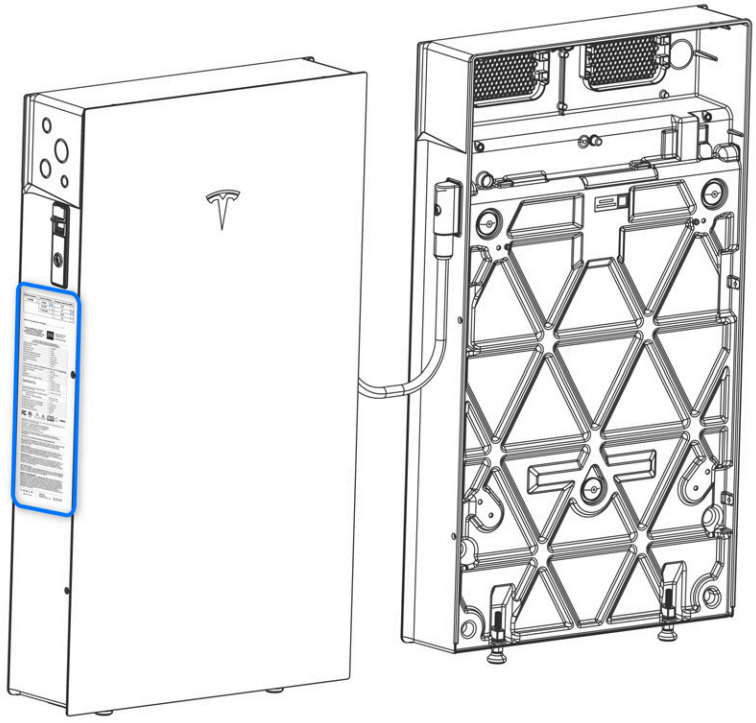

- Powerwall 3P can be installed in the middle of a chain of Expansion units

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS


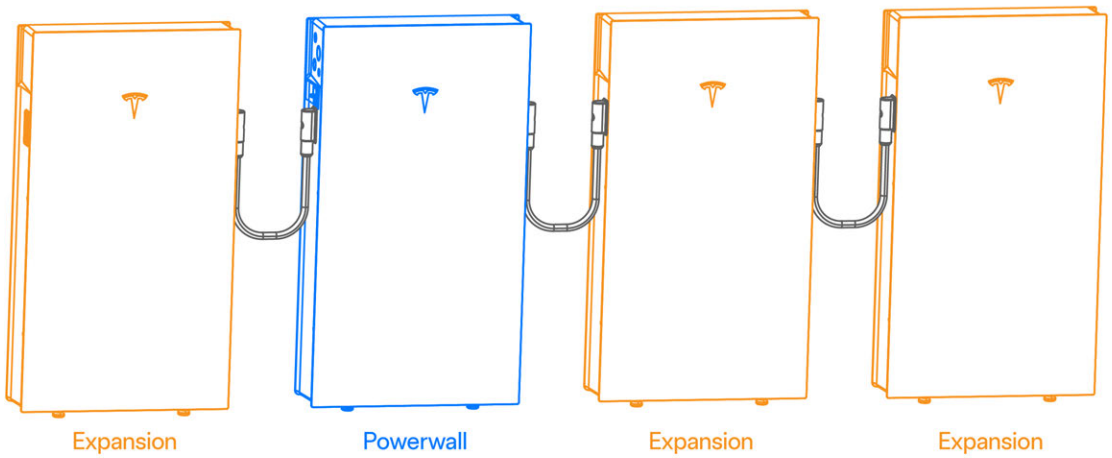


Figure 56. Powerwall 3P Dimensions Compared with Expansion Unit Dimensions

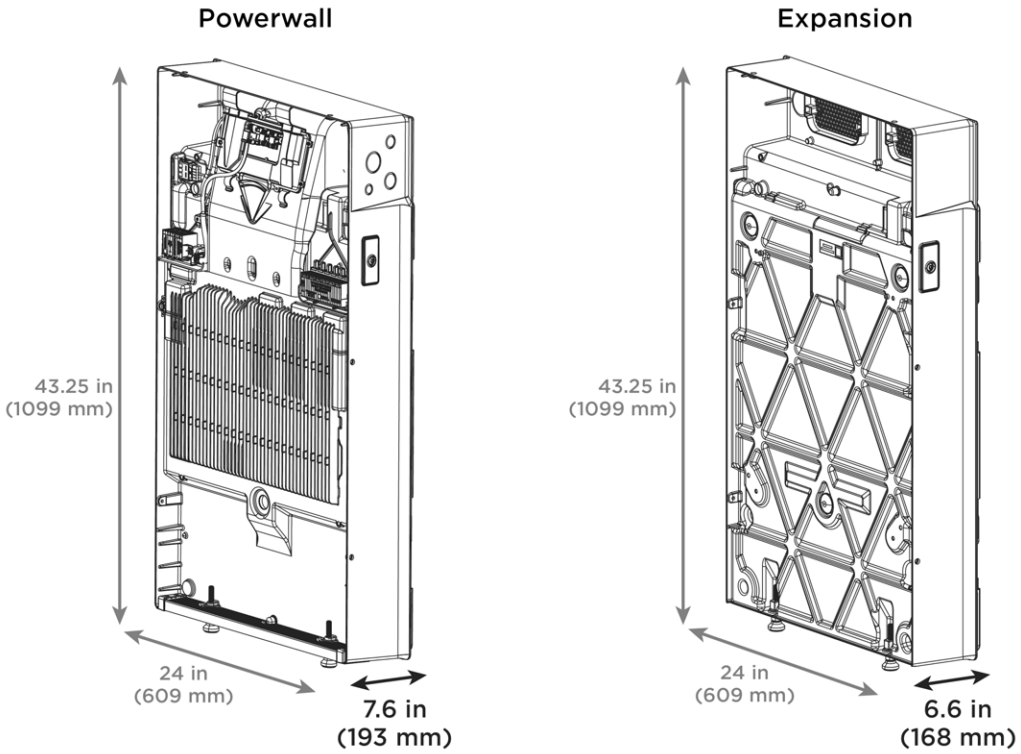

NOTE: Powerwall 3P and the Expansion unit are both 1105 mm tall when the glass front cover is installed.


APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

Expansion Harness

The Tesla Expansion Harness is a non-metallic sheathed hard-use appliance cable assembly rated for indoor or outdoor installations. The cable uses an extruded TPE jacket that is moisture, flame, and UV resistant, and has a temperature rating of -40°C to 105°C. The harness is required for electrical connection between the Powerwall 3P and the Expansion units.

NOTE: Field wiring of the Expansion unit, alteration of the Expansion Harness (e.g. splicing), and/or routing the Expansion Harness through a wall or partition are prohibited.

WARNING: Do not modify the Expansion Harness in any way. Doing so would result in product damage that could void the product warranty.

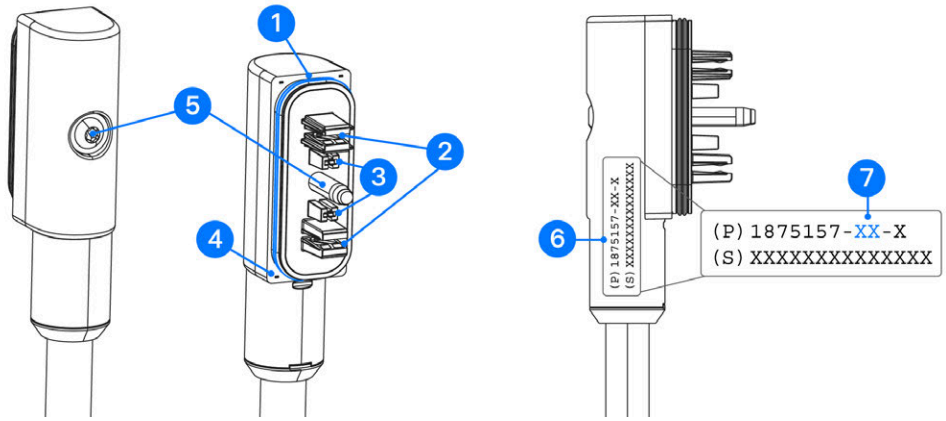

1	Sealing gasket
2	DC jaws
3	Communication ports
4	Grounding spikes (4)
5	Harness screw (T40)
6	Harness part number
7	Harness length identifier in part number

Table 14. Expansion Harness Options

Expansion Harness Part Number	Expansion Harness Length
Tesla P/N 1875157-**05**-y	0.5 m
Tesla P/N 1875157-**20**-y	2 m
Tesla P/N 1875157-**40**-y	4 m


NOTE: When Expansion units are wall-mounted and connected on only one side of Powerwall 3P, the maximum combined harness length is 4 m (see *Allowable Harness Combinations on page 180* for more information). When Expansion units are connected on both sides of Powerwall 3P, there is no limit on the maximum combined harness length.

NOTE: Expansion Harnesses can be plugged into both the left and right ports on the Leader Powerwall 3P.

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

CAUTION: The Expansion Harness ships in protective packaging from the factory.


- Do not remove the protective packaging until ready to plug the Expansion Harness into the Expansion port
- If the Expansion Harness is unplugged and needs to be set aside, place it back in the protective packaging
- If the Expansion Harness is dropped or otherwise damaged, or if dust / debris enter its DC jaws and/or communication ports, **do not use that Expansion Harness**. Recycle it and use a new Expansion Harness

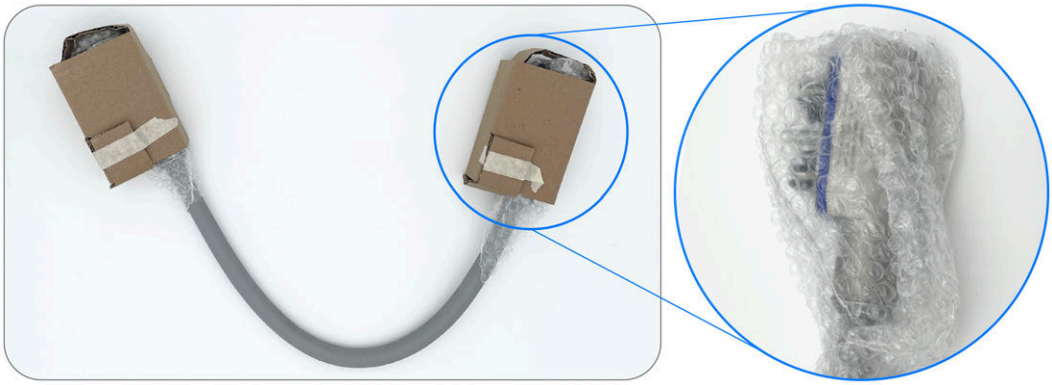

NOTE: The Expansion Harness can be painted under the following conditions:



- The paint is latex or acrylic-based (do not use an oil-based paint)
- Only the harness cable is painted; do not paint the connectors, or any part of Powerwall 3P or Expansion

A primer coat prior to painting is recommended to help with adhesion and bonding.

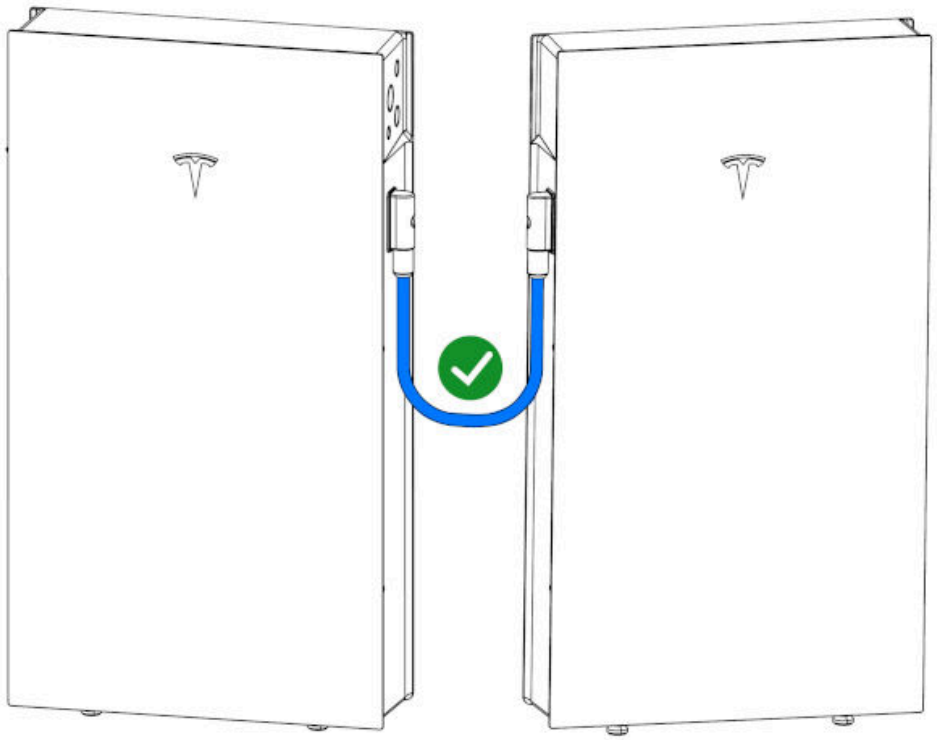

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS


Expansion Mounting Configurations

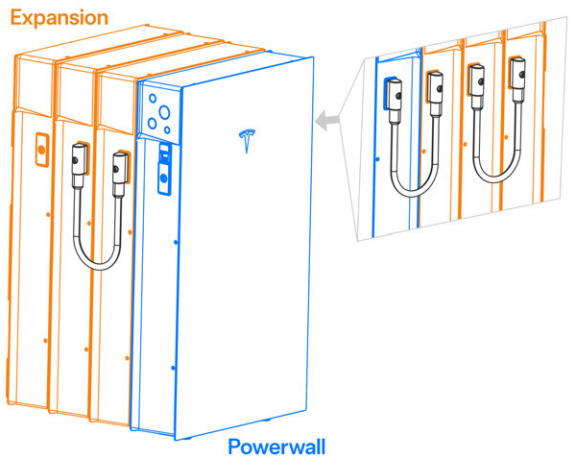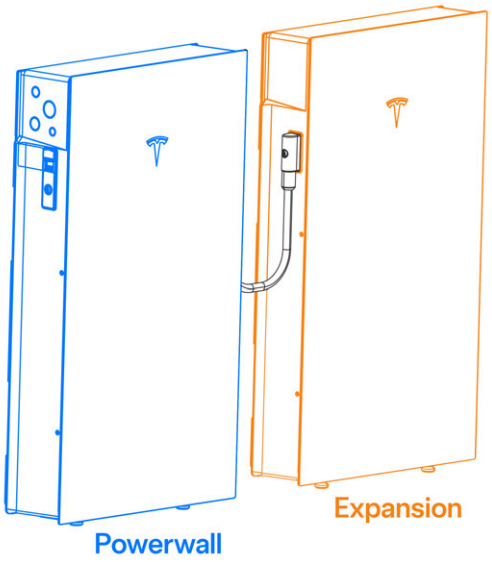	Stacked Configuration	Wall-Mounted Configuration
		
Kit P/N	Tesla P/N 1978070-xx-y	Tesla P/N 1978069-xx-y
Included Accessories	See *Powerwall 3P Stacking Expansion Kit on page 156*	See *Powerwall 3P Wall-Mount Expansion Kit on page 157*
Expansion Harness (ordered separately, see *Expansion Harness on page 153* for part number location)*	Tesla P/N 1875157-05-y	Tesla P/N 1875157-**05**-y Tesla P/N 1875157-**20**-y Tesla P/N 1875157-**40**-y **NOTE:** When Expansion units are wall-mounted and connected on only one side of Powerwall 3P, the maximum combined harness length is 4 m (see *Allowable Harness Combinations on page 180* for more information). When Expansion units are connected on both sides of Powerwall 3P, there is no limit on the maximum combined harness length.
Expansion Harness Straps	Not required	Tesla P/N 1730711-xx-y, some are included in accessory bag but additional straps can be ordered (Bridgeport US-6171 strap)
Installation Instructions	*Install Stacked Expansion Units on page 158*	*Install Wall-Mounted Expansion Units on page 180*

*Expansion harnesses can be plugged into both the left and right ports on the Leader Powerwall 3P. See *Install Wall-Mounted Expansion Units on page 180* for a table of all allowable harness combinations.

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS


Powerwall 3P Stacking Expansion Kit

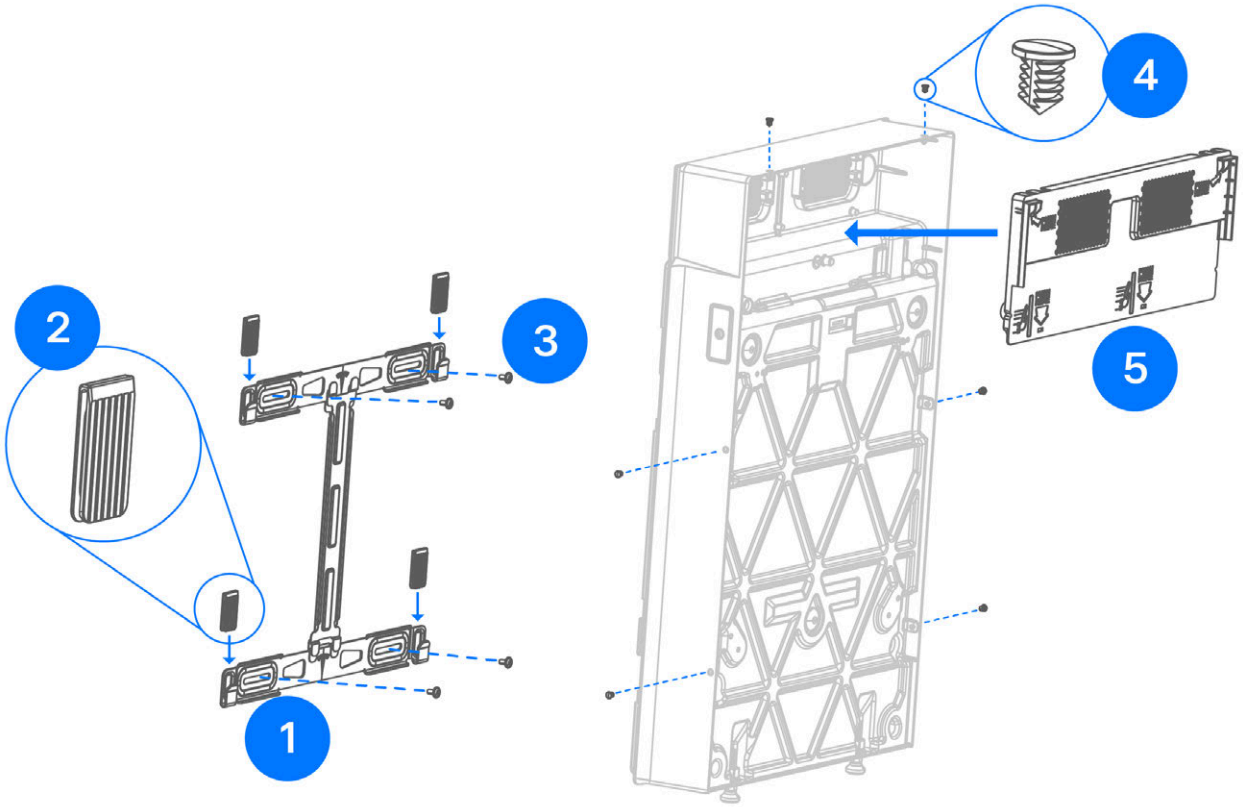

1	1738120-xx-y	Wall bracket
2	1983307-xx-y	(4) mounting bracket shims
3	1978075-xx-y	(4) Torx T40 mounting bracket bolts
4	1978071-xx-y	(6) fir tree plugs, used to fill in the fastener holes on the top and sides of the enclosure
5	1978068-xx-y	Fan front cover

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

Powerwall 3P Wall-Mount Expansion Kit

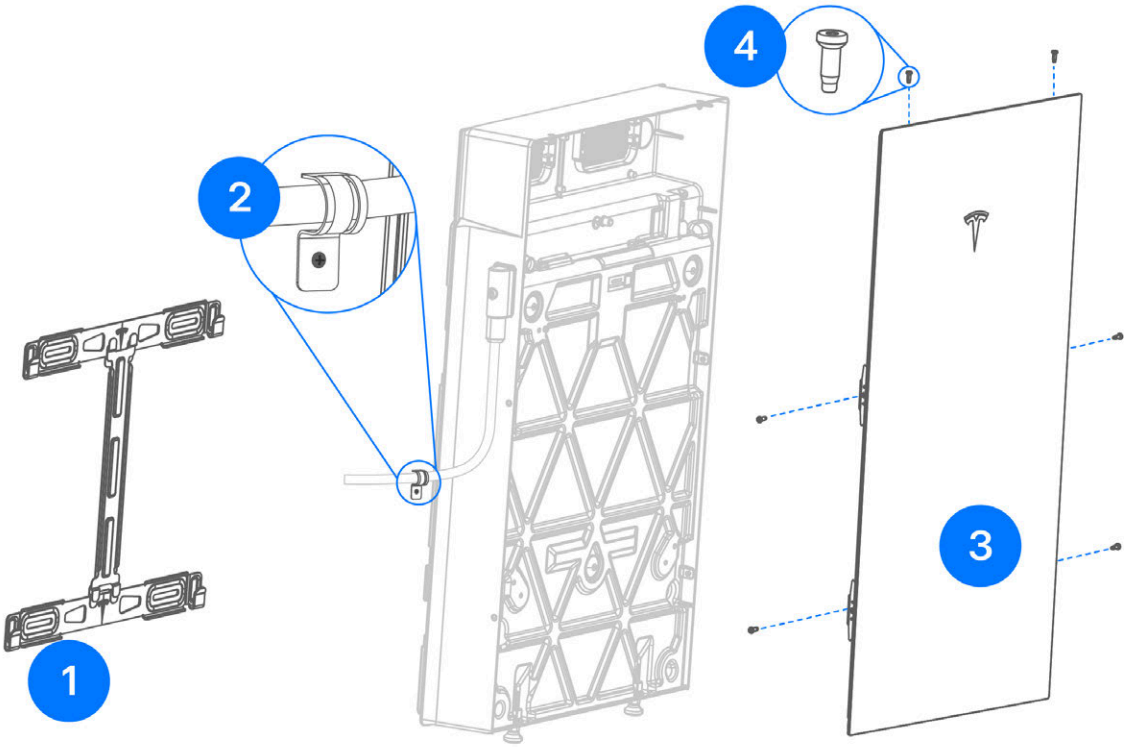

1	1738120-xx-y	Wall bracket
2	1730711-xx-y	(9) Straps for Expansion Harness cable management (Bridgeport US-6171 strap)
3	1763418-xx-y	Glass front cover
4	1857363-xx-y	(6) M6 fasteners for front cover

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS


Install Stacked Expansion Units

WARNING: Stacked Expansion units must be ground mounted. Do not attempt to install stacked units above ground on a bracket, or in any configuration other than ground-mounted.

NOTE: Follow all Powerwall 3P guidance for choosing a location to install Expansion units, clearance requirements, and instructions to remove the units from packaging and transport them with the Powerwall dolly.

1. Determine where the Expansion units and Powerwall 3P will be installed based on the number of units:




   Figure 57. Expanded View of (2) Stacked Expansion Units

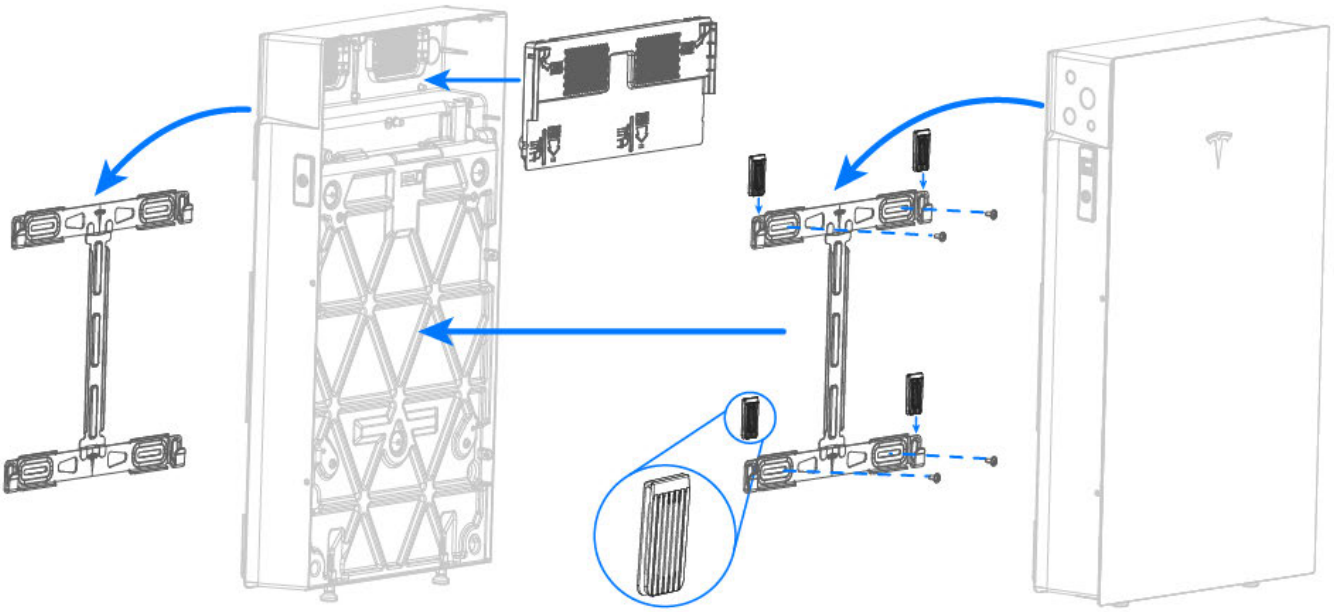



NOTE: When installing the wall bracket shims:

- Do not install shims if the wall bracket is mounted directly to the wall
- Install shims if the wall bracket is fastened to an Expansion unit

a. Depending on how many units will be stacked, confirm the minimum footprint area is available in front of where the bracket will be installed:

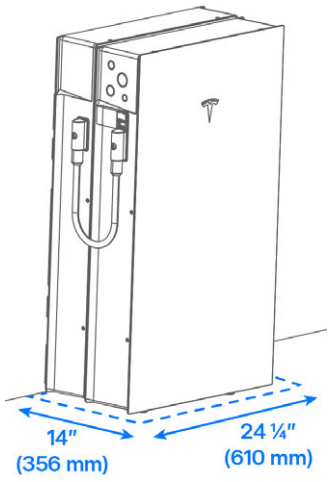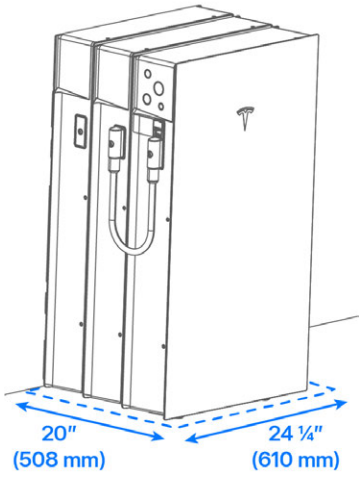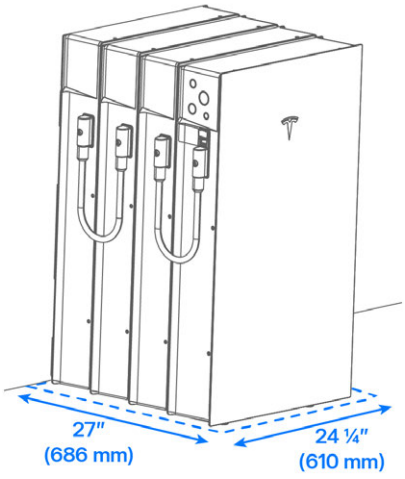(2) Units	(3) Units	(4) Units
		
356 x 610 mm	508 x 610 mm	686 x 610 mm

b. Using a level, confirm the ground slope within the required footprint area (in any direction) is less than or equal to 32 mm. If the ground slope is greater than this value, the ground slope must be corrected or the stacked configuration must be mounted in another location.

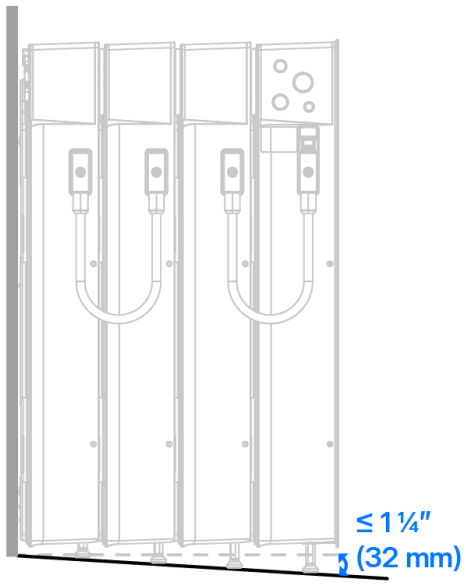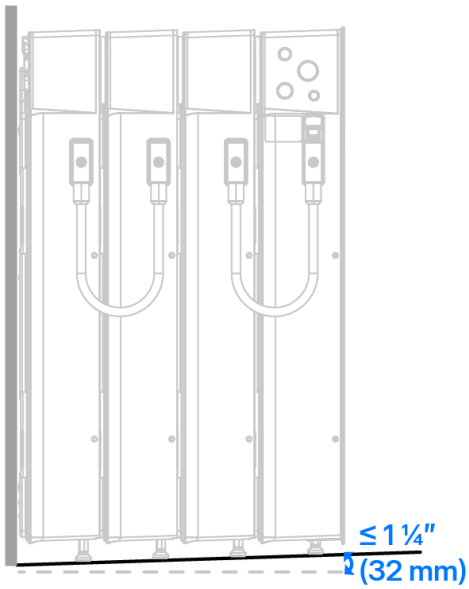Ground Slopes Away From Wall	Ground Slopes Toward Wall
	


2. Determine the height at which the wall bracket will be mounted:

a. Identify the highest point within the required footprint area; this will be the starting reference point for mounting the wall bracket. Determine the difference between this point and the base of the wall.



> **NOTE:** For a flat surface or a surface that slopes *away* from the wall, the base of the wall is the highest point.

NOTE: As noted in the previous step, the difference between this point and the base of the wall must be less than or equal to 32 mm.

b. For a flat surface or a surface that slopes *away* from the wall, the wall bracket is mounted with the upper row of fastener slots 760 mm from the base of the wall (see *Bracket Measurements Relative to Expansion Unit and Floor on page*).

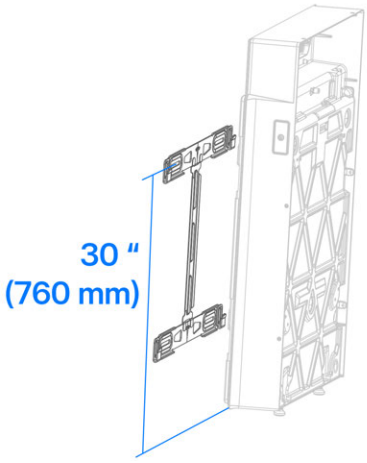


c. For a surface that slopes *toward* the wall, add the difference in slope (determined in step *2.a on page 159*) to the baseline 760 mm. For instance, if the difference between the highest point in the footprint area and the base of the wall is 25 mm, mount the wall bracket with the upper row of fastener slots 785 mm from the base of the wall.

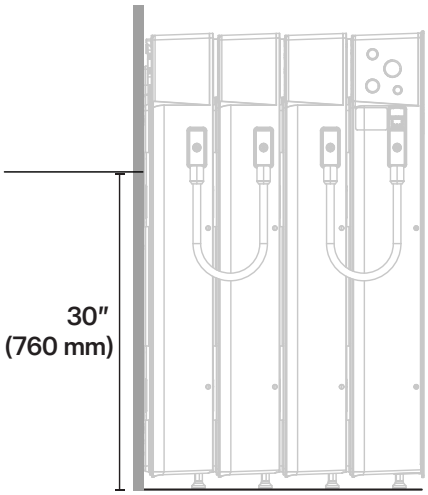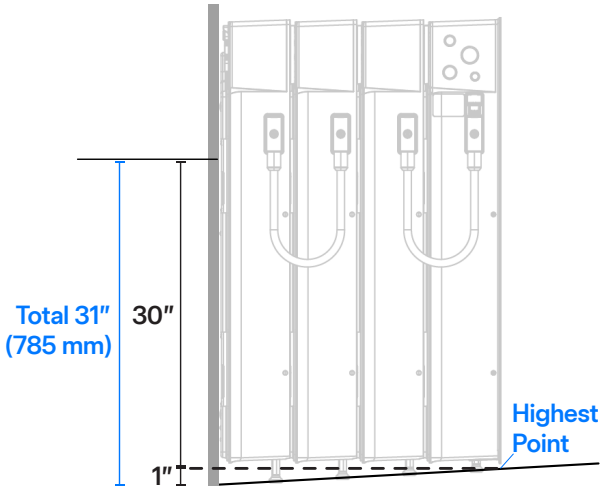Wall Bracket Height for Flat Surface or Ground Sloping Away from Wall	Wall Bracket Height for Ground Sloping Toward Wall
	

WARNING: It is critical that the slope of the installation area is accurately measured and the wall bracket is installed at the correct height to ensure the units can be leveled and the stacked assembly shall retain its structural integrity.

- If the wall bracket is mounted too low, the units will not properly engage with the wall bracket
- If the wall bracket is mounted too high, the units will not be supported by their feet


3. Safely shut the system down:
   a. Turn the Powerwall 3P switch OFF to shut the system down, then turn the integrated DC isolator OFF. See *Powerwall 3P Switch Locking Mechanisms on page 138* for instructions to lock the integrated DC isolator in the OFF position.

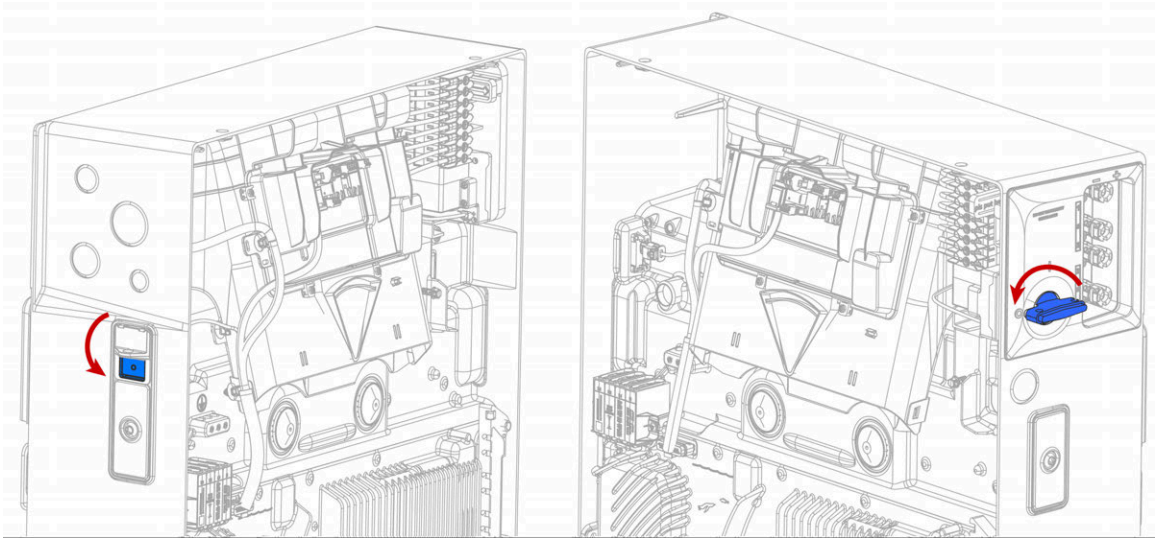

   b. Open the Powerwall 3P AC circuit breaker.
   c. Wait 30 seconds before proceeding with any work.

WARNING: Risk of electric shock from stored energy. Wait 30 seconds after disconnecting all sources of supply before proceeding.


4. To lift and transport the Expansion unit, follow all instructions in *STEP 2: Remove Powerwall 3P from Packaging and Transport Using the Powerwall Dolly on page 49* to use the Powerwall dolly, noting where the two lift handles are connected on the Expansion (**X**):

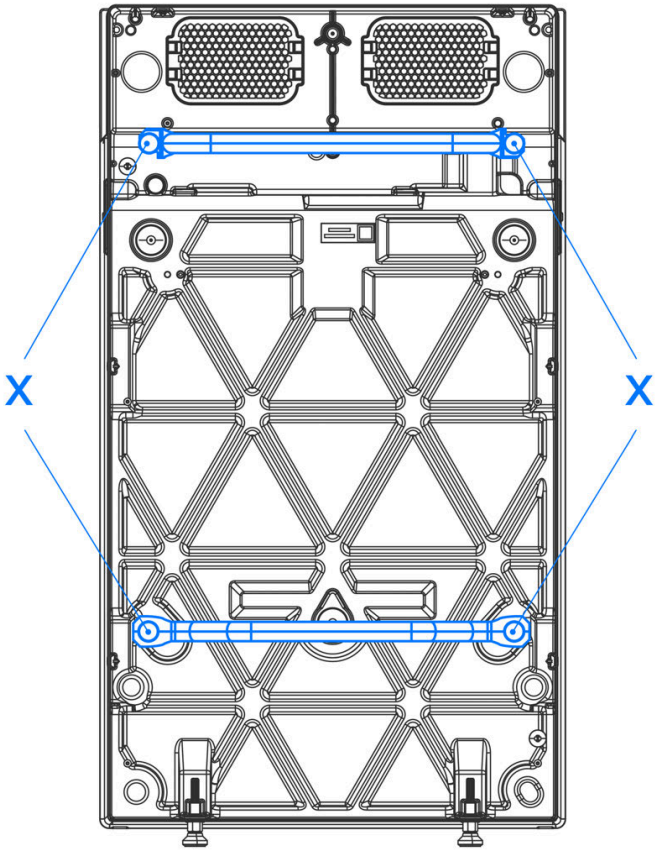

5. Using a drill and level, mount the Expansion unit bracket to the selected wall. See *Anchoring Details for Ground- or Wall-mounting Powerwall 3P with Wall Bracket on Existing Approved Foundation on page 117* for additional details on the type and number of fasteners to use.


WARNING: Ensure the Powerwall 3P wall bracket is level and plumb, especially when mounting units in a stacked configuration. Failure to do so may compromise the structural integrity of the stacked assembly.

Figure 58. Bracket Measurements Relative to Expansion Unit and Floor

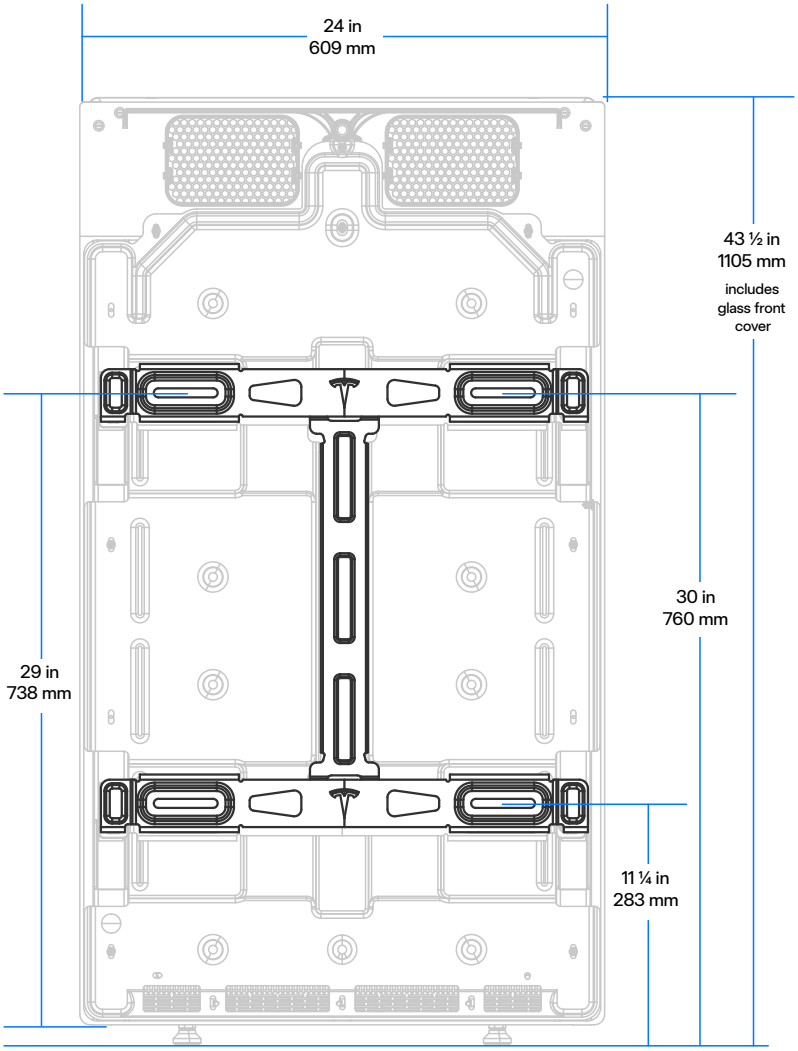


NOTE: These bracket measurements are the same for both Expansion and Powerwall 3P units.

WARNING: Only install fasteners in the (4) slots on the horizontal bracket segments. Do not install fasteners anywhere except these four corners.

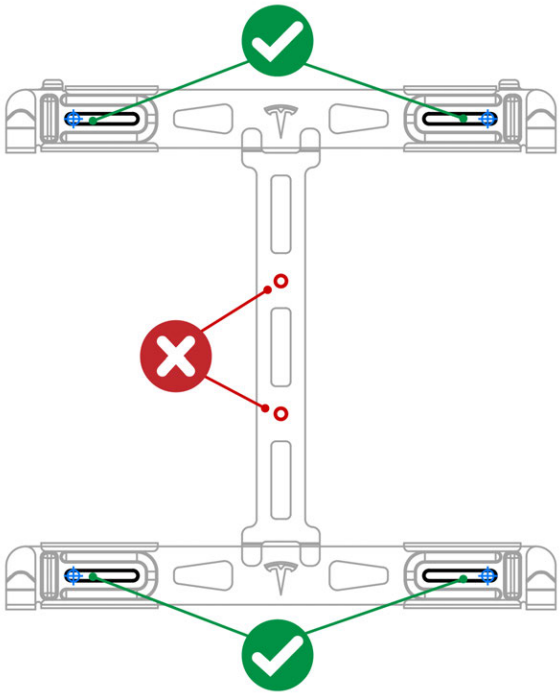

NOTE: The mounting bracket shims included in the Expansion stacking kit are not used for the unit mounted directly to the wall. The shims are only required to secure the bracket when it is being mounted to the front of an Expansion unit.


6. Confirm the leveling feet are screwed all the way in to the Expansion unit. This is required to ensure the unit can be adjusted once the remaining units in the stack have been installed.
7. Move the dolly toward the wall, positioning the Expansion unit so that the mounting cleats are just above the flanges on the bracket.

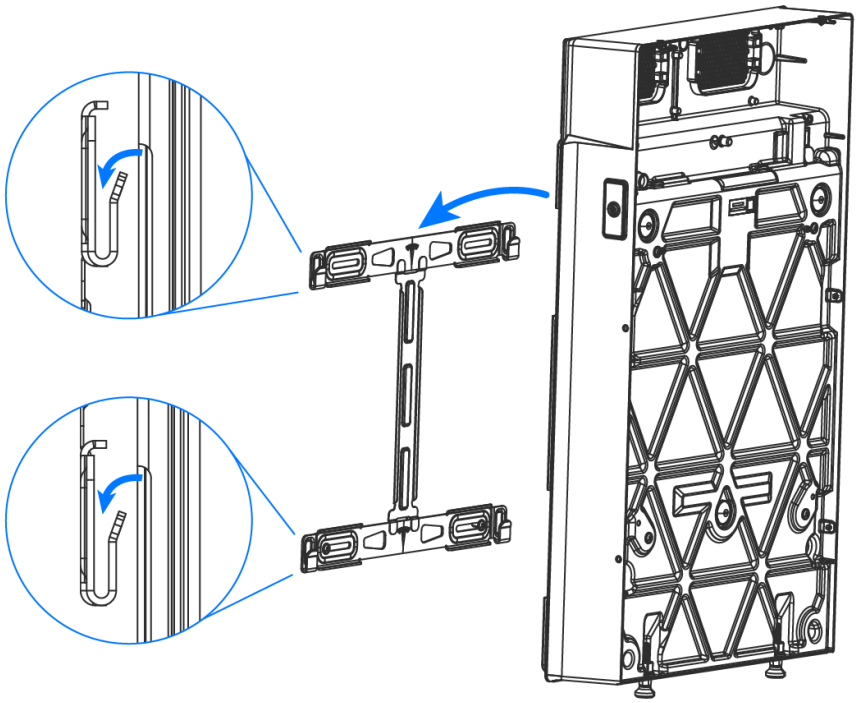

8. Lower the Expansion unit until:
    - The upper set of cleats is fully seated on the bracket flanges


- The lower set of cleats is engaging the bracket flanges

NOTE: Only the upper set of cleats will be fully seated; the lower cleats will still engage the bracket, but there will be a small gap between the lower cleats and the bottom edge of the bracket.

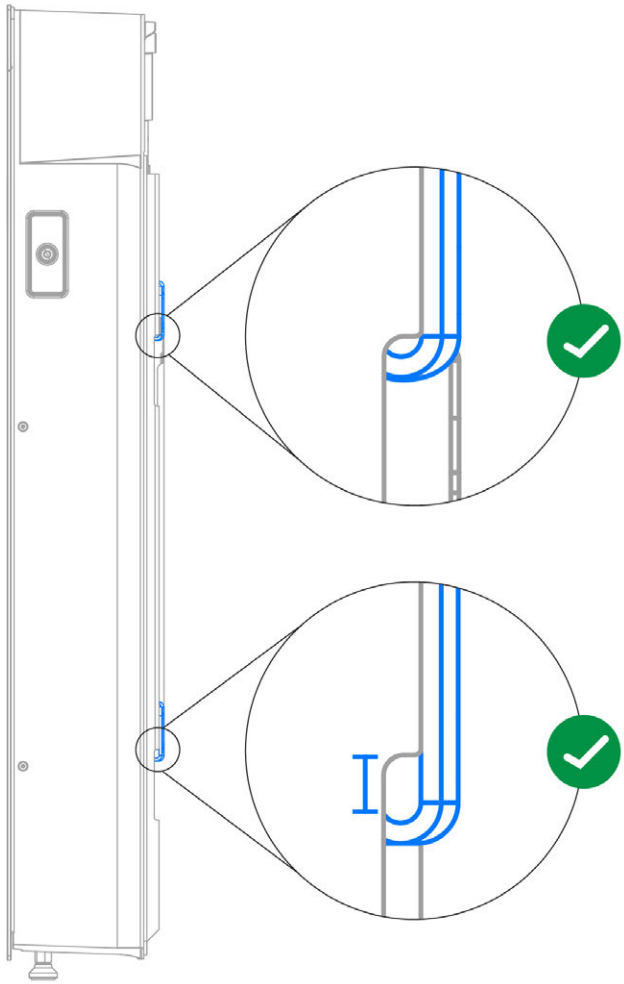


NOTE: The mounting bracket shims included in the Expansion stacking kit are not used for the unit mounted directly to the wall. The shims are only required to secure the bracket when it is being mounted to the front of an Expansion unit.

9. To install the fan front cover in the open space at the top of the enclosure, first align the bottom of the cover with the enclosure and push it into place. With the bottom of the cover secured, push in the top of the cover, ensuring it snaps into place.

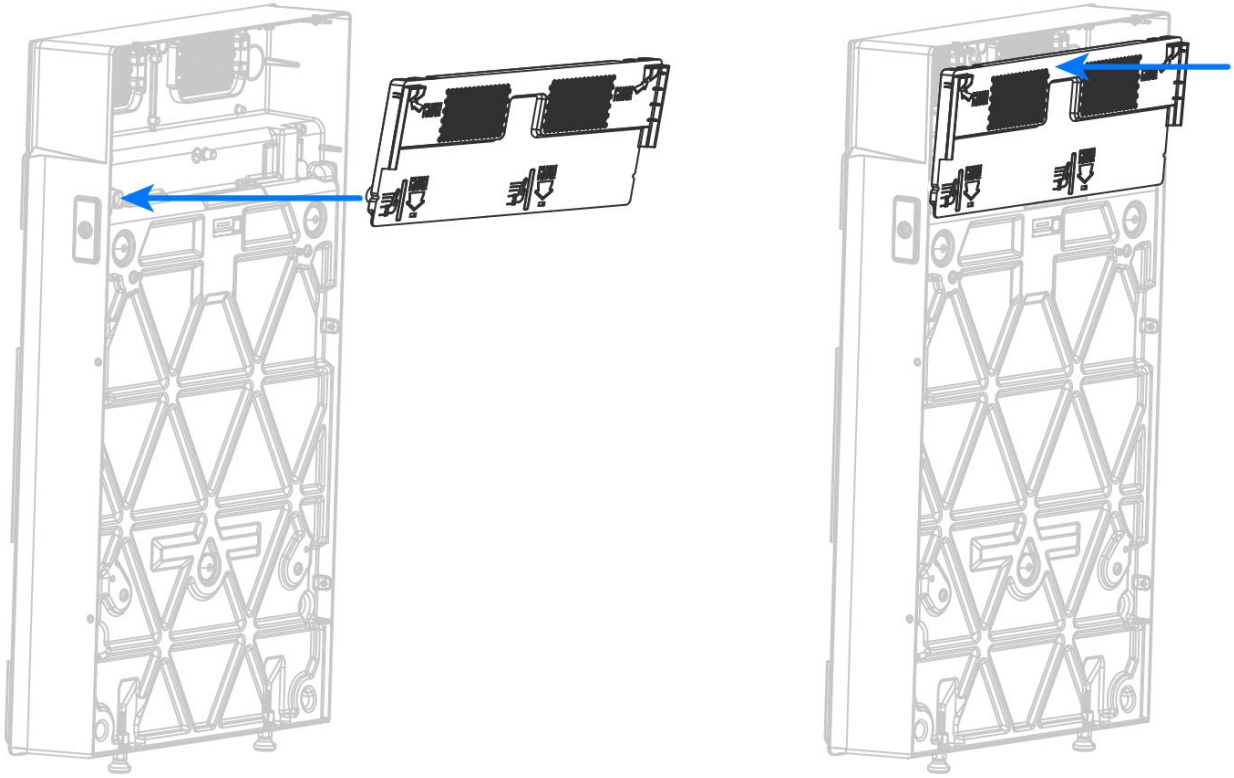

10. Install the (6X) fir tree plugs in the fastener holes on the top and sides of the enclosure.

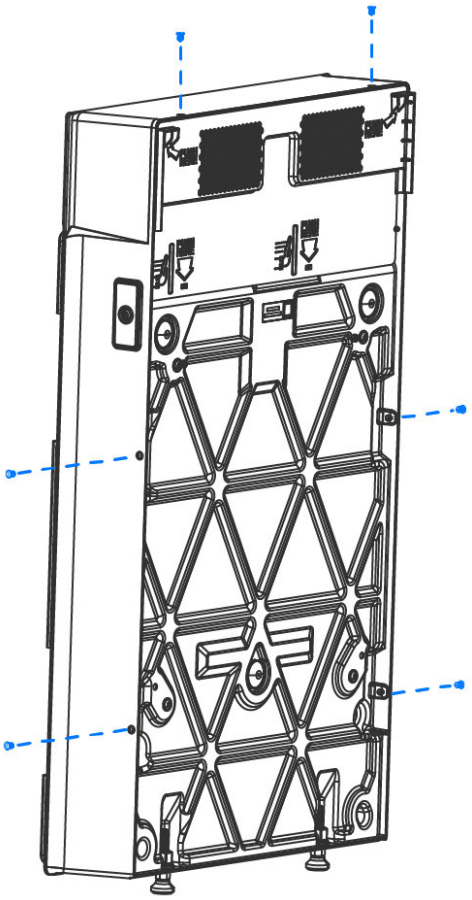


11. Use a 17 mm wrench to adjust the leveling feet until the unit is level. The unit should be within +/- 2 degrees in any direction.


> **NOTE:** The top of each foot must be visible above the threaded boss; do not unscrew the foot so far that the top is no longer visible.

12. Mount another Expansion unit to the front of the installed Expansion unit enclosure:


> **WARNING:** Ensure the Expansion unit safety valve is not removed or damaged in any way when preparing to install another unit on the front of Expansion.

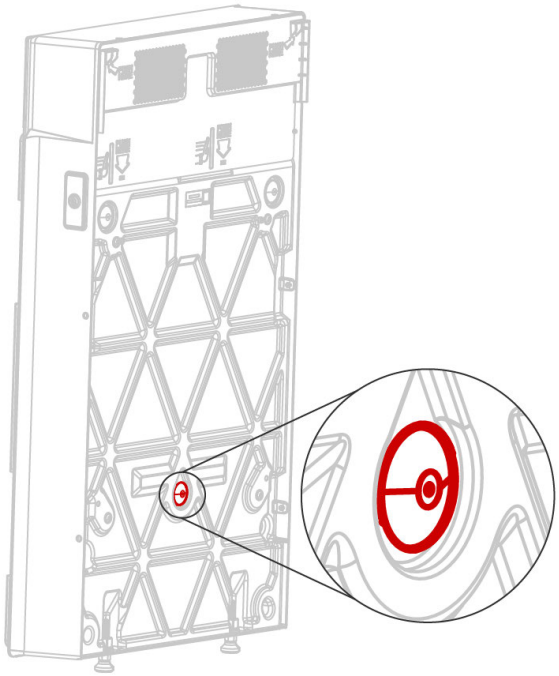


a. Install the (4X) bracket shims on the bracket as shown below.

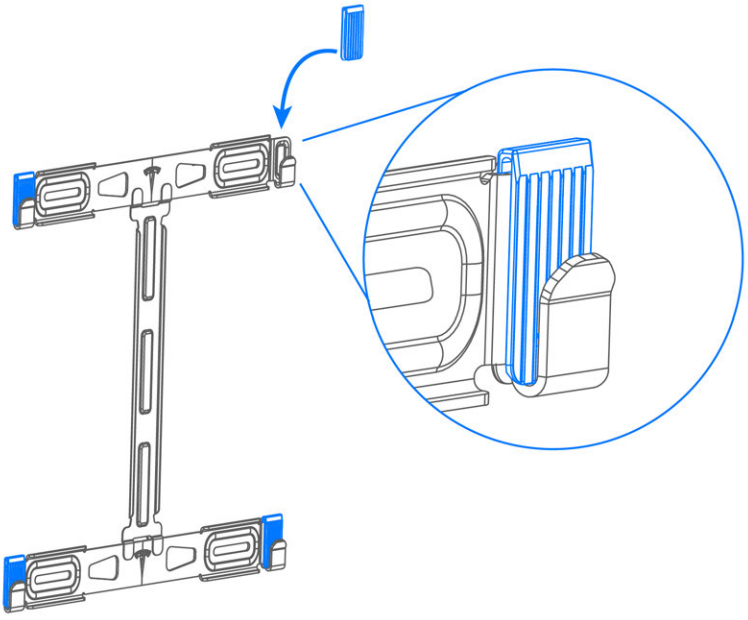

b. Using the (4X) provided Torx T40 fasteners, mount the next Expansion unit bracket to the front of the installed Expansion unit enclosure. Torque the fasteners to 26 Nm.

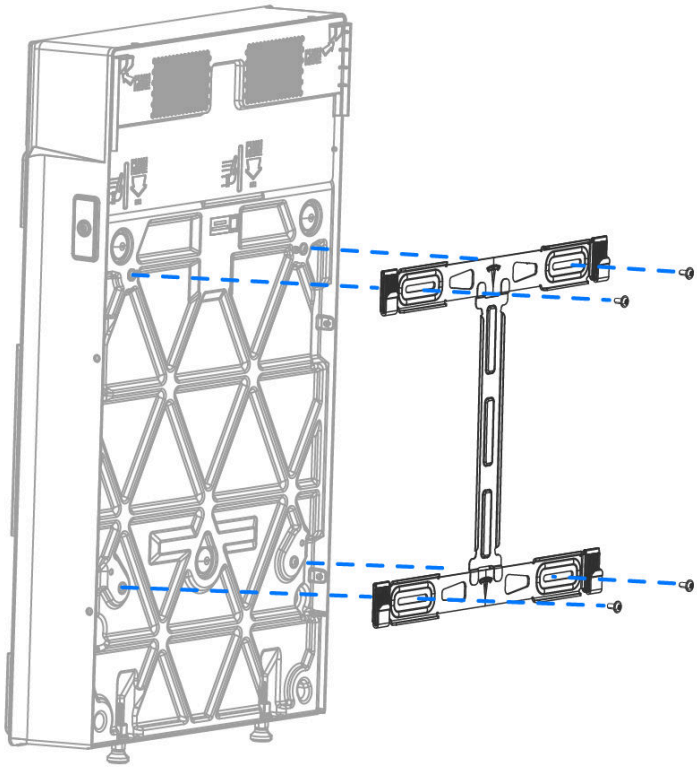


NOTE: Ensure each shim is aligned with the edge of the bracket and is fully seated.

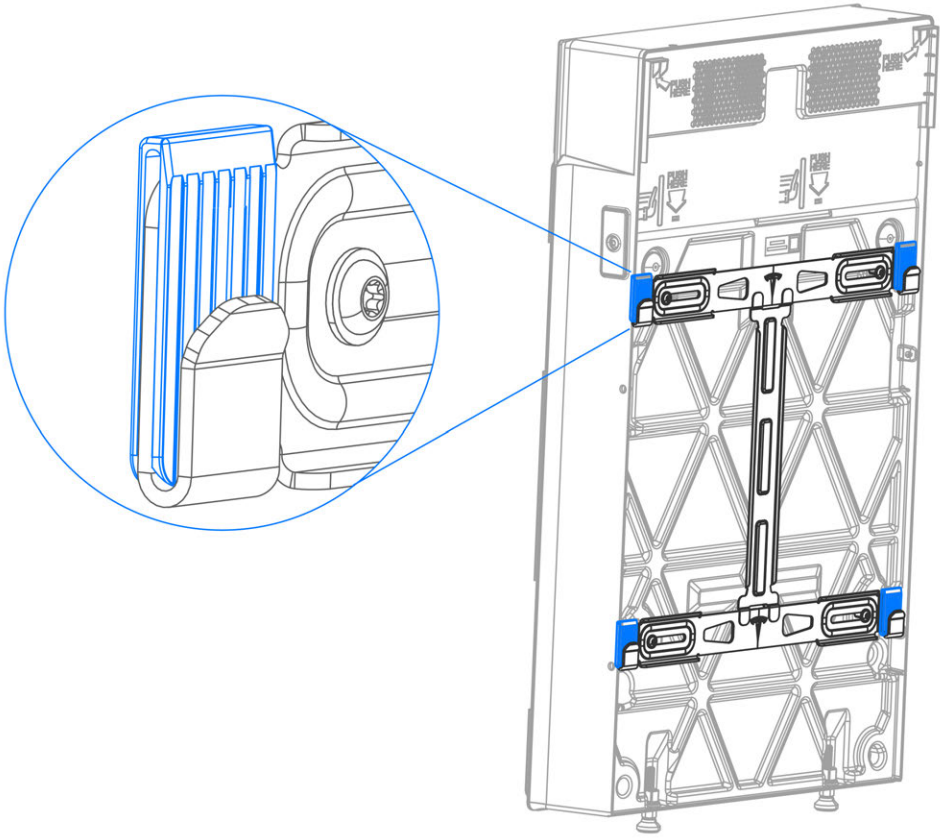

c. With the next Expansion unit on the dolly, move the dolly toward the wall, positioning the unit so that the mounting cleats are just above the flanges on the bracket.


d. Lower the Expansion unit until the upper set of cleats is fully seated on the bracket flanges, and the lower set of cleats is engaging the bracket flanges.

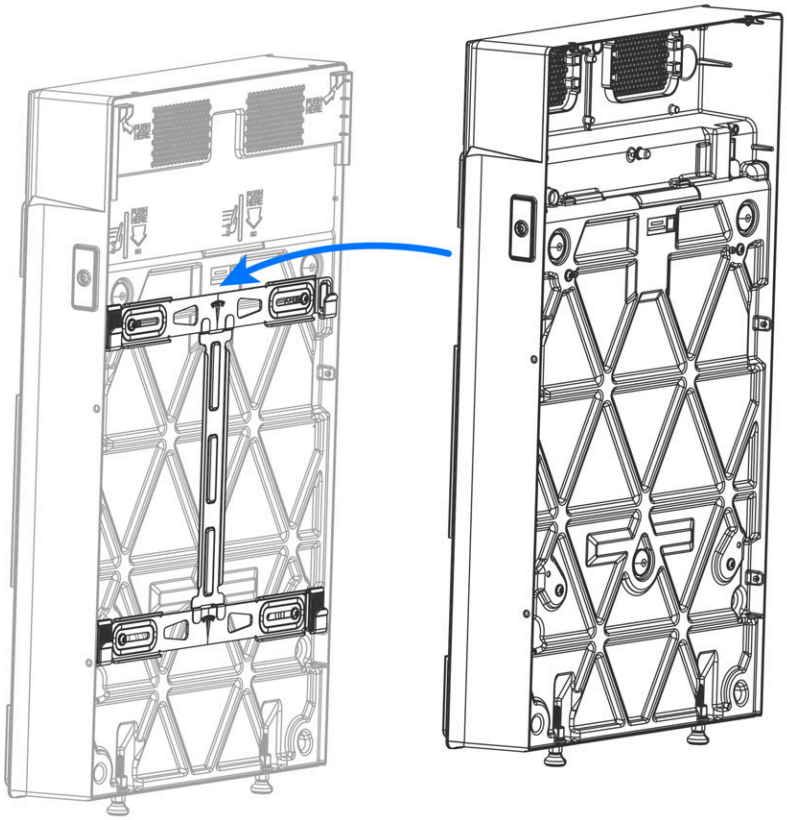

e. Install the fan front cover and the (6) fir tree plugs in the fastener holes as described in steps *9 on page 166* and *10 on page 167*.

f. Use a 17 mm wrench to adjust the leveling feet until the unit is level. The unit should be within +/- 2 degrees in any direction. When confirming the units are level with each other, place the level on either side of the unit and balance the level on the front edge of each unit.

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

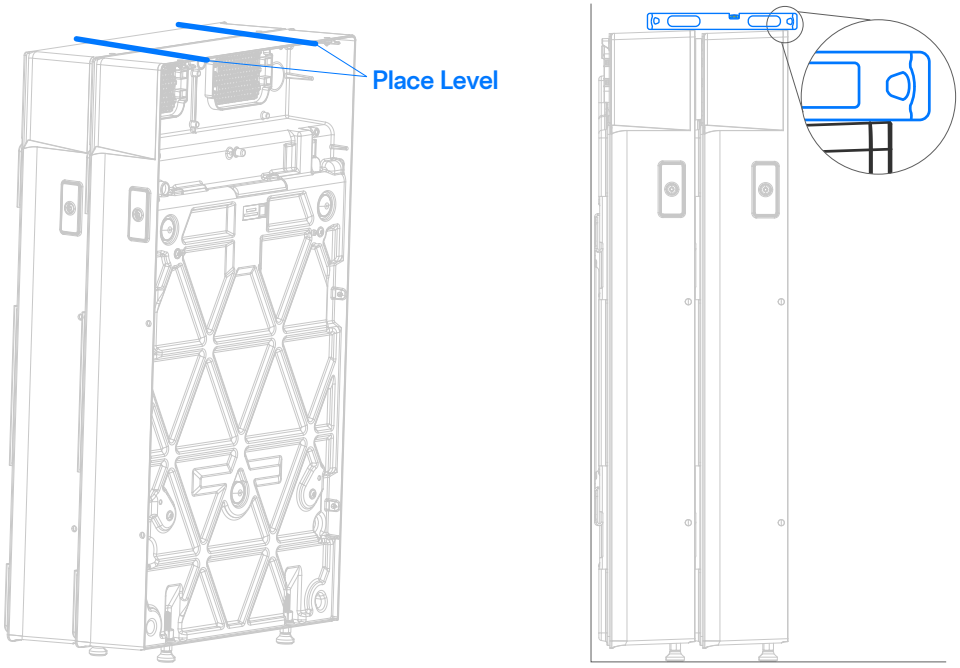


NOTE: The top of each foot must be visible above the threaded boss; do not unscrew the foot so far that the top is no longer visible.

13. Repeat step *12 on page 167* for a third Expansion if present.
14. Once all Expansion units have been installed, repeat step *12 on page 167* to mount the Powerwall 3P to the front of the stack.
15. Begin with *STEP 7: Make Solar PV Connections on page 82* to complete all Powerwall 3P wiring, finishing by installing the front cover.

NOTE: Powerwall 3P must always be installed at the front of an Expansion unit stack. If the Powerwall 3P was previously installed, it must be uninstalled so that it can be moved to the front of the new stack.

NOTE: Alternatively, another Expansion with the Wall-Mount kit (Tesla P/N 1978069-xx-y) can be mounted to the front of the stack.

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

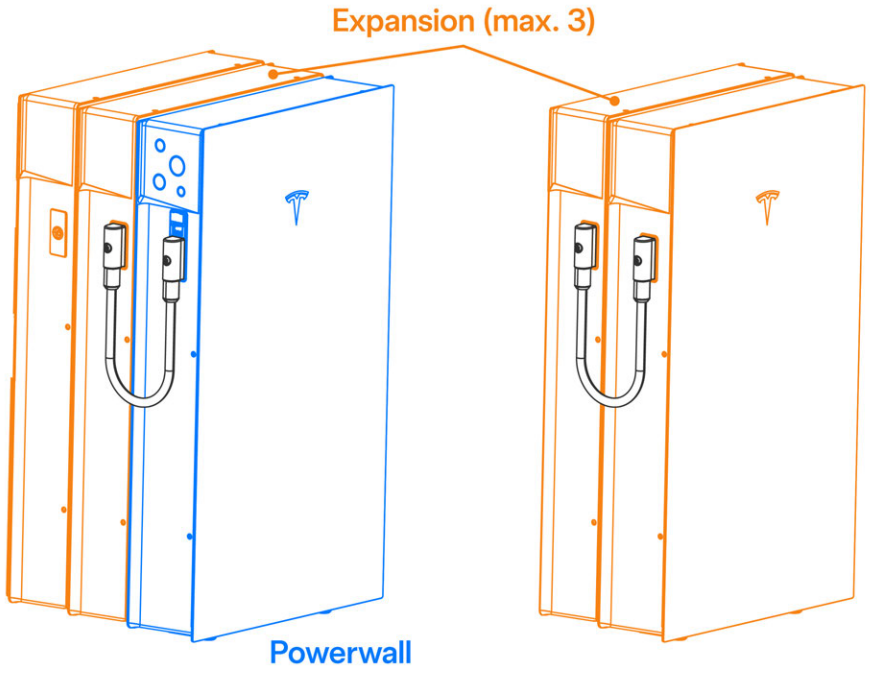

16. Connect the Expansion unit to the Powerwall 3P (or to another Expansion unit):
    a. Using a Torx T40 bit, loosen the fastener holding the Expansion port cover.

WARNING: STOP. Before opening Expansion port covers:


- During installation, do not open the Expansion Port cover if Expansion / Powerwall 3P is **directly exposed** to any of the following conditions:
  - Rain
  - Snow
  - High winds (>48 kph)



- Do not leave the Expansion Port open for extended periods or in high debris/dust conditions

Doing so may allow water and/or debris to contact the sensitive internal components of Powerwall 3 / Expansion. This may lead to product damage and could potentially void the product warranty.

b. Insert a small slotted screwdriver in the small slots at the top and bottom of the port cover to pry it loose. Remove the cover.

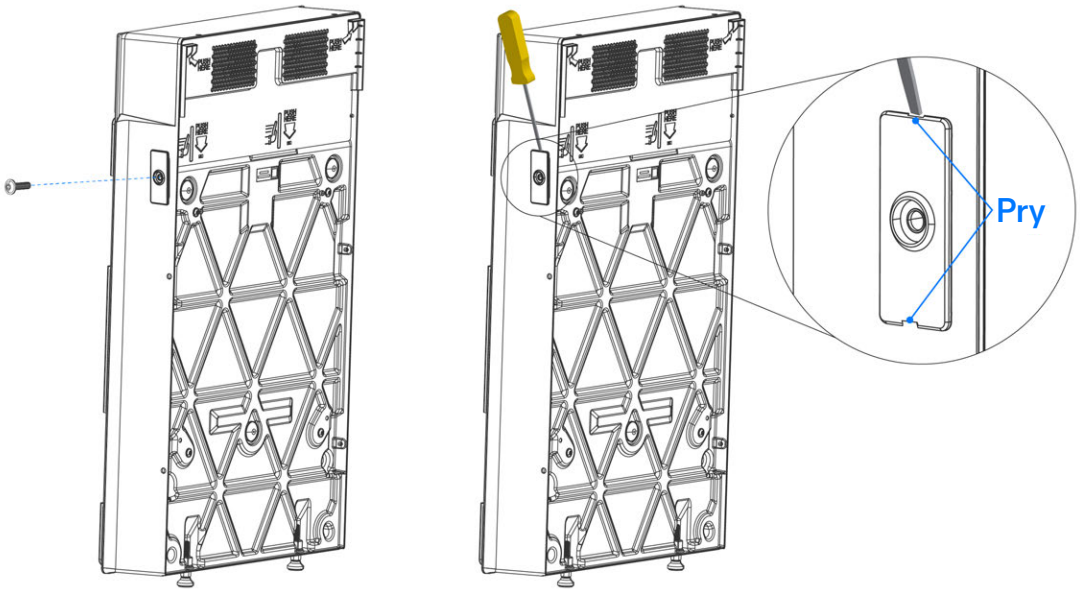

NOTE: Keep the Expansion port cover in case the Expansion port needs to be covered again for any reason. Store the cover in the protective packaging from the harness to keep it clean.

NOTE: If replacing the Expansion port cover, torque the port cover screw to 11 Nm.


c. Visually inspect the Expansion port and confirm there is no debris in the port.

d. Remove the protective packaging from the end of the Expansion Harness being plugged in.

NOTE: The Expansion harness with Tesla P/N 1875157-**05**-y must be used when connecting Expansion units in a stacked configuration.


e. Visually inspect the Expansion Harness connector and confirm there is no dirt or debris on the connector. If there is dirt / debris on the connector:
   - Clean the dirt / debris from the connector
   - If it is not possible to adequately clean the connector, use a new Expansion Harness

f. Plug one end of the Expansion Harness into the Expansion unit. Torque the T40 harness screw on the connector to 11 Nm.

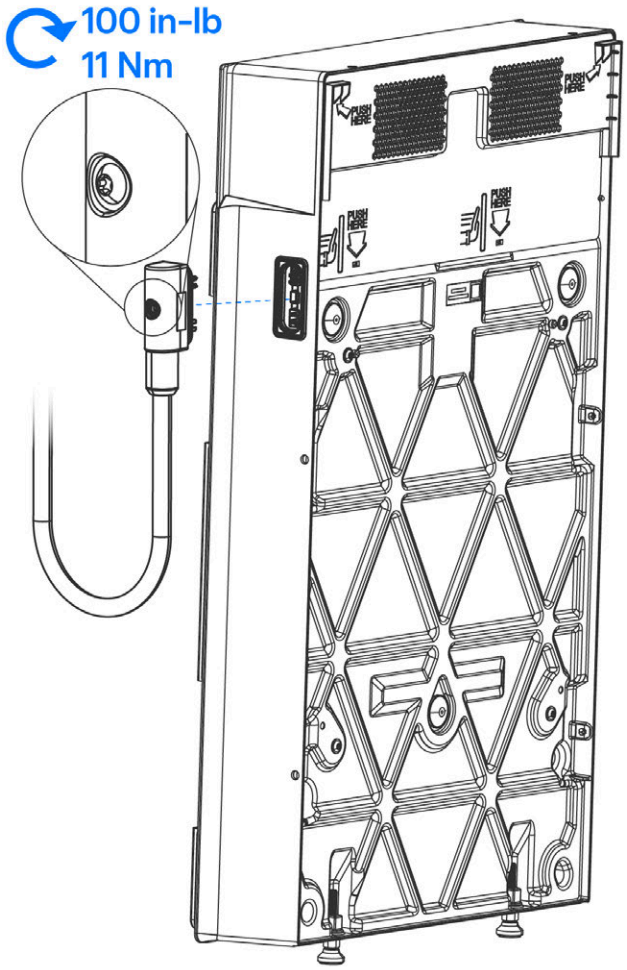


g. Route the Expansion Harness to the Powerwall 3P (or other Expansion unit).

h. Remove the Expansion port cover from the Powerwall 3P (or other Expansion unit) and plug the Expansion Harness in. Torque the T40 harness screw on the connector to 11 Nm.

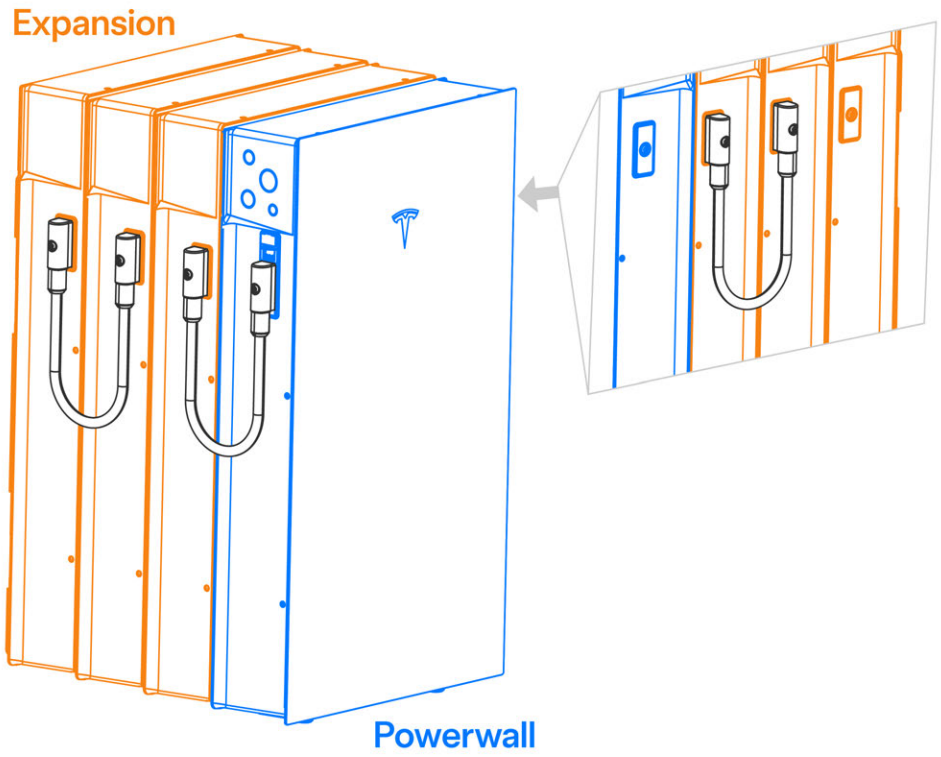


i. Ensure each end of the Expansion Harness is fully seated in its port; it will be possible to confirm the harness is fully seated when there is no gasket exposed.

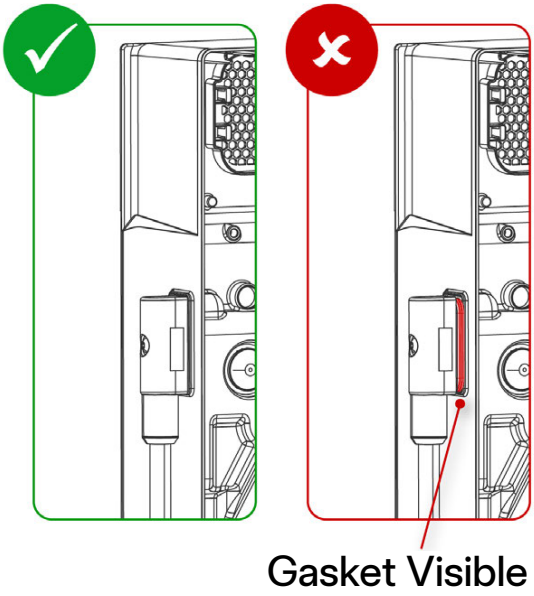

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

Optional: Rear Wire Entry for Stacked Configuration

For stacked configurations, the Powerwall 3P wiring can be concealed by routing it through the back of each unit as follows. This method creates a clean installation that avoids routing the wiring along the sides of the Expansion unit(s) and Powerwall 3P.

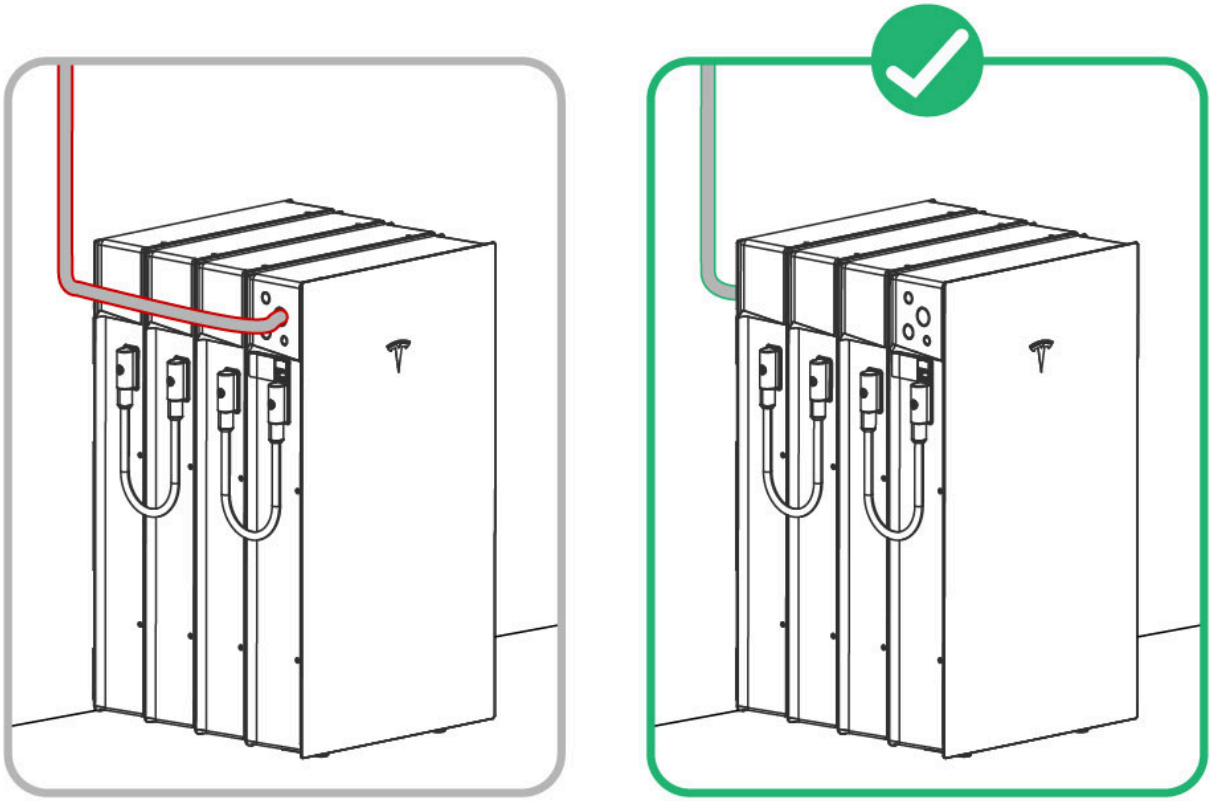

Required Tools


- 35 mm hole saw
- 51 mm hole saw

Required Supplies


- Rubber cable grommet
- M32 cable gland

1. Before mounting the Expansion unit(s), mark the center of the drilling location on the back of the unit, 82 mm from the top of the unit and 55 mm from the side of the unit.


APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

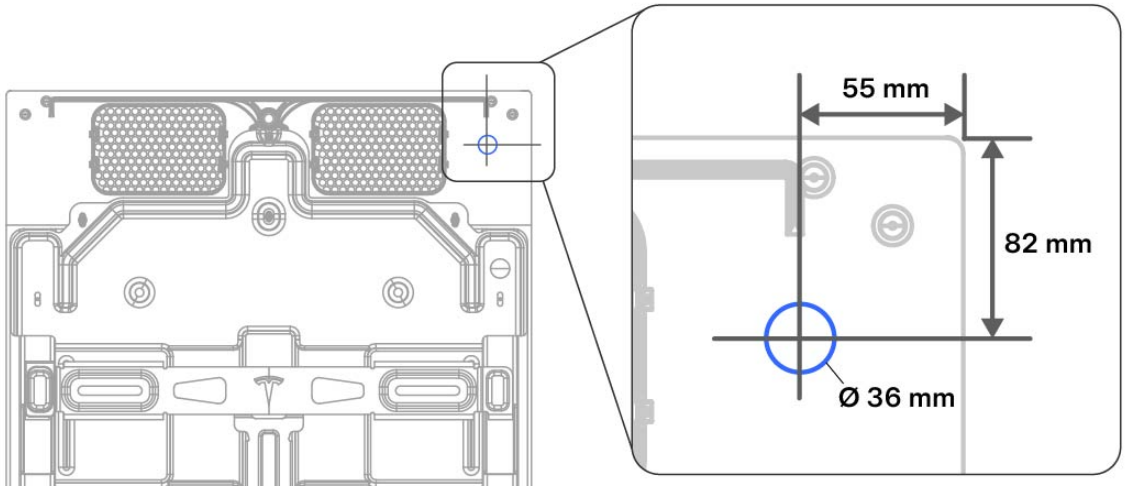


2. Using a hole saw, drill a 36 mm hole in the back of the unit.

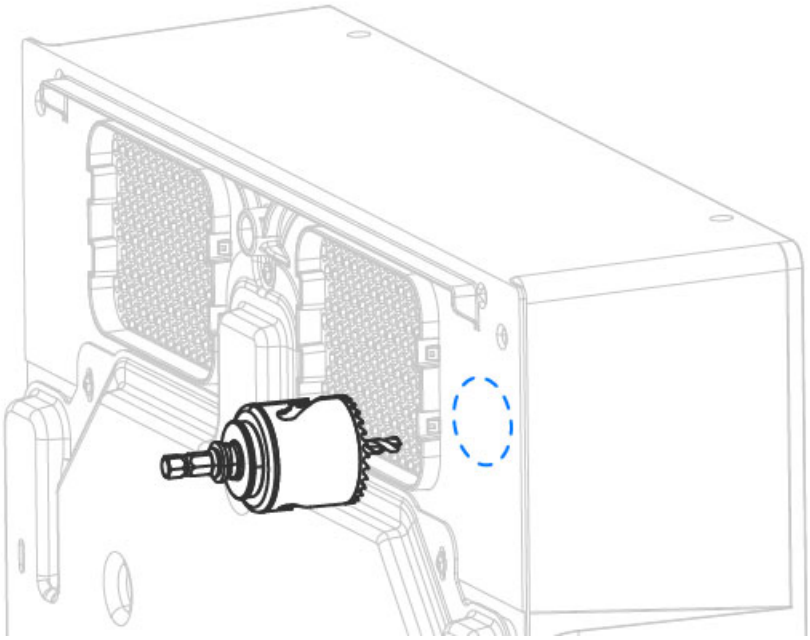


3. Install a rubber grommet in the hole.
4. Pass the wiring through the cable entry hole, leaving at least 400 mm of cable for termination at the Powerwall 3P, plus an additional 60 mm per Expansion unit in the stack. For example, pull 460 mm of cable for a stack of two Expansion units and a Powerwall 3P.

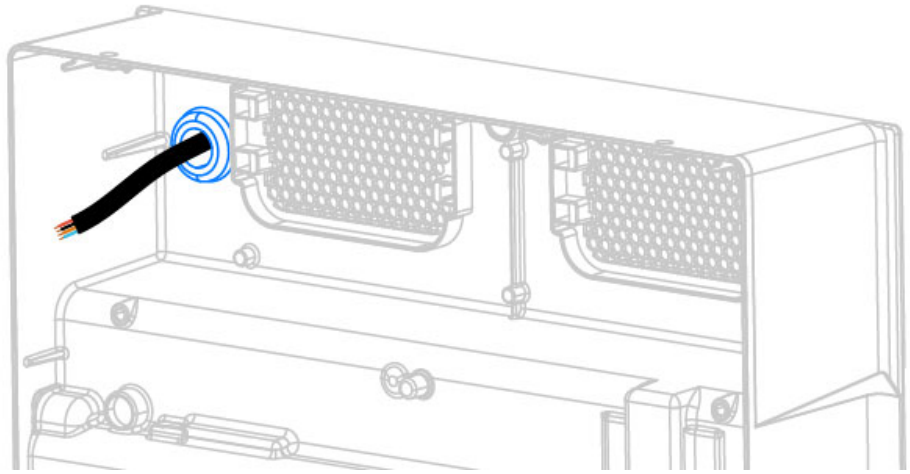

5. Drill out the 2 inch circle on the back right side of the fan front cover.
   Figure 59. Rear View of Fan Front Cover

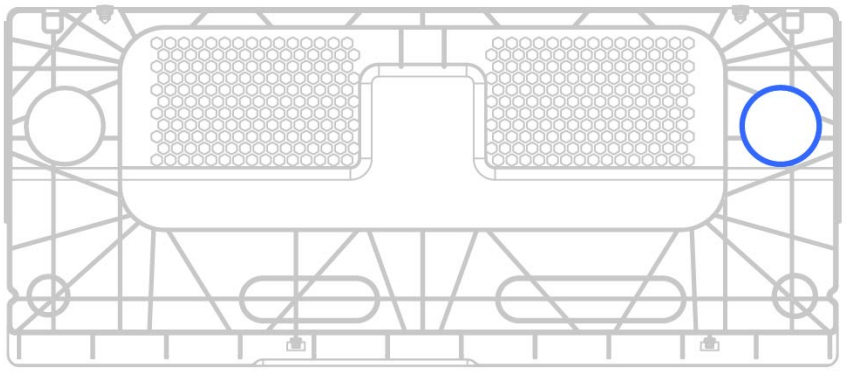

6. Deburr any sharp edges, then install the fan front cover on the Expansion enclosure.

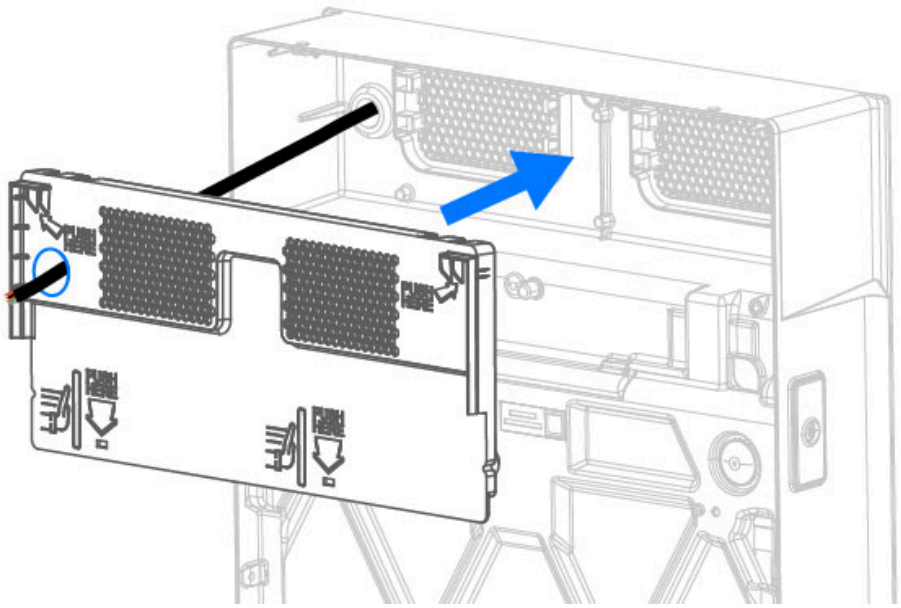


7. Install the remaining Expansion unit(s) in the stack per *Install Stacked Expansion Units on page 158*, drilling out the conduit entry hole in the back of each unit and fan front cover as described above. Install a rubber grommet in each Expansion unit conduit entry hole for wire abrasion protection.


APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

NOTE: It is critical that the units are leveled so that they are aligned and the wiring can be run through the stack.

8. Install a cable gland at the Powerwall 3 interface for strain relief, ensuring the sealing surface is 13 mm from the fan front cover. Push the gland into the enclosure.

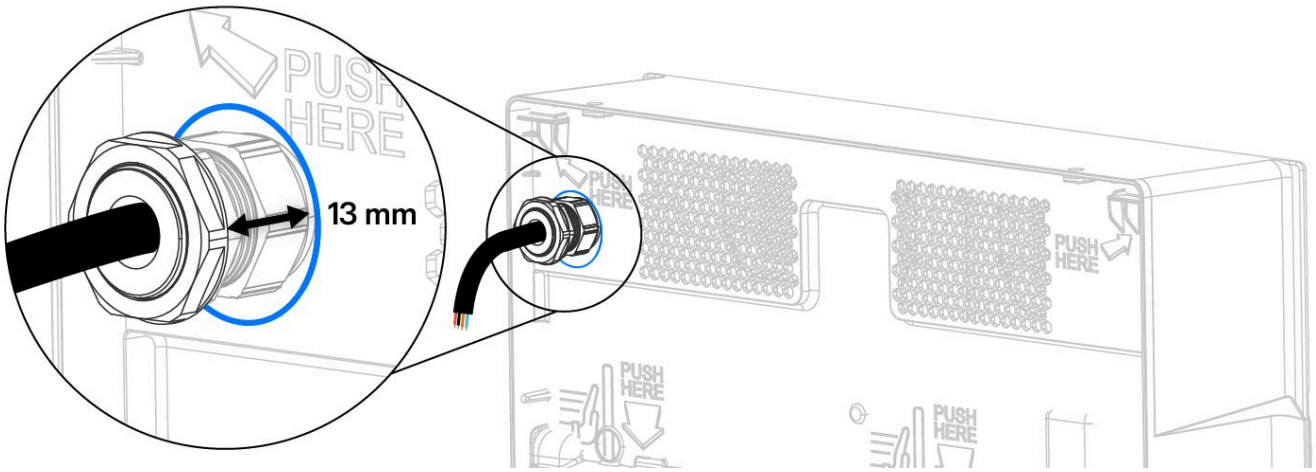

9. Punch out the rear conduit entry for the Powerwall 3P, then install the unit at the front of the stack per *Install Stacked Expansion Units on page 158*.
10. Route the wiring into the Powerwall 3P enclosure.

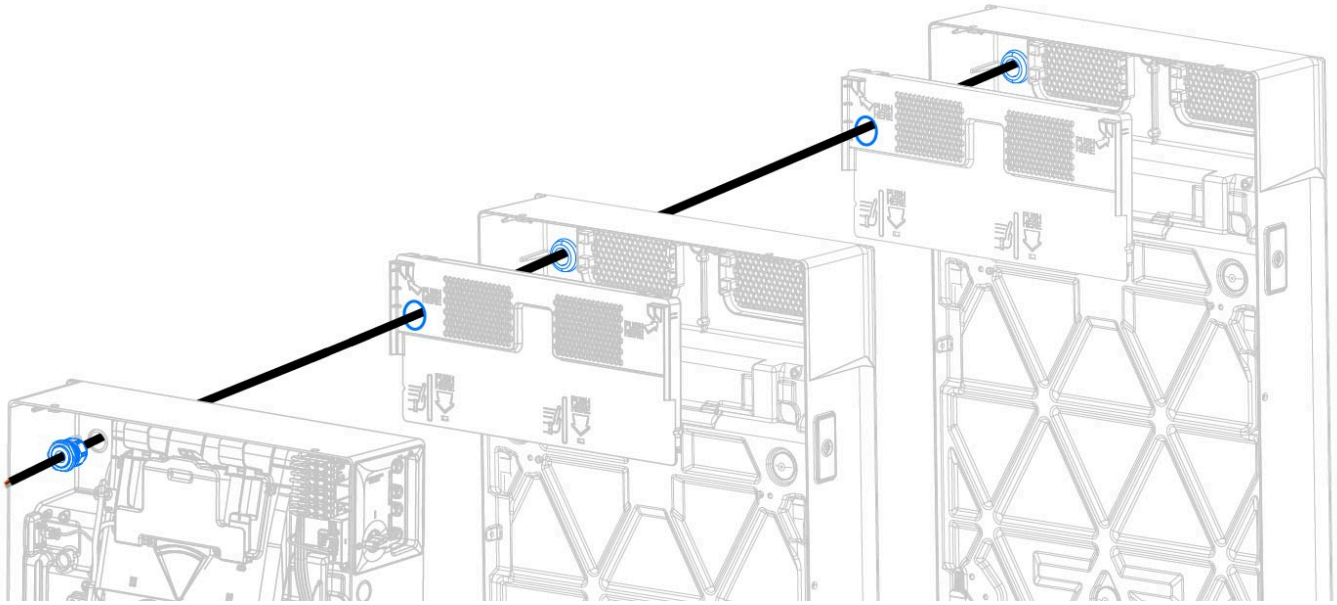

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS


Install Wall-Mounted Expansion Units


NOTE: Follow all Powerwall 3P guidance for choosing a location to install Expansion units, clearance requirements, and instructions to remove the units from packaging and transport them with the Powerwall dolly.

1. Determine whether Expansion units will be connected on only one side of Powerwall 3P, or on both sides:
   - When Expansion units will be connected **on only one side** of Powerwall 3P, the maximum combined harness length is 4 m. The following table provides all allowable harness combinations for this configuration:

Harness 1		Harness 2		Harness 3	
4 m	1875157-**40**-y	-		-	
2 m	1875157-**20**-y	2 m	1875157-**20**-y	-	
2 m	1875157-**20**-y	0.5 m	1875157-**05**-y	0.5 m	1875157-**05**-y
0.5 m	1875157-**05**-y	0.5 m	1875157-**05**-y	0.5 m	1875157-**05**-y


CAUTION: Using any other harness combination will result in excessive wire length, impacting product performance.

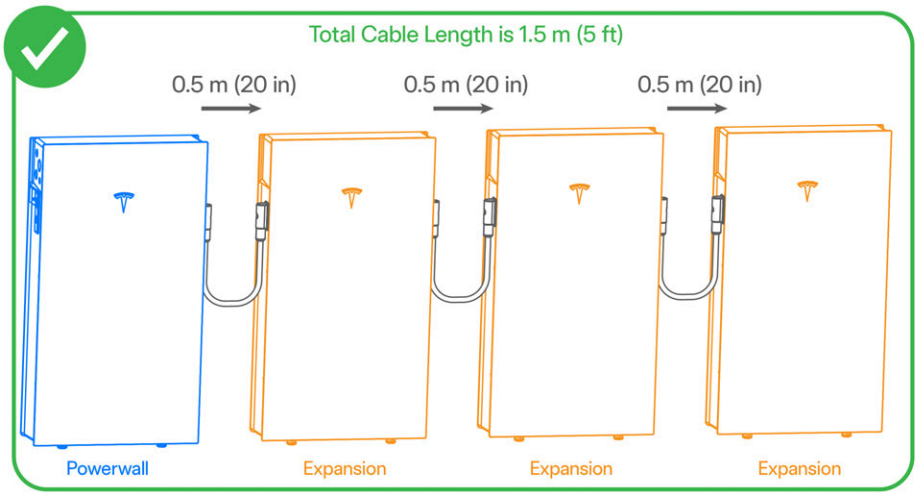


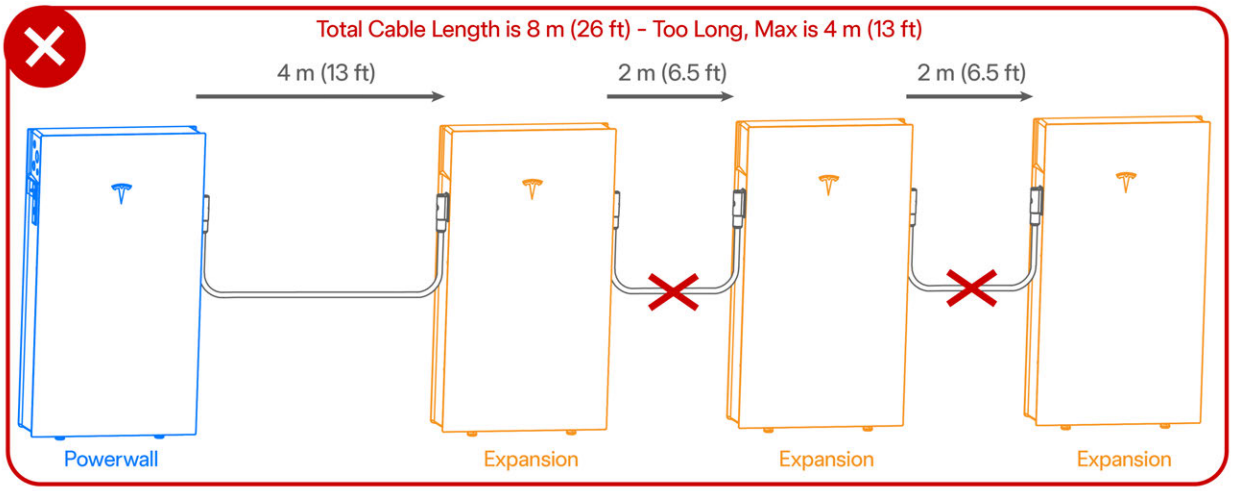

- When Expansion units are connected **on both sides** of Powerwall 3P, there is **no limit** on the maximum combined harness length. However, there is *effectively* a maximum combined harness length of 8 m* on each side of Powerwall 3P because:
  - Only (2) Expansion units can be connected on one side of Powerwall 3P (with (1) Expansion connected on the other side for a maximum total of (3) Expansion units)
  - The longest available harness is 4 m long. While any combination of harnesses can be used on either side of Powerwall 3P in this configuration, using the longest available harness results in a maximum combined length of 8 m

*Only (3) Expansion units can be connected to the Leader Powerwall 3P. With Expansion units connected to both sides of Powerwall 3P, there will always be one side with only (1) Expansion unit connected; by default, the maximum harness length on this side is 4 m, which is the longest available harness length.

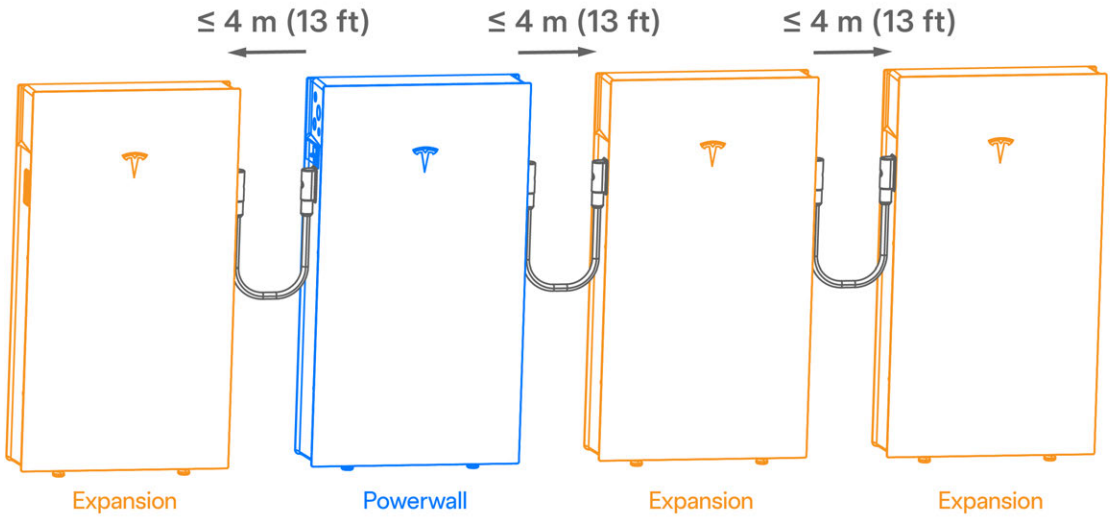


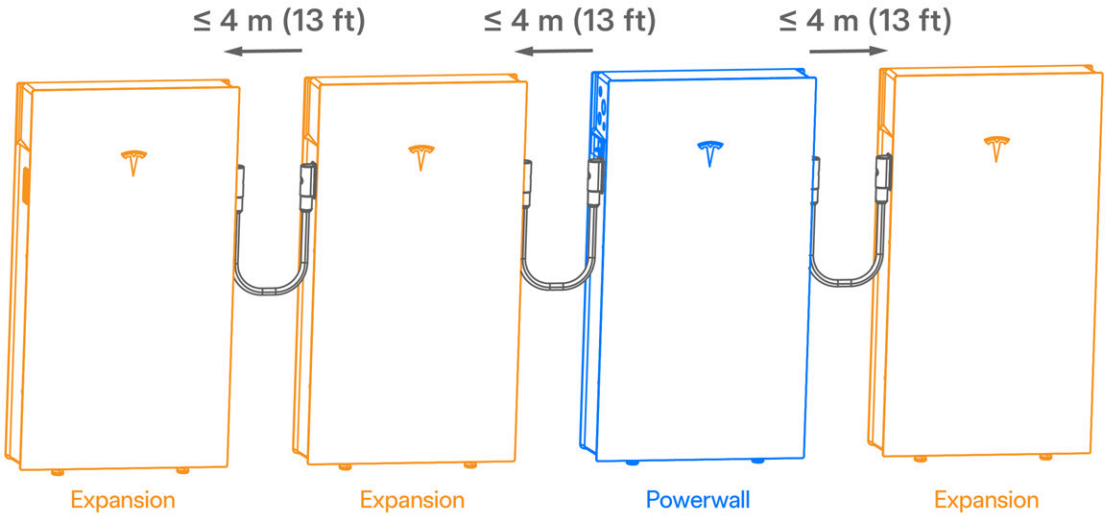

NOTE: The Expansion harnesses plugged in to the left and right ports on Powerwall 3P can be different harness models (e.g. the 4 m harness on one side and the 2 m harness on the other).

2. Determine which Expansion Harness length will be used based on the planned distance between the units:
   a. Measure the distance between the units where they will be installed (**A** in the figure below).
   b. Calculate the **Maximum Distance Between Units**: Distance between units (measured in step *2.a on page 182*) + 254 mm.

> **NOTE:** This accounts for the required minimum 127 mm from the connector to the back of the bend on each end of the Expansion Harness.

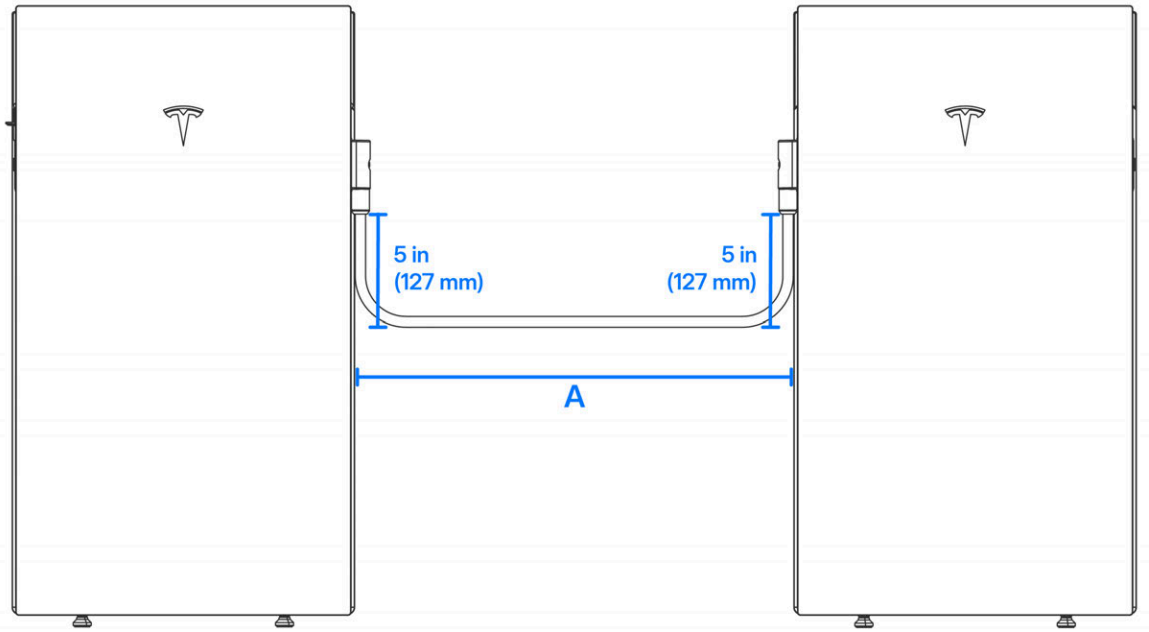

> **NOTE:** As displayed in this diagram, the Expansion Harness can be plugged into the Expansion port (on Expansion or Powerwall 3P) on either side of the unit.


   c. Use the table below to determine which Expansion Harness to use (must be equal to or longer than the *Maximum Distance Between Units* calculated above)

Table 15. Expansion Harness to Use Depending on Distance Between Units

Expansion Harness Part Number	(A) Maximum Distance Between Units, Accounting for Bend Radius
Tesla P/N 1875157-**05**-y	0.25 m
Tesla P/N 1875157-**20**-y	1.75 m
Tesla P/N 1875157-**40**-y	3.75 m


> **NOTE:** The Expansion Harness connector can only be oriented with the cable at the bottom of the connector. **Do not attempt to plug the connector in upside down**.



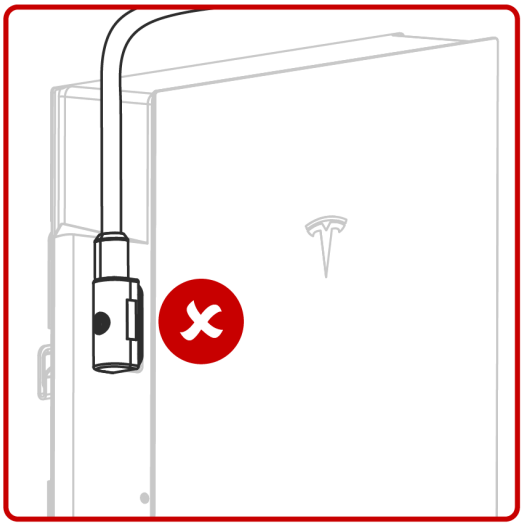

WARNING: Do not modify the Expansion Harness in any way. Doing so would result in product damage that could void the product warranty.


3. Safely shut the system down:
   a. Turn the Powerwall 3P switch OFF to shut the system down, then turn the integrated DC isolator OFF. See *Powerwall 3P Switch Locking Mechanisms on page 138* for instructions to lock the integrated DC isolator in the OFF position.

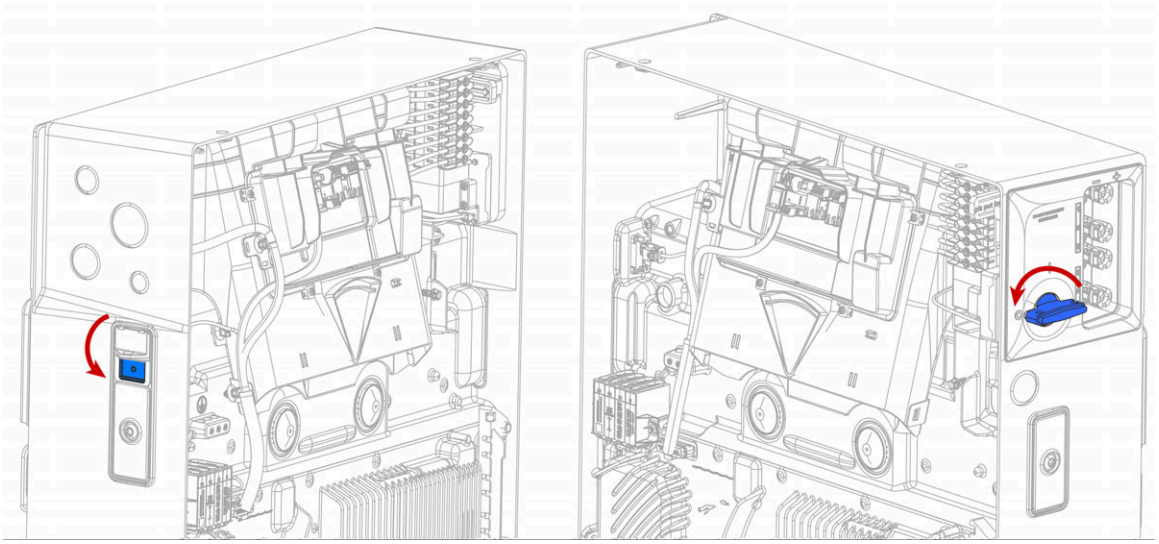

   b. Open the Powerwall 3P circuit breaker.
   c. Wait 30 seconds before proceeding with any work.


WARNING: Risk of electric shock from stored energy. Wait 30 seconds after disconnecting all sources of supply before proceeding.

4. To lift and transport the Expansion unit, follow all instructions in *STEP 2: Remove Powerwall 3P from Packaging and Transport Using the Powerwall Dolly on page 49* to use the Powerwall dolly, noting where the two lift handles are connected on the Expansion (**X**):

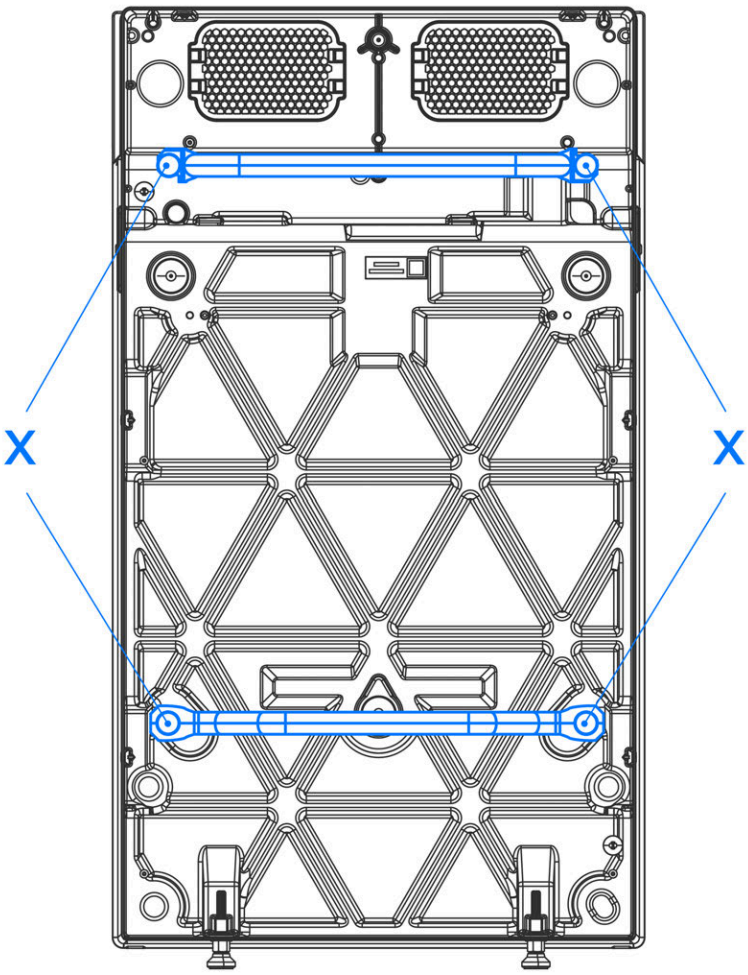


5. Using a drill and level, mount the Expansion unit bracket to the selected wall. See *Anchoring Details for Ground- or Wall-mounting Powerwall 3P with Wall Bracket on Existing Approved Foundation on page 117* for additional details on the type and number of fasteners to use.

Figure 60. Bracket Measurements Relative to Expansion Unit and Floor

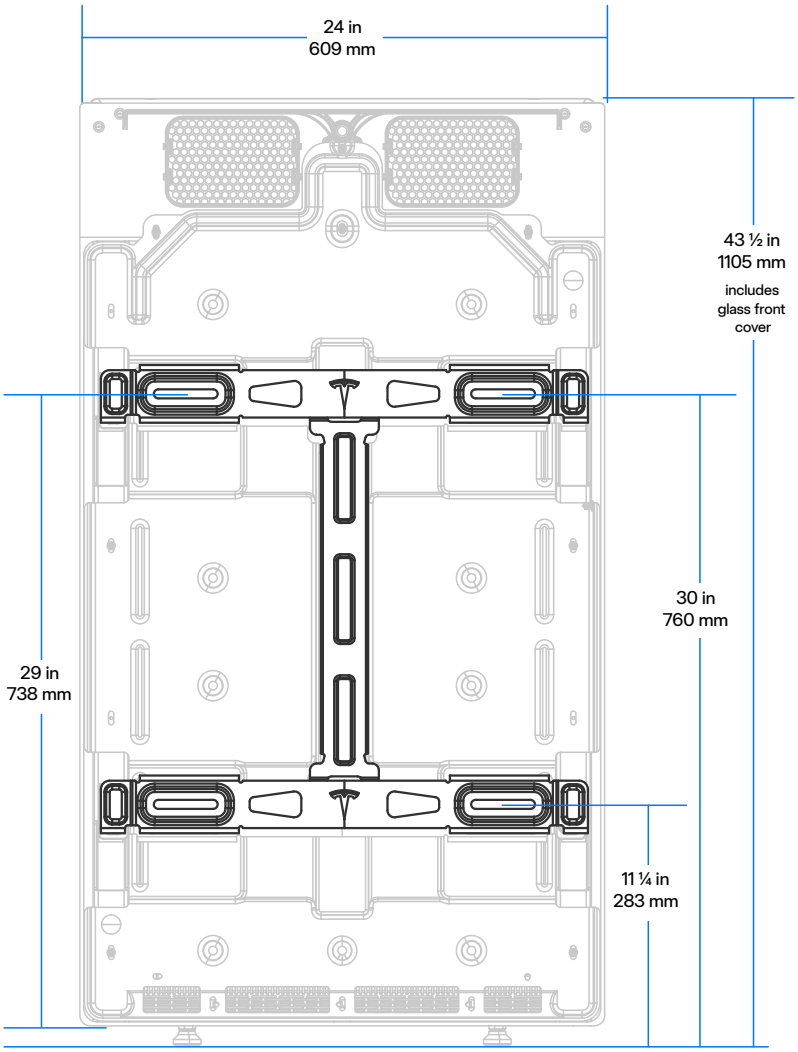


NOTE: These bracket measurements are the same for both Expansion and Powerwall 3P units.

WARNING: Only install fasteners in the (4) slots on the horizontal bracket segments, and **ensure they are installed on the outside edges of each slot**. Do not install fasteners on the vertical (center) segment, as these are not structural mounting holes.

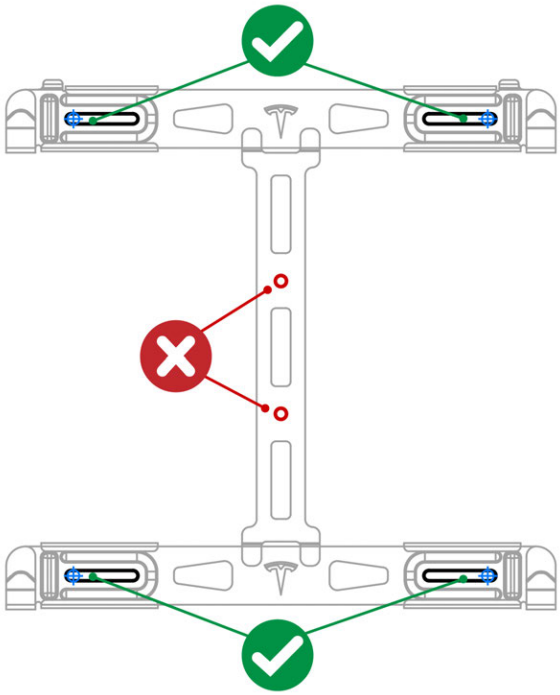


6. Move the dolly toward the wall, positioning the Expansion unit so that the mounting cleats are just above the flanges on the bracket.

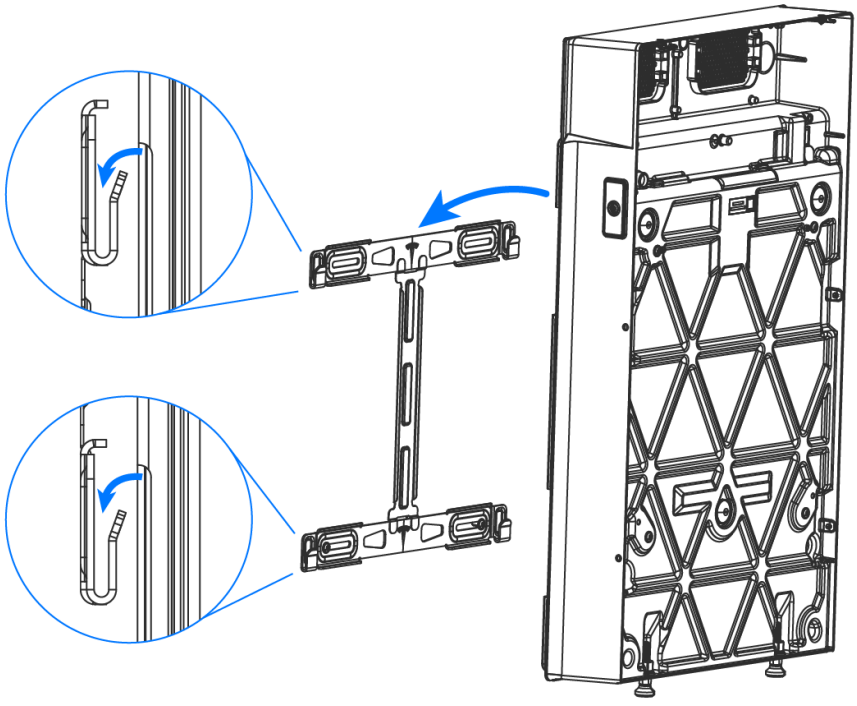


7. Lower the Expansion unit until:
    - The upper set of cleats is fully seated on the bracket flanges
    - The lower set of cleats is engaging the bracket flanges

> **NOTE:** Only the upper set of cleats will be fully seated; the lower cleats will still engage the bracket, but there will be a small gap between the lower cleats and the bottom edge of the bracket.

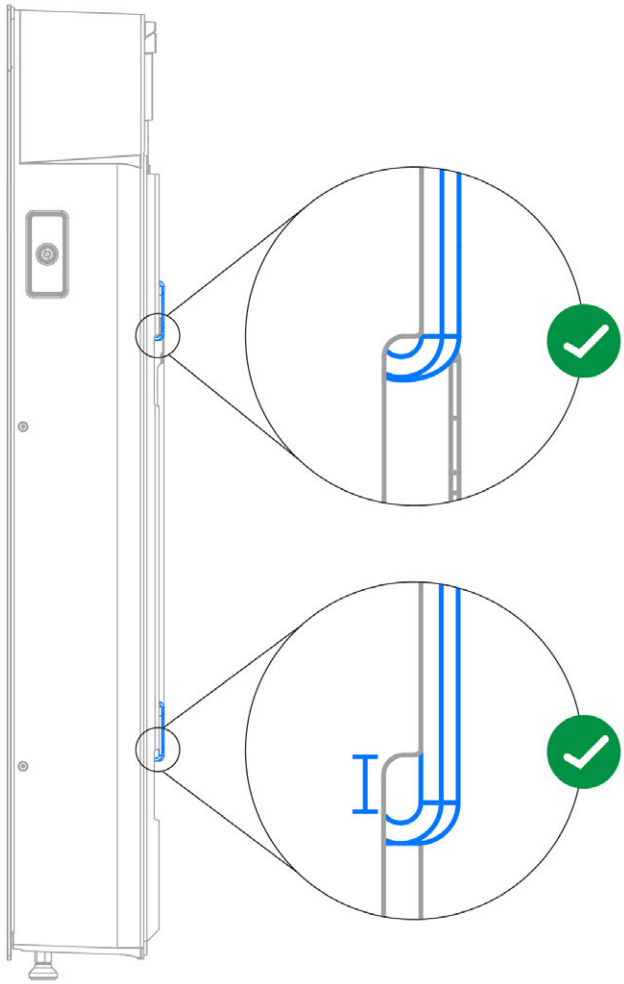


NOTE: The mounting bracket shims included in the Expansion stacking kit are not used for the unit mounted directly to the wall. The shims are only required to secure the bracket when it is being mounted to the front of an Expansion unit.

8. Clean the front edge of the Expansion unit enclosure with a microfiber cloth to remove any debris that might interfere with the seal.
9. Carefully remove the glass front cover from its packaging and, using a microfiber cloth, clean the sealing gasket **(1)** around the edge of the front cover and the front edge of the enclosure **(2)** to remove any debris that might interfere with the seal.

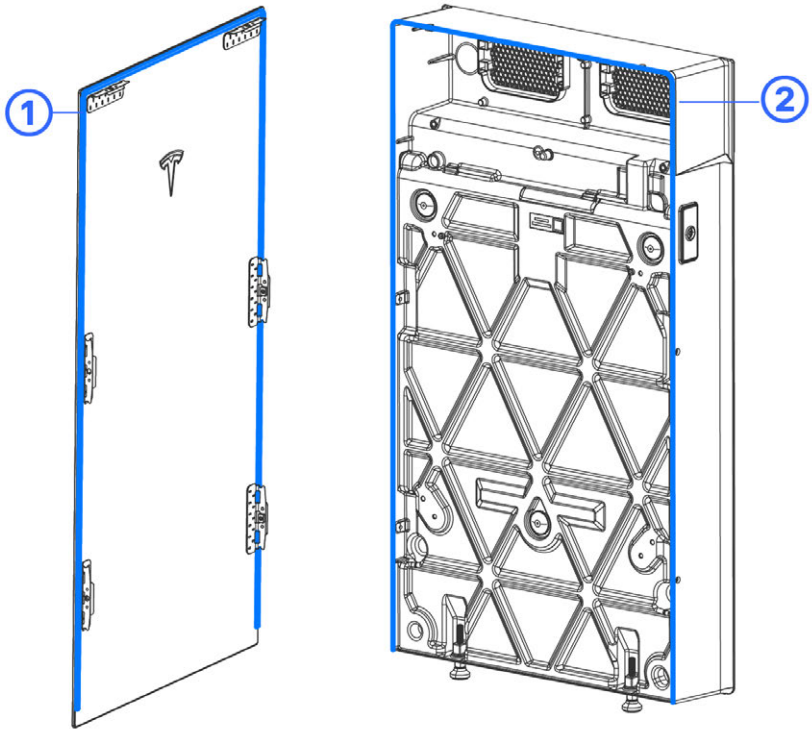

CAUTION: Take extreme care when handling the sealing gasket. Damage to or contamination of the gasket or its mating surface could compromise Powerwall's ingress protection, resulting in product damage.


10. Carefully install the glass front cover:
    a. Align the lower mounting tabs with the two alignment shelves in the enclosure (**A**).
    b. Rotate the front cover toward the enclosure to engage the top mounting tabs with the enclosure (**B**). Maintain pressure (approximately 2 Nm) on the front of the cover to compress the sealing gasket.

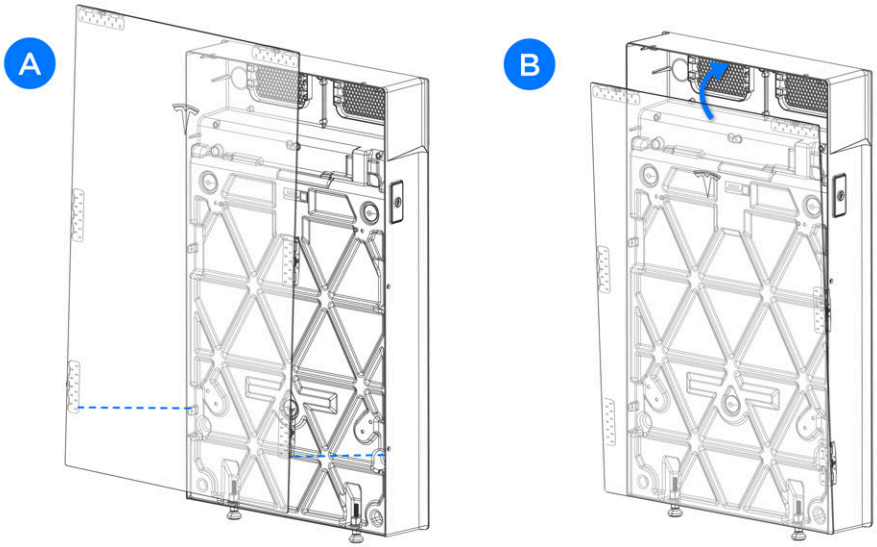

CAUTION: Maintain pressure to keep the sealing gasket compressed until all fasteners are installed and tightened. If the sealing gasket is not compressed, the fasteners may thread form in the enclosure, breaking the front cover mounting tabs.

c. Install and tighten the top (2) T20 fasteners in the fastener slots.

d. Install the remaining (4) T20 fasteners in the side fastener slots.

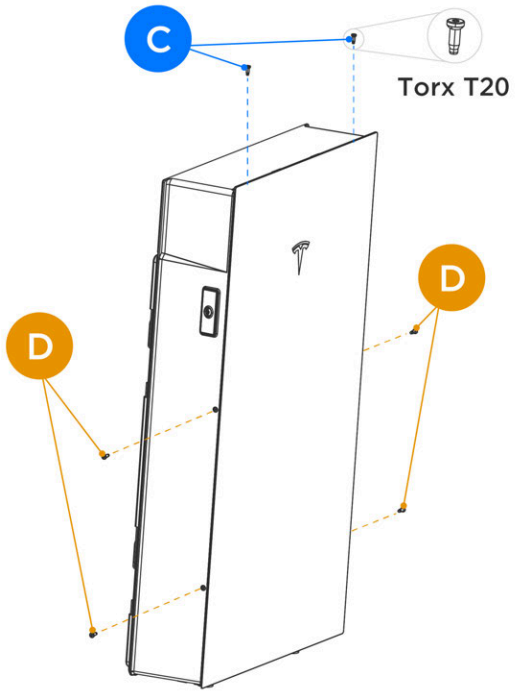

e. Tighten all (6) fasteners to approximately 2.8 Nm.

> **CAUTION:** Do not use an impact driver to torque the fasteners.

> **CAUTION:** If the fasteners are not tightened, water may enter the unit, leading to equipment damage.

11. **Before** removing the Expansion Harness protective packaging, mock up the cable routing by holding the Expansion Harness against the wall, confirming each connector reaches its Expansion port. If either or both connectors do not reach the Expansion port, use a longer Expansion Harness.
12. Connect the Expansion unit to the Powerwall 3P (or to another Expansion unit):
    a. Using a Torx T40 bit, loosen the fastener holding the Expansion port cover.

WARNING: STOP. Before opening Expansion port covers:


- During installation, do not open the Expansion Port cover if Expansion / Powerwall 3P is **directly exposed** to any of the following conditions:
  - Rain
  - Snow
  - High winds (>48 kph)



- Do not leave the Expansion Port open for extended periods or in high debris/dust conditions

Doing so may allow water and/or debris to contact the sensitive internal components. This may lead to product damage and could potentially void the product warranty.

b. Insert a small slotted screwdriver in the small slots at the top and bottom of the port cover to pry it loose. Remove the cover.

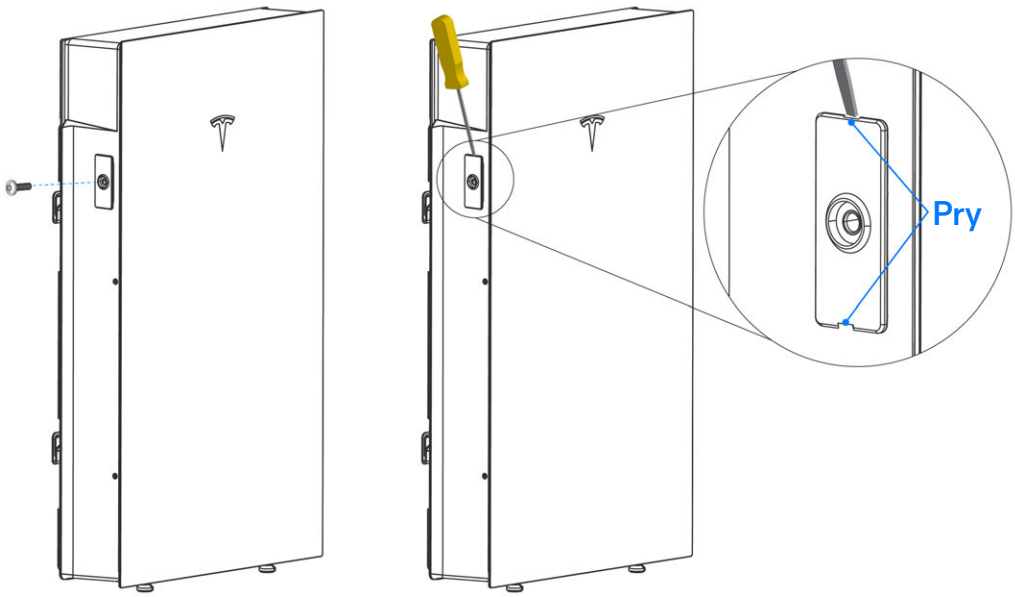

NOTE: When the Expansion port cover bolt is loosened, depending on site conditions such as elevation, it is normal to hear a hissing sound until the air pressure has equalized.

NOTE: Keep the Expansion port cover in case the Expansion port needs to be covered again for any reason. Store the cover in the protective packaging from the harness to keep it clean.


NOTE: If replacing the Expansion port cover, torque the port cover screw to 11 Nm.

c. Visually inspect the Expansion port and confirm there is no debris in the port.


d. Remove the protective packaging from the end of the Expansion Harness being plugged in.

e. Visually inspect the Expansion Harness connector and confirm there is no dirt or debris on the connector. If there is dirt / debris on the connector:
   - Clean the dirt / debris from the connector
   - If it is not possible to adequately clean the connector, recycle the Expansion Harness and use a new one


f. Plug one end of the Expansion Harness into the Expansion unit. Ensure the connector is fully seated in its port; it will be possible to confirm the connector is fully seated when there is no gasket exposed.

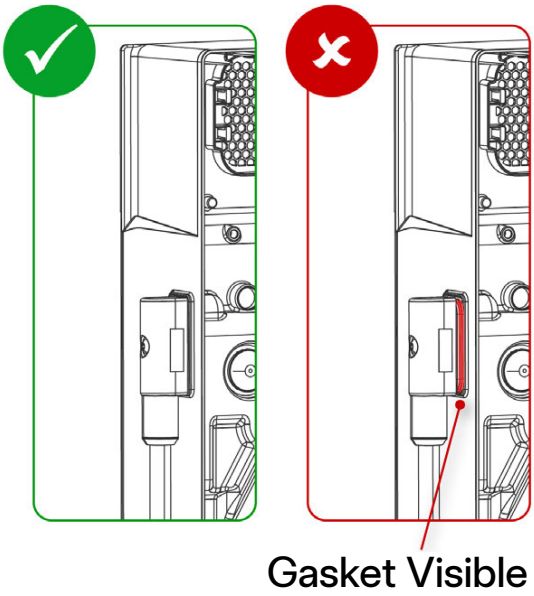

g. Torque the T40 harness screw on the connector to 11 Nm.

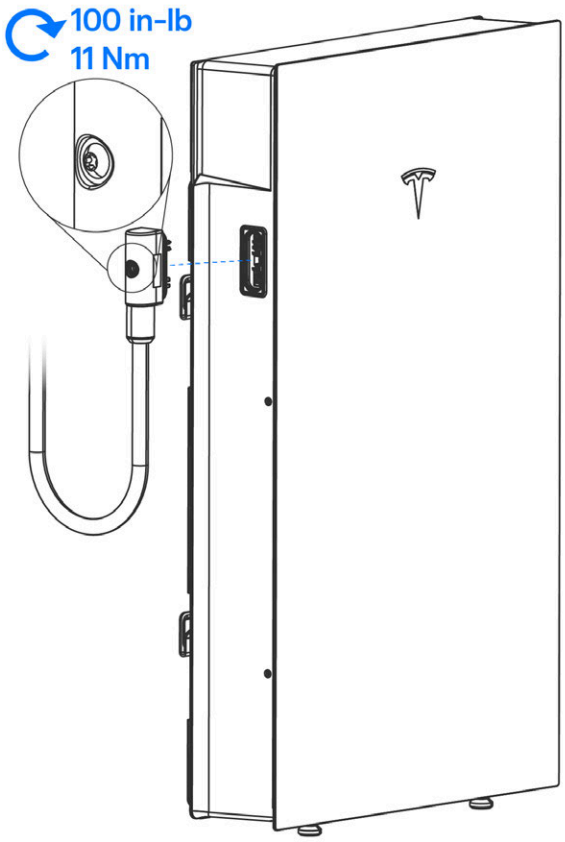


13. Plan the Expansion Harness cable routing, noting the following:
    - The minimum bend radius of the cable is 95 mm. Bending the cable to a lesser radius may result in damage to the Expansion Harness

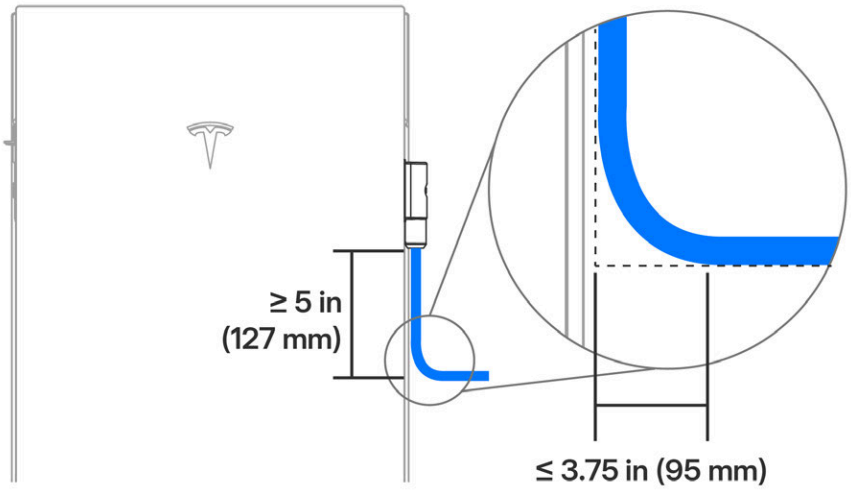


    - When a long Expansion Harness must be used, route and secure the cable so that there is no slack; the following examples illustrate some of the ways cable slack can be consumed (note the Bridgeport US-6171 straps (Tesla P/N 1730711-xx-y) represented in black):


APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

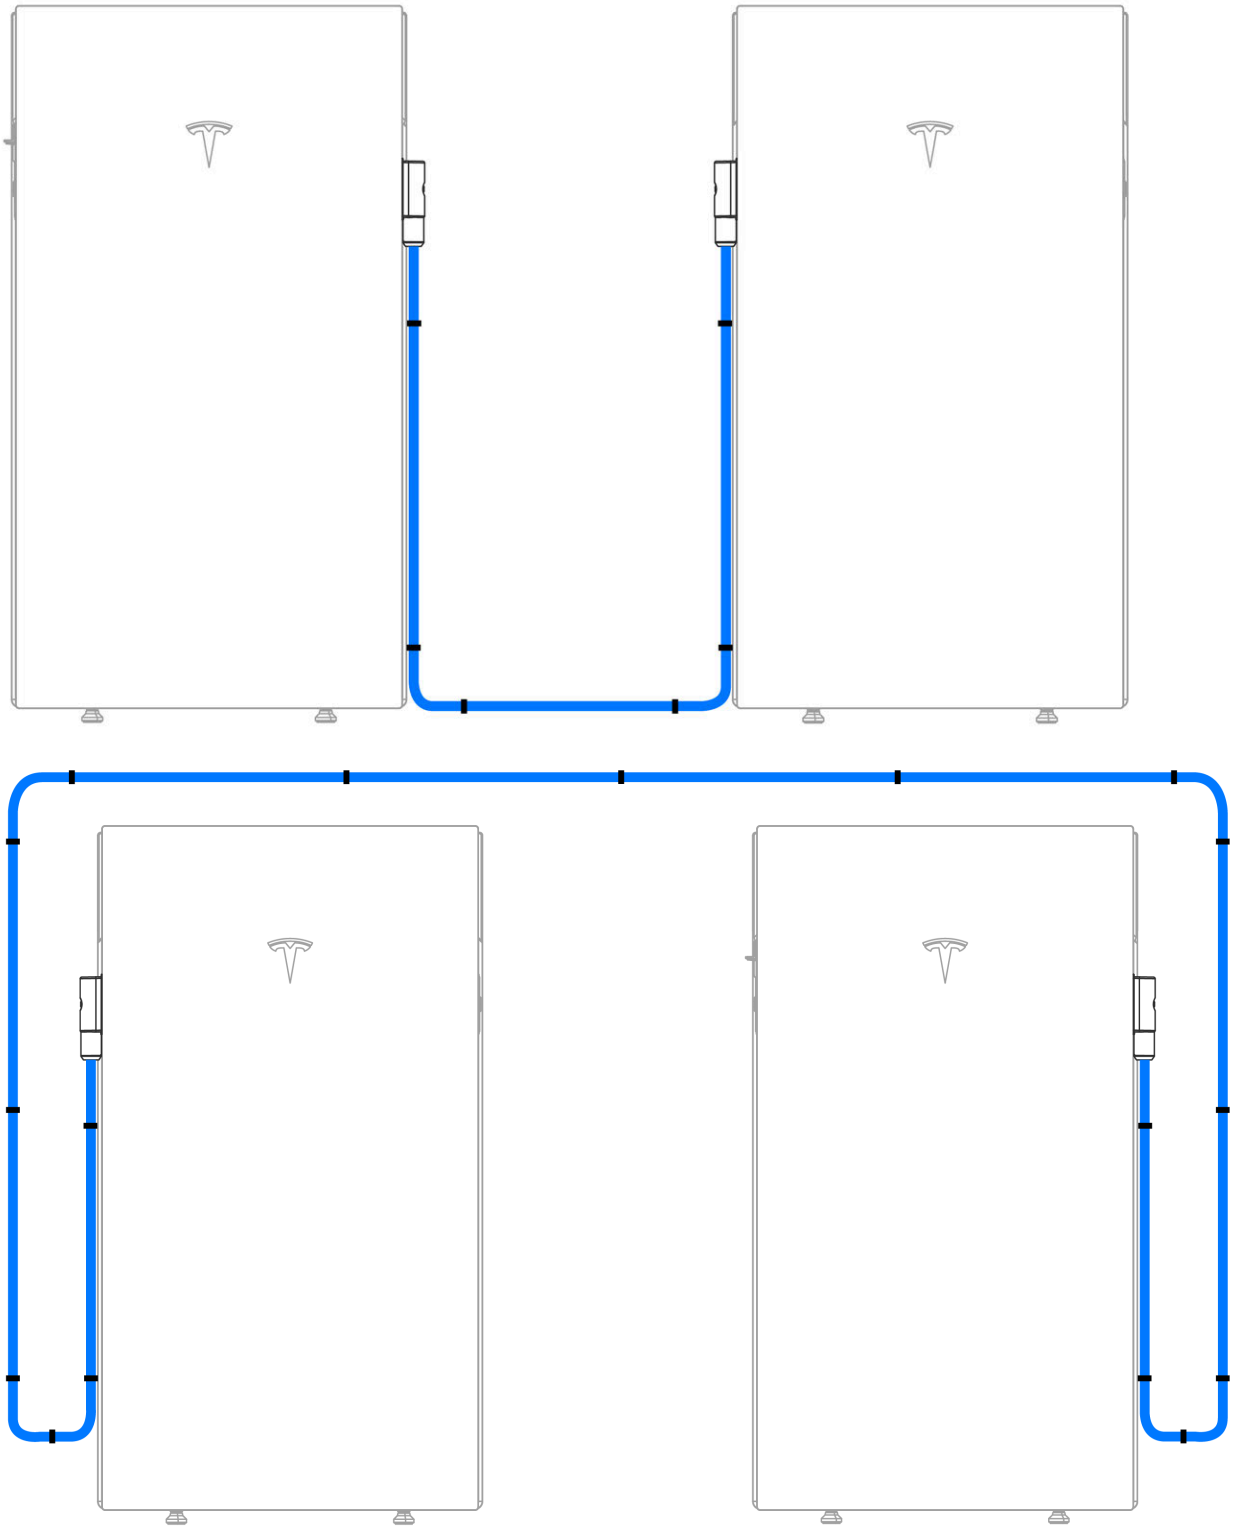

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS

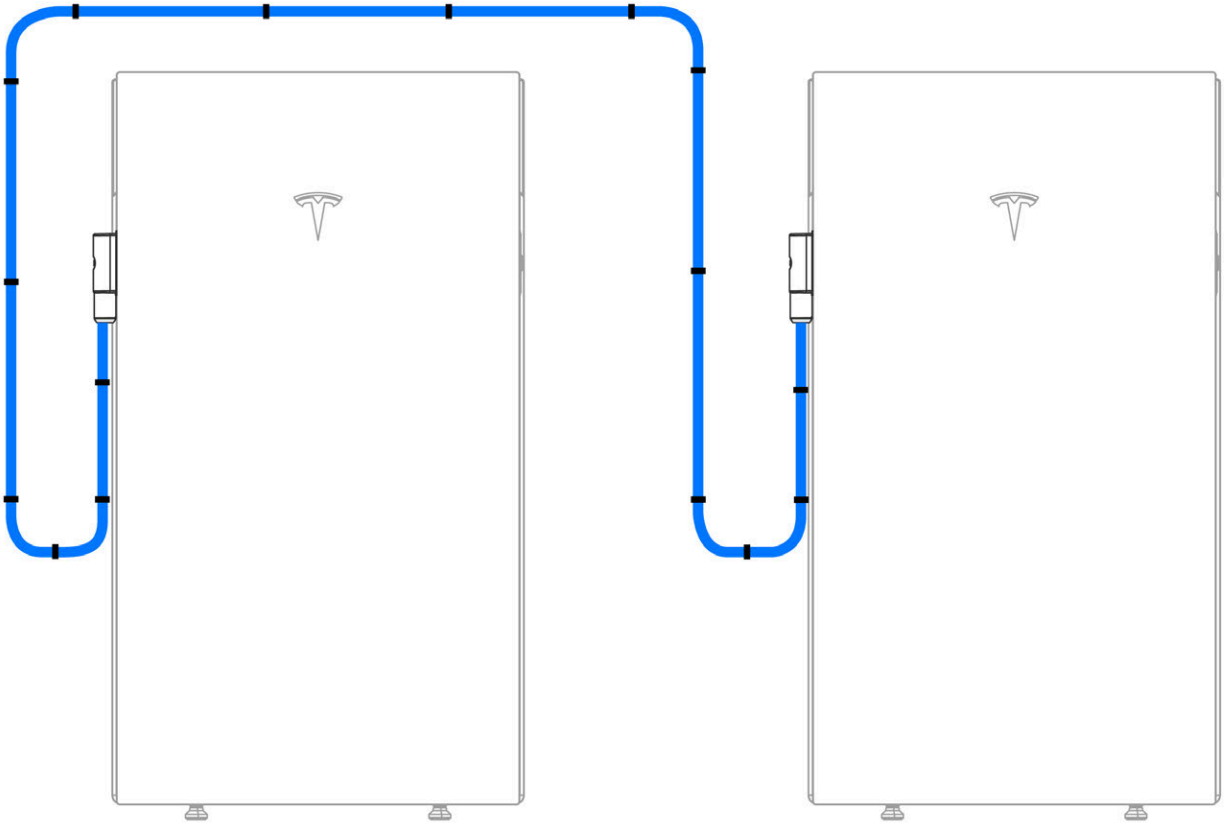



NOTE: Route and strap the Expansion Harness so that it forms right angles and generally looks as neat as possible. The installation depicted in the following diagram is not incorrect, but improving the Harness routing would result in an overall more aesthetically pleasing installation.

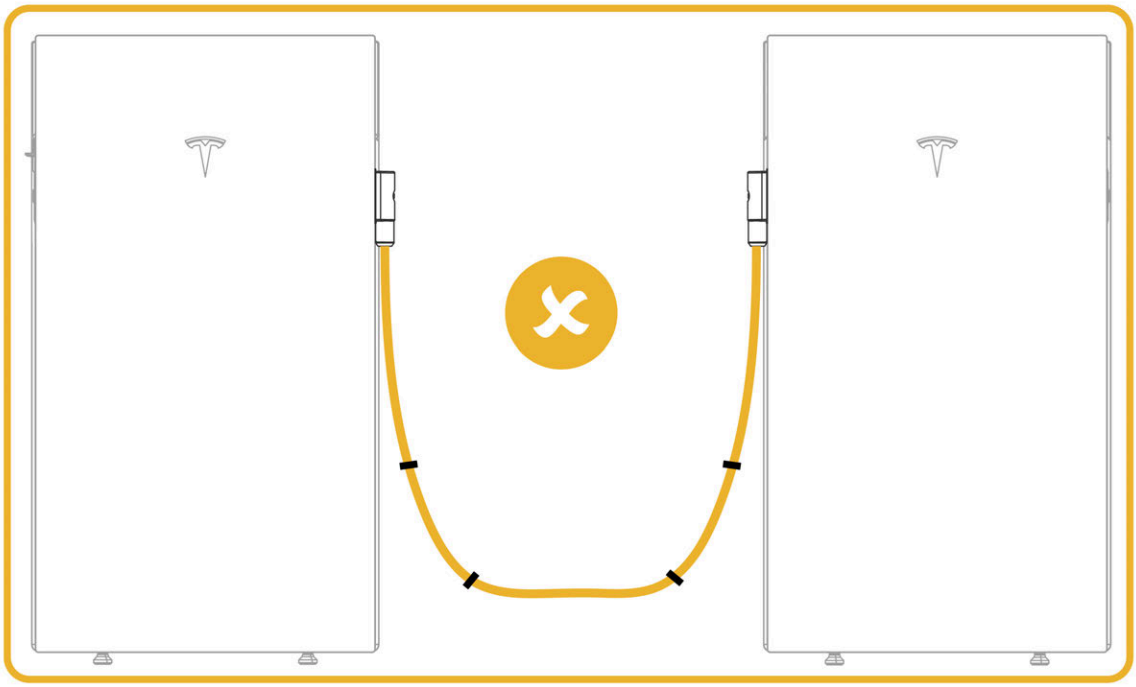

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS


NOTE: When Expansion units are mounted 0.25 m or less from each other and it is possible to use the 0.5 m Harness to connect them, a strap can be used to secure the Harness to the wall, but it is not required. If securing with a strap, ensure the Harness is not bent to a radius less than 95 mm as noted above.

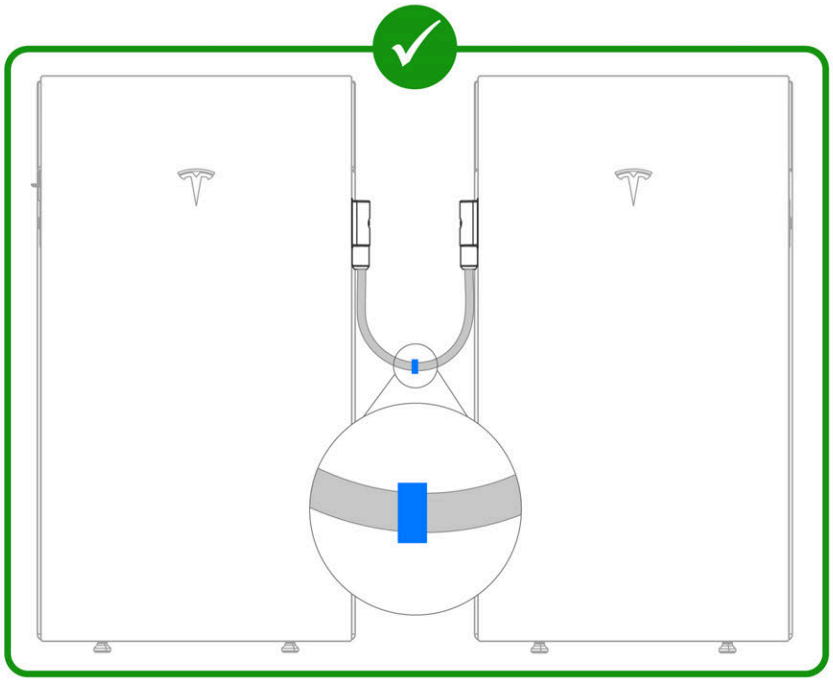

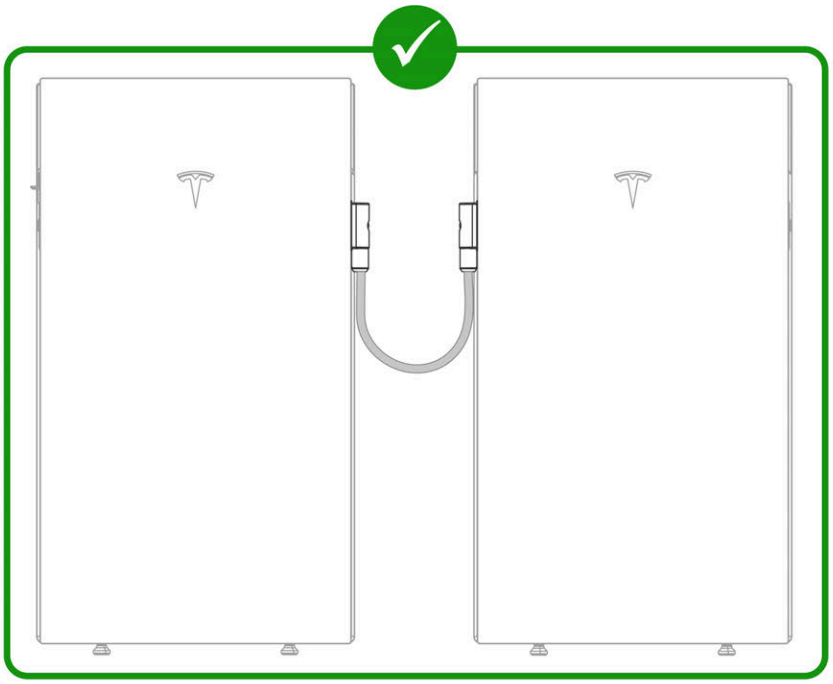

APPENDIX E: INSTALLING MULTIPLE POWERWALL 3P UNITS AND/OR EXPANSION UNITS


- Each unit (Powerwall 3P or Expansion) must only be connected to another unit via one harness. **Do not connect two units using two separate harnesses**

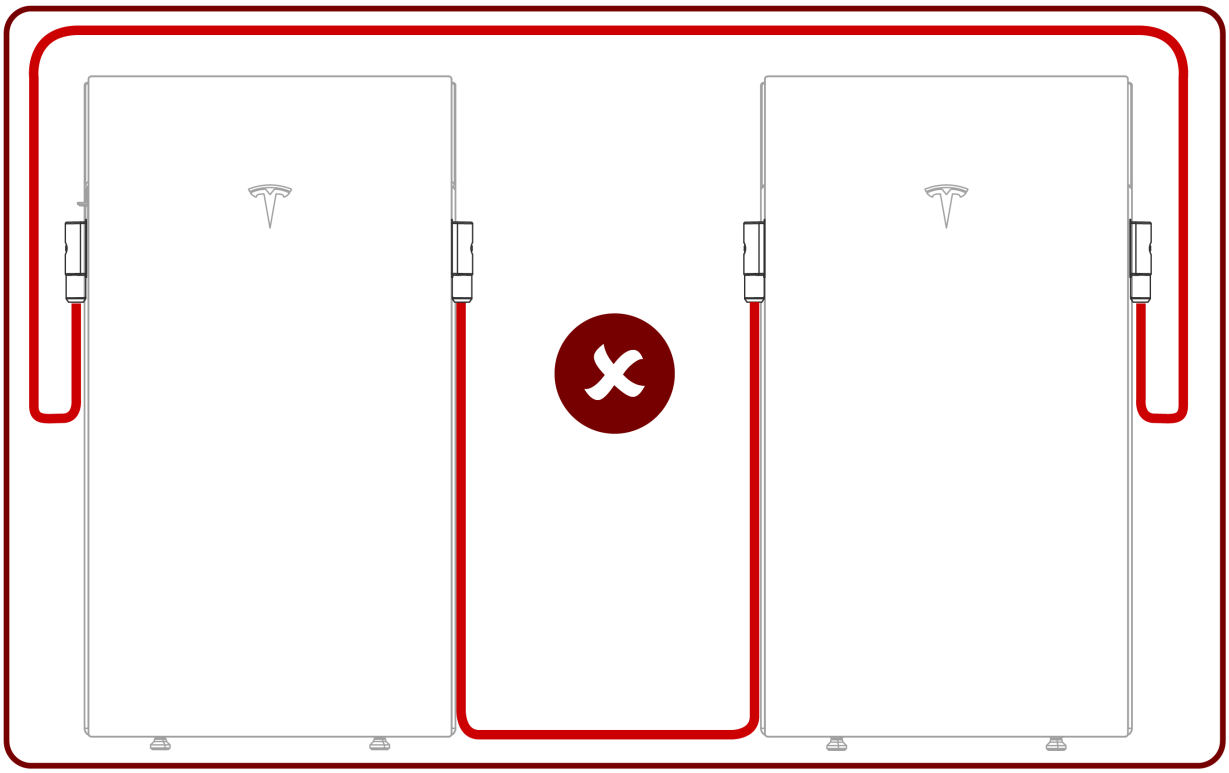

14. Secure the Expansion Harness cable using Bridgeport US-6171 straps (Tesla P/N 1730711-xx-y), noting the following requirements for strap placement:

Strap Placement	Maximum Distance	Measurement Color in Diagram
Each end of Expansion Harness	483 mm from connector	Red
Horizontal Run	610 mm between straps	Purple
Vertical Run	915 mm between straps	Green
Inside or Outside Corner	305 mm from corner (recommended but not required)	Orange


Figure 61. Maximum Distance Between Expansion Harness Cable Straps

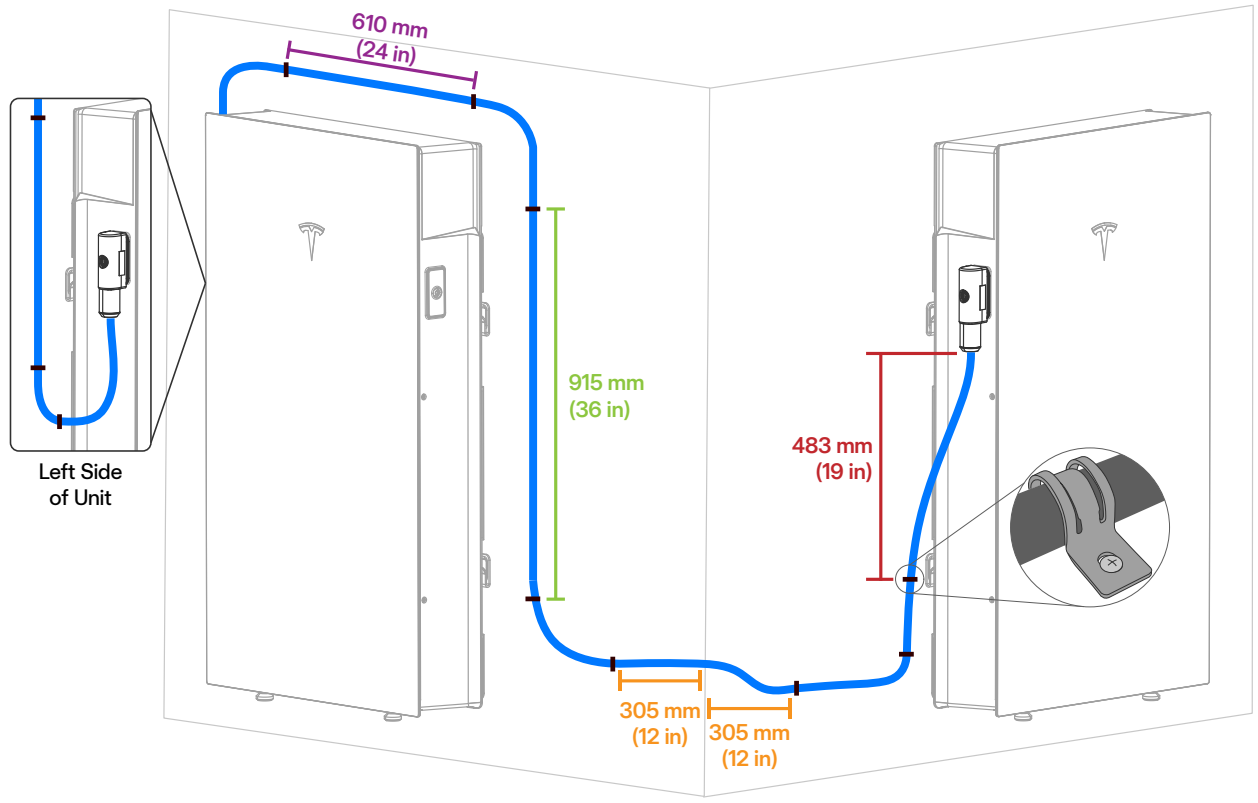


NOTE: Keep the Expansion Harness cable flat and as close to the wall as possible when routing it.

NOTE: When routing around an outside corner, the Expansion Harness cable may need to be routed with an offset to ensure the cable stays flat and as close as possible to the surface of the wall.

15. Plug the remaining Expansion Harness connector into the other Expansion or Powerwall 3P. Ensure the connector is fully seated in its port; it will be possible to confirm the connector is fully seated when there is no gasket exposed.

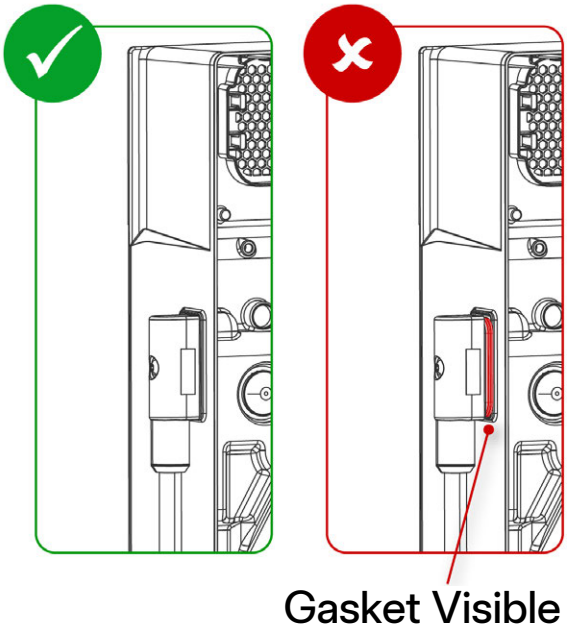

16. Torque the T40 harness screw on the connector to 11 Nm.

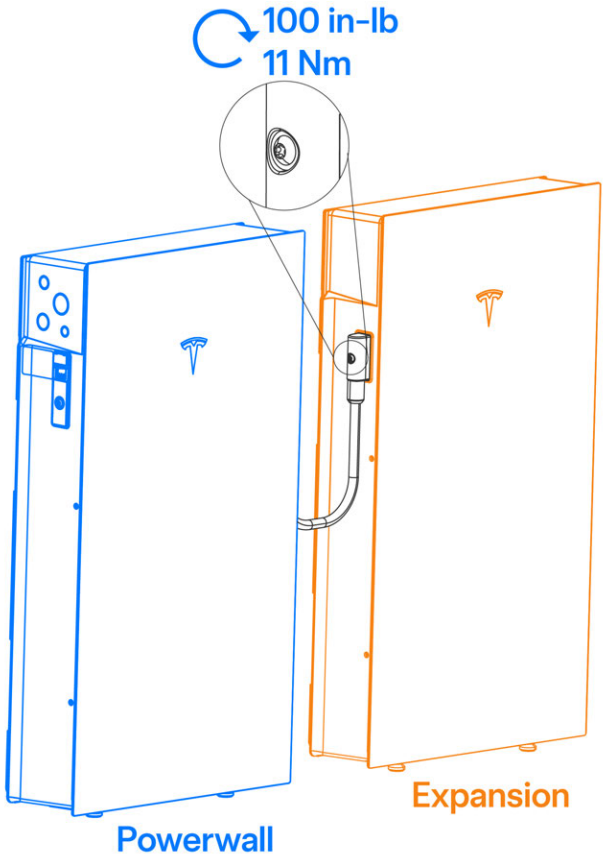

APPENDIX F: SHUTTING DOWN POWERWALL 3P

Powerwall 3P system shutdown for emergency response or maintenance requires system shutdown and disabling solar output.

CAUTION: Open all third party solar inverter breakers or handled disconnects before shutting down the Powerwall 3P system.

Safely Shut Down Powerwall 3P for Maintenance or Service

1. Turn the Powerwall 3P On/Off switch OFF.

   NOTE: Powerwall 3P Expansion units are connected to Powerwall 3P via a factory-made harness. They are not connected to a breaker and they do not have an on/off switch; when Powerwall 3P is turned off, any Expansion units will automatically shut down.

2. Turn the Powerwall 3P integrated DC isolator switch OFF.
3. Open the Powerwall 3P AC circuit breaker.
4. Wait 30 seconds before proceeding with any work.

   WARNING: Risk of electric shock from stored energy. Wait 30 seconds after disconnecting all sources of supply before proceeding.

5. Use a lock-out device on the disconnecting means listed in the table below whenever performing work on equipment that is not within sight of the switch.

Disabling Solar, System Shutdown, and Disconnecting Means for Powerwall 3P

Action	Powerwall 3P			
	On/Off Switch	Integrated DC Isolator	External DC Isolator	AC Breaker / Isolator
Disables Expansion Units	Yes	No	No	No
Disables DC-coupled Solar	Yes	No	Yes	No
Disables AC-coupled Solar	No	No	No	Yes
Disables AC Inverter (Input and Output)	Yes	Yes	No	No
Isolates DC side for maintenance	No	No	Yes	Yes
Isolates AC side for maintenance	No	Yes	No	No

APPENDIX G: TROUBLESHOOTING

Situations in Which Powerwall 3P Stops Grid Forming

Some situations in which the Powerwall will not be allowed to grid-form are:

- The Powerwall 3P **On/Off switch is switched OFF**.
- An **open circuit** between any Powerwall and the Backup Gateway. *Example: an open Powerwall AC breaker*.
- **Excessive voltage drop** between any Powerwall and Backup Gateway. *Example: excessive wire length or undersized wires*.
- **Loss of communications** between any internal system or meter (Example: loss of communication with Backup Gateway 2).

Earthing

When operating off-grid, the Backup Gateway 2 forms a local **TN-S supply** to the connected distribution board(s):

- *Relationship of power system to earth*: **T** – Direct connection of one point to Earth – this is provided by the local earth, connected into the main earthing terminal
- *Relationship of the exposed conductive parts to Earth*: **N** – Direct connection to the earthed point (neutral) of the power supply system - this is facilitated by the local N-PE bond created within the Gateway during off-grid operation
- *Arrangement of neutral and protective conductors*: **S** - Separate conductors - separate neutral and protective conductors are connected between the Gateway and downstream distribution board(s)

Proper earth connection and Neutral-to-Earth (N-PE) bonding during on-grid and off-grid operation is required for safe operation of the Powerwall system and for compliance with local code requirements. For instruction regarding the switched earth connection, refer to *Verify Neutral-Earth Bonding Scheme on page 62*.

WARNING: To ensure safe operation when operating off-grid, **a local earth must be present on the site**, such as by earth rod or ground electrode. During a grid fault, it cannot be assumed that the DNO's Earth or PEN conductors are intact. Installation of earth rod must comply with local codes.

APPENDIX H: REGIONAL GRID CODE SETTINGS

NOTE: The system cannot be commissioned without selecting a Grid Code Region.

NOTE: Each selected region corresponds to the following grid-related feature settings.

NOTE: For adjustments to the setpoints that differ from those defined for Region A/B/C, please contact Tesla.

Voltage and Frequency Trip Settings

Table 16. Passive Anti-Islanding Voltage Limit Values

Protective Function	Protective Function Limit	Trip Delay Time	Maximum Disconnection Time
Undervoltage 2(V< <)	70 V	1 s	2 s
Undervoltage 1 (V<)	180 V	10 s	11 s
Overvoltage 1 (V>)	265 V	1 s	2 s
Overvoltage 2 (V> >)	275 V	-	0.2 s

Table 17. Passive Anti-Islanding Frequency Limit Values

	Region	Australia A	Australia B	Australia C	New Zealand
Under-frequency 1 (F<)	Protective function limit value	47 Hz	47 Hz	45 Hz	45 Hz
	Trip delay time	1 s	1 s	5 s	1 s
	Maximum disconnection time	2 s	2 s	6 s	2 s
Over-frequency 1 (F>)	Protective function limit value	52 Hz	52 Hz	55 Hz	55 Hz
	Trip delay time	-	-	-	-
	Maximum disconnection time	0.2 s	0.2 s	0.2 s	0.2 s

Upper Connection and Reconnection Frequency (f_{URF})

Table 18. Upper Connection and Reconnection Frequency (f_{URF})

Region	f_{URF}
Australia A	50.15 Hz
Australia B	50.15 Hz
Australia C	50.50 Hz
New Zealand	50.15 Hz

V_{nom} Max Settings

Table 19. Settings for $V_{nom-max}$

Region	Default Setpoint
Australia A	258 V
Australia B	258 V
Australia C	258 V
New Zealand	249 V
Allowable range	244 V to 258 V

Volt-Watt - Charge Settings

Table 20. Volt-Watt Response Set-Point Values for Multiple Mode Inverters with Energy Storage when Charging

Region	Default Value	V_{W1-ch}	V_{W2-ch}
Australia A	Voltage	207 V	215 V
	$P_{charge}/P_{rated-ch}$	20%	100%
Australia B	Voltage	195 V	215 V
	$P_{charge}/P_{rated-ch}$	0%	100%
Australia C	Voltage	207 V	215 V
	$P_{charge}/P_{rated-ch}$	20%	100%
New Zealand	Voltage	216 V	224 V
	$P_{charge}/P_{rated-ch}$	20%	100%
Allowed Range	Voltage	180 to 230 V	180 to 230 V
	$P_{charge}/P_{rated-ch}$	0 to 20%	100%

NOTE: P_{charge} refers to power input level through the grid-interactive port.

NOTE: $P_{rated-ch}$ refers to the rated active power input through the grid-interactive port used for charging the energy storage.

Volt-Watt - Discharge Settings

Table 21. Volt-Watt Response Default Set-point Values

Region	Default Value	$V_{W1\text{-}ch}$	$V_{W2\text{-}ch}$
Australia A	Voltage	253 V	260 V
	Inverter maximum active power output level (P) % of S_{rated}	100%	20%
Australia B	Voltage	250 V	260 V
	Inverter maximum active power output level (P) % of S_{rated}	100%	20%
Australia C	Voltage	253 V	260 V
	Inverter maximum active power output level (P) % of S_{rated}	100%	20%
New Zealand	Voltage	242V	260 V
	Inverter maximum active power output level (P) % of S_{rated}	100%	20%
Allowed Range	Voltage	235 to 255 V	240 to 265 V
	Inverter maximum active power output level (P) % of S_{rated}	100%	0 to 20%

NOTE: Australia C parameter set is intended for application in isolated or remote power systems.

Volt-Var Settings

Table 22. Volt-Var Response Set-point Values

Region	Default Value	V_{V1}	V_{V2}	V_{V3}	V_{V4}
Australia A	Voltage	207 V	220 V	240 V	258 V
	Inverter reactive power level (Q) % of S_{rated}	44 % supplying	0 %	0 %	60 % absorbing
Australia B	Voltage	205 V	220 V	235 V	255 V
	Inverter reactive power level (Q) % of S_{rated}	30 % supplying	0 %	0 %	40 % absorbing
Australia C	Voltage	215 V	230 V	240 V	255 V
	Inverter reactive power level (Q) % of S_{rated}	44 % supplying	0 %	0 %	60 % absorbing
New Zealand	Voltage	207 V	220 V	235 V	244 V
	Inverter reactive power level (Q) % of S_{rated}	60 % supplying	0 %	0 %	60 % absorbing
Allowed Range	Voltage	180 to 230 V	180 to 230 V	230 to 265 V	230 to 265 V
	Inverter reactive power level (Q) % of S_{rated}	30 to 60 % supplying	0 %	0 %	30 to 60 % supplying

NOTE: Inverters may operate at a reactive power level with a range up to 100% supplying or absorbing.

NOTE: Australia C parameter set is intended for application in isolated or remote power systems.

Frequency-Watt Settings

Table 23. Frequency Variation Withstand Limits

Inverter Response	Decrease in Frequency Response Lower Limit (Hz)	Lower Limit of Continuous Operation Range (f_{LLCO}) (Hz)	Upper Limit of Continuous Operation Range (f_{ULCO}) (Hz)	Increase in Frequency Response Upper Limit (Hz)
Range	-	49.5 - 49.9	50.1 - 50.5	-
Australia A	47	49.75	50.25	52
Australia B	47	49.85	50.15	52
Australia C	45	49.5	50.5	55
New Zealand	45	49.8	50.2	55

Table 24. Frequency Response Limits

Inverter Response	Decrease in Frequency Response Limits[1]		Increase in Frequency Response Limits[2]	
	Frequency where power output level is maximum (f_{Pmax}) (Hz)	Frequency where charging power level is zero ($f_{stop-ch}$) (Hz)	Frequency where discharging power level is zero ($f_{transition}$) (Hz)	Frequency where power level is minimum (f_{Pmin}) (Hz)
Range	47 to 49	48 to 49.5	50.5 to 52	52 to 53
Australia A	48	49	50.75	52
Australia B	48	49	50.75	52
Australia C	47	48.25	51.75	53
New Zealand	48	49	51	52

NOTE: This refers to multiple mode inverters with energy storage.

[1] For decrease in frequency response refer to Clause 4.5.3.2.

[2] For increase in frequency response refer to Clause 4.5.3.3.

APPENDIX I: REVISION HISTORY

Revision	Date	Description
1.1	September 25, 2026	• Added knockout expansion size note to *Choose Powerwall Cable Entry on page 46* • Updated *Install the Tesla Remote Meter and CTs on page 94* with instruction to connect RS-485 ground wire if included • Updated *Install Expansion Units with Powerwall 3P on page 150* with note emphasizing that routing the Expansion Harness through a wall or partition is prohibited • Added *Optional: Rear Wire Entry for Stacked Configuration on page 176*
1.0	September 1, 2026	Initial publication